

## CLIMATE CONTROL/AIR CONDITIONER

DISPLAY (ITEM)	DEFAULT	CONTENTS	SETTING
SET TEMP SHIFT (Set Temperature Shift)	NORMAL	To control with the shifted temperature against the display temperature	+2 C / +1 C / NORMAL / -1 C / -2 C
AIR INLET MODE (Air Inlet Mode)	AUTO	In case of turning the A/C ON when you desire to make the compartment cool down quickly, this is the function to change the mode automatically to RECIRCULATION mode	MANUAL / AUTO
COMPRESSOR MODE (Compressor Mode)	AUTO	Function to turn the A/C ON automatically by pressing the AUTO button when the blower is ON and the A/C is OFF	MANUAL / AUTO
COMPRS / DEF OPER (Compressor / Air Inlet DEF Operation)	LINK	Function to turn the A/C ON automatically linked with the FRONT DEF button when A/C OFF	NORMAL / LINK
EVAP CTRL (Evaporator Control)	AUTO	Function to set the evaporator control to the AUTOMATIC position (AUTO) to save power, or to the coldest position (MANUAL) to dehumidify the air and to prevent the windows from fogging up	MANUAL / AUTO
GAS SENS SHIFT* (Emission Gas Sensor Shift)	NORMAL	Function to change the sensitivity of the exhaust gas sensor	MU MORE / MORE / LI MORE / NORMAL / LI LESS / LESS / MU LESS
BUTTON PRS BUZ (Button press buzzer)	ON	Function to sound a buzzer when button is pressed	OFF / ON
FOOT / DEF MODE (Foot / DEF auto mode)	ON	Function to turn the airflow from FOOT / DEF ON automatically when AUTO MODE is ON	OFF / ON
AUTO BLOW UP (Foot / DEF automatic blower up function)	ON	Function to change the blower level automatically when the defroster is ON	OFF / ON
AMBIENT TMP SFT (Ambient Temperature Shift)	NORMAL	Function to control the shifted ambient temperature in relation to the displayed ambient temperature	+3 C / +2 C / +1 C / NORMAL / -1 C / -2 C / -3 C
FOOT AIR LEAK (Foot air leak)	ON	Function to cut off the airstream felt underfoot while the vehicle is moving	OFF / ON

\*: For 2GR-FSE

**DOOR LOCK – SEE P. 20 & 21 IN US OWNER’S MANUAL FOR DETAILS**

DISPLAY (ITEM)	DEFAULT	CONTENTS	SETTING
<i>UNLOCK/PARK (Unlock w/ engine switch on (IG), shift P, speed 0 km/h (0 mph))</i>	<i>A/T : ON M/T : OFF (Cannot be changed)</i>	<i>Function that unlocks doors when the shift lever is moved to the P position from any other position while the engine switch is on (IG)</i>	<i>ON/OFF</i>
<i>ALL UNLK/OPN-CL (All unlock w/ D door open-close)</i>	<i>A/T : OFF M/T : ON</i>	<i>Function that unlocks all other doors when opening driver side door within 10 seconds after turning the engine switch off from on (IG)</i>	<i>ON/OFF</i>
<i>UNLK/KEY TWICE (Unlock w/ 2 times D key operation)</i>	<i>ON</i>	<i>Function that unlocks only the driver side door when the driver side door key cylinder is turned to unlock once and unlocks all the doors when it is turned to unlock twice In the OFF setting, turning it once unlocks all doors</i>	<i>ON/OFF</i>
<i>AUTO LOCK</i>	<i>A/T : OFF M/T : ON</i>	<i>Function that locks doors when vehicle speed reaches 20 km/h (13 mph)</i>	<i>ON/OFF</i>
<i>AUTO LOCK/SHIFT (Auto lock/shift not P)</i>	<i>A/T : ON M/T : OFF (Cannot be changed)</i>	<i>Function that locks doors when the shift lever is moved from the P position to any other position</i>	<i>ON/OFF</i>

**Wireless Door Lock Control System – Some of the following items can be customized without using intelligent tester, see owner’s manual page 400.**

DISPLAY (ITEM)	DEFAULT	CONTENTS	SETTING
OPEN DOOR WARN (Open door warning)	ON	If a door is not completely closed and LOCK is pressed, this function sounds a buzzer for 10 seconds.	ON / OFF
WIRELESS OPER (Wireless door lock control function)	ON	This function turns the wireless door lock function on or off.	ON / OFF
ALARM FUNCTION (Panic function)	ON	This function operates the theft deterrent system when PANIC is pressed and held for 0.8 seconds.	ON / OFF
<i>UNLOCK/2 OPER (Wireless unlock operated twice)</i>	<i>ON</i>	<i>This function unlocks the driver side door when UNLOCK is pressed once, and unlocks all doors when pressed twice. If set to OFF, pressing UNLOCK once unlocks all doors.</i>	<i>ON / OFF</i>
TRUNK LID OPER (Wireless luggage compartment door open function setting)	0.8 s PR	This function changes operation method of transmitter to open luggage compartment door. 1 TIME: Push 1 time 2 TIMES: Push 2 times (within 3 seconds) 0.8 s PR: Push longer than 0.8 seconds OFF: Does not operate	1 TIME / 2 TIMES / 0.8 s PR / OFF

AUTO LOCK DELAY (Auto lock time)	30 s	This function controls the amount of time from unlocking doors to automatic re-locking.	30 s / 60 s
HAZARD ANS BACK (Hazard answer-back for wireless door lock operation)	ON	When LOCK is pressed, all hazard warning lights flash once. When UNLOCK is pressed, all hazard warning lights flash twice.	ON / OFF
WIRLS BUZZ RESP (Buzzer answer-back of Wireless)	ON	This function makes the wireless door lock buzzer sound for answer-back when LOCK/UNLOCK is pressed.	ON / OFF

**ILLUMINATED ENTRY:**

DISPLAY (ITEM)	DEFAULT	CONTENTS	SETTING
SHIFT LIGHT CTL	AVAIL	Lights up the shift illumination when the engine switch is turned on (ACC or IG).	NOT AVAIL / AVAIL
LIGHTING TIME	15s	Changes the lighting time of the seat illumination.	7.5 s / 15 s / 30 s
ILLUMI SYSTEM	ON	Lights up the footwell lights when one of the following occurs: the engine switch is turned on (IG), or any door is unlocked or opened.	ON / OFF
LIGHT CONTROL	ON	Dims (ON setting) or turns off (OFF setting) the footwell lights under the following conditions: A/T models: engine switch on (IG), shift lever not in P, and all doors closed. M/T models: engine switch on (IG), parking lever released, and all doors closed, or engine switch on (IG), vehicle speed above 5 km/h (3 mph), and all doors closed.	ON / OFF
I/L ON/UNLOCK	ON	Lights up the seat illumination when the doors are unlocked with the transmitter.	ON / OFF
I/L ON/ACC OFF	ON	Lights up the seat illumination when the engine switch is turned off.	ON / OFF
EX LIGHT TIME	15 s	Changes the lighting time of the door mirror foot lights.	15 s / 7.5 s /30 s
EX FOOT LIGHT	AVAIL	Lights up the door mirror foot lights when either of the following occurs: the doors are unlocked with the transmitter, or the key enters any actuation area around the doors.	NOT AVL / AVAIL

**LIGHT CONTROL:**

DISPLAY (ITEM)	DEFAULT	CONTENTS	SETTING
LIGHT OFF DELAY	30s	Keeps the headlights on for a certain period of time after turning the engine switch off and closing all the doors with the headlights on.	OFF / 30 s / 60 s / 90 s
SENSITIVITY	NORMAL	Adjusts the sensitivity of the automatic light control system. *1	LIGHT 2 / LIGHT 1 / NORMAL / DARK 1 / DARK 2
DISP EX ON SEN	NORMAL	Changes the ambient brightness level to dim the lights such as the indicator lights of the combination meter, A/C indicator light, and clock. *1	LIGHT 2 / LIGHT 1 / NORMAL / DARK 1 / DARK 2
DISP EX OFF SEN	NORMAL	Changes the ambient brightness level to brighten the dimmed lights such as the indicator lights of the combination meter, A/C indicator light, and clock. *1	LIGHT 2 / LIGHT 1 / NORMAL / DARK 1 / DARK 2
DRL FUNCTION	ON	ON / OFF of the DRL function	ON / OFF

Ambient Brightness Level	Dark ←-----→Bright				
Setting	DARK2	DARK1	NORMAL	LIGHT1	LIGHT2

**METER:**

DISPLAY (ITEM)	DEFAULT	CONTENTS	SETTING
KEY REMND VOLUM	LOUD	Function to change the volume of the key remind warning buzzer	LOUD, MEDIUM, SOFT
KEY REMND SOUND	NORMAL	Function to change the cycle of the key remind warning buzzer	FAST, NORMAL, SLOW
UNITS BY REGION	ML/G (*1) KM/L (*2)	Function to change the unit of the trip information display	ML/G, ML/G, KM/L

\*1: U.S.A. \*2: Except U.S.A.

The following items can be customized without using intelligent tester; see your owner's manual for details.

DISPLAY (ITEM)	DEFAULT	CONTENTS	SETTING
<i>Seat belt warning buzzer</i>	<i>b-on</i>	<i>Function to change volume of key remind warning buzzer</i>	<i>b-on, b-oFF</i>
<i>Speed indicator (See owner's manual p. 107)</i>	<i>75 (mph) (*1) 120 (km/h) (*2)</i>	<i>Function to change the value that decides the speed indicator when to illuminate</i>	<i>30 to 100 (mph) (*1), 50 to 160 (km/h) (*2)</i>
<i>Tach indicator (See owner's manual p. 108")</i>	<i>5,000 (rpm)</i>	<i>Function to change the value that decides the tach indicator when to illuminate</i>	<i>2,000 to 6,500 (rpm)</i>

\*1: U.S.A. \*2: Except U.S.A.

## PARK ASSIST / MONITORING

### Warning

DISPLAY (ITEM)	DEFAULT	CONTENTS	SETTING
RR BUZ RANGE (Rear buzzer onset range)	Wide	Function to set rear buzzer activation range / NARROW or WIDE	NARROW: 600 mm(23.62 in.) WIDE: 1,500 mm (59.06 in.)
KEEP SENSE BUZ (Keep sense status buzzer)	ON	Function to make buzzer sound when distance between vehicle and obstacle does not change for more than 3 seconds	ON / OFF
F & R BUZZER VOLM (Front & rear buzzer volume)	M2	Function to change volume of buzzer / L, M1, M2, M3 or H	L: Low volume M1: medium low volume M2: medium volume M3: medium high volume H: High volume

### Sensor

DISPLAY (ITEM)	DEFAULT	CONTENTS	SETTING
NON -P/R RNG SEN (Non P/R range sensor)	F	Function to set available sensors when shift position is not in P or R / F, Rcrn2 or F	F, Rcrn2: Corner sensors are available F: front sensors are available

## POWER TILT AND POWER TELESCOPIC STEERING COLUMN SYSTEM

DISPLAY (ITEM)	DEFAULT	CONTENTS	SETTING
AUTO TILT AWAY	ON	ON/OFF of the auto away / return function	ON/OFF

### POWER WINDOW

DISPLAY (ITEM)	DEFAULT	CONTENTS	SETTING
UP/DOOR KEY (Door key linked P/W UP)	AVAIL	Function that enables all power windows to move up manually, via manual operation, when driver side door key cylinder is held in lock position for 1.5 seconds when engine switch is off.	NOT AVL / AVAIL
DOWN/DOOR KEY (Door key linked P/W DOWN)	AVAIL	Function that enables all power windows to move down manually, via manual operation, when driver side door key cylinder is held in unlock position for 1.5 seconds when engine switch is off.	NOT AVL / AVAIL
DOWN/WIRELESS (P/W DOWN w/ transmitter)	AVAIL	Function that enables all power windows to move down manually, via manual operation, when unlock switch on transmitter is held for 1.5 seconds when engine switch is off.	NOT AVL / AVAIL

## REAR SUNSHADE SYSTEM

DISPLAY (ITEM)	DEFAULT	CONTENTS	SETTING
R OUTPUT TIME	0.7 sec.	Function to change the time until operating the function linked shift R	0 / 0.7 / 0.9 / 1.2
R-SHADE REVERSE	AVAIL	NOT AVL/AVAIL of the rear sunshade reverse function.	NOT AVL / AVAIL

## SLIDE ROOF

DISPLAY (ITEM)	DEFAULT	CONTENTS	SETTING
OPEN/DOOR KEY (Door key related OPEN)	ON	Function to manually open sliding roof linked with power window if holding driver side door key for 2.5 seconds or more to unlock position when engine switch is off	ON/OFF
CLOSE/DOOR KEY (Door key related CLOSE)	ON	Function to manually close sliding roof linked with power window if holding driver side door key for 2.5 seconds or more to lock position when engine switch is off	ON/OFF
OPEN/WIRELESS (Wireless key related OPEN)	ON	Function to manually open sliding roof linked with power window if pressing transmitter UNLOCK switch for 3.4 seconds or more when engine switch is off	ON/OFF
DOOR KEY OPER (Door key related operation)	SLIDE	Function to select tilt up or slide open of manual sliding roof operation linked with power window Activate by holding driver side door key for 2.5 seconds or more to unlock position when engine switch is off	TILT/SLIDE
WIRELESS OPER (Wireless key related operation)	SLIDE	Function to select tilt up or slide open of manual sliding roof operation linked with power window Activate by pressing on transmitter UNLOCK switch for 3.4 seconds or more when engine switch is off	TILT/SLIDE

## SMART (Smart access system with push-button start)

DISPLAY (ITEM)	DEFAULT	CONTENTS	SETTING
IGNITION AREA	ALL	Function that switches the entry ignition detection area	FRONT / ALL
PARK WAIT TIME (Waiting time to permit opening door after locking)	3.0s	Function that sets waiting time to permit opening door after door is locked with entry lock function	1.0s / 2.0s / 3.0s / 5.5s
TRUNK OPEN MODE (Luggage compartment door open mode when vehicle is locked)	ON	Function to permit opening luggage compartment door	ON / OFF
KEY LO-BATT WRN (Warn when electrical key battery becomes weak)	ON	Function that warns driver that electrical key's battery power is low (Buzzer in the combination meter, multi-information display)	ON / OFF

DOOR UNLOCK MODE (Entry door unlock mode)	D-DOOR	Function that makes entry unlock operation available	All / D-DOOR
WARNING3	ON	Function that switches the warning for carrying the electrical key out of the vehicle when the engine switch is on (IG)	ON / OFF

#### THEFT DETERRENT SYSTEM

DISPLAY (ITEM)	DEFAULT	CONTENTS	SETTING
PASSIVE MODE (Passive Arming Mode)	OFF	<p>PASSIVE MODE is a function that switches theft deterrent system from arming preparation state to armed state 30 seconds after key is not in the actuation area and driver side door is closed, even if doors are not locked by wireless or door key lock operation</p> <p>In PASSIVE MODE, if you do not perform following operations within 14 seconds after door is opened during armed state, theft deterrent system will judge that condition as a theft and switch to alarm sounding state:</p> <ul style="list-style-type: none"> <li>- Unlock any door by key or wireless operation</li> <li>- Reconnect battery</li> <li>- Turn the engine switch on (IG)</li> </ul>	ON/OFF
WARN BY HORN (Warning by horn)	ON	Function that makes vehicle horn and theft deterrent horn be able to be used as a warning device	ON/OFF
ENTRY DELAY (Entry delay time)	14 s	Function that changes entry delay time (time before warning starts) for PASSIVE MODE	0 s/14 s/30 s

#### WIPER:

DISPLAY (ITEM)	DEFAULT	CONTENTS	SETTING
SPEED MODE (Speed mode)	AVAIL	Function to change to the intermittent operation when the vehicle comes to a stop from driving condition with the wiper switch in the LO position	NOT AVAIL / AVAIL
AUTO WIPER (Auto wiper)	AVAIL	Function to operate the wiper automatically when it is raining	NOT AVAIL / AVAIL
REWPER CONTROL (Rewiper control)	SPD MOD	Function to change the time between end of wiper motor operation and start of wiper operation to prevent streaking from washer fluid	OFF / 3 s / SPD MOD