 
 


Firing Order: Specifications

| | |
|--------------|-----------------------|
| Firing Order | 1 - 2 - 3 - 4 - 5 - 6 |
|--------------|-----------------------|

Firing Order : 1-2-3-4-5-6



Front of Vehicle