



11. INSTALL THERMOSTAT

- (a) Install a new gasket to the thermostat.
- (b) Align the thermostat jiggle valve with the upper stud bolt, and insert the thermostat in the water inlet housing.

HINT:

The jiggle valve may be set within 15° of either side of the prescribed position.