

DTC No.	Detection Item	Trouble Area	Memory
00	Normal	-	-
11*1	Room temperature sensor circuit	<ul style="list-style-type: none"> Room temp. sensor A/C amplifier (Heater Control Housing) Harness or connector between room temp. sensor and A/C amplifier (Heater Control Housing) 	○ (8.5 min. or more)
12	Ambient temperature sensor circuit	<ul style="list-style-type: none"> Ambient temp. sensor, clock Harness or connector between clock and A/C amplifier (Heater Control Housing) A/C amplifier (Heater Control Housing) 	-
13	Evaporator temperature sensor circuit	<ul style="list-style-type: none"> Evaporator temp. sensor Harness or connector between evaporator temp. sensor and A/C amplifier (Heater Control Housing) A/C amplifier (Heater Control Housing) 	○ (8.5 min. or more)
14	Water temperature sensor circuit	<ul style="list-style-type: none"> Harness or connector between ECM and A/C amplifier (Heater Control Housing) ECM A/C amplifier (Heater Control Housing) 	-
21*2	Solar sensor circuit (short)	<ul style="list-style-type: none"> Solar sensor Harness or connector between solar sensor and A/C amplifier (Heater Control Housing) 	○ (8.5 min. or more)
	Solar sensor circuit (open)	<ul style="list-style-type: none"> A/C amplifier (Heater Control Housing) 	-
22*3	Compressor lock sensor circuit	<ul style="list-style-type: none"> Compressor Drive Belt Compressor lock sensor Compressor Harness or connector between ECM and A/C amplifier (Heater Control Housing) assembly, compressor lock sensor A/C amplifier (Heater Control Housing) ECM 	-
23	Pressure switch circuit	<ul style="list-style-type: none"> Pressure switch A/C amplifier (Heater Control Housing) Harness or connector between pressure switch and A/C amplifier (Heater Control Housing) 	-
31	Air mix damper position sensor circuit	<ul style="list-style-type: none"> Air mix damper position sensor A/C amplifier (Heater Control Housing) Harness or connector between air mix damper position sensor and A/C amplifier (Heater Control Housing) 	○ (1 min. or more)
32	Air inlet damper position sensor circuit	<ul style="list-style-type: none"> Air inlet damper position sensor (Recirculation damper servo sub-assy) A/C amplifier (Heater Control Housing) Harness or connector between air inlet damper position sensor and A/C amplifier (Heater Control Housing) 	○ (1 min. or more)
33	Air outlet damper position sensor circuit	<ul style="list-style-type: none"> Air outlet damper position sensor (Mode damper servo sub-assy) A/C amplifier (Heater Control Housing) Harness or connector between air outlet damper position sensor (Mode damper servo sub-assy) and A/C amplifier (Heater Control Housing) 	○ (1 min. or more)
41	Air mix control servomotor	<ul style="list-style-type: none"> Air mix control servomotor Harness or connector between air mix damper servomotor and A/C amplifier (Heater Control Housing) A/C amplifier (Heater Control Housing) 	○ (15 sec.)
42	Air inlet control servomotor	<ul style="list-style-type: none"> Air inlet control servomotor (Recirculation damper servo sub-assy) Harness or connector between air inlet damper servomotor and A/C amplifier (Heater Control Housing) A/C amplifier (Heater Control Housing) 	○ (15 sec.)
	Air outlet control servomotor	<ul style="list-style-type: none"> Air outlet control servomotor (Mode damper servo sub-assy) 	

43	<p>assy,</p> <ul style="list-style-type: none">• Air outlet damper position sensor (Mode damper servo sub-assy)• Harness or connector between air outlet damper servomotor (Mode damper servo sub-assy) and A/C amplifier (Heater Control Housing)• A/C amplifier (Heater Control Housing)	○ (15 sec.)
----	--	----------------