


# ES 350

## 1. EJECT MAP DISC

- A. DISENGAGE THE 8 CLAWS AND REMOVE THE COVER AS SHOWN IN THE ILLUSTRATION.

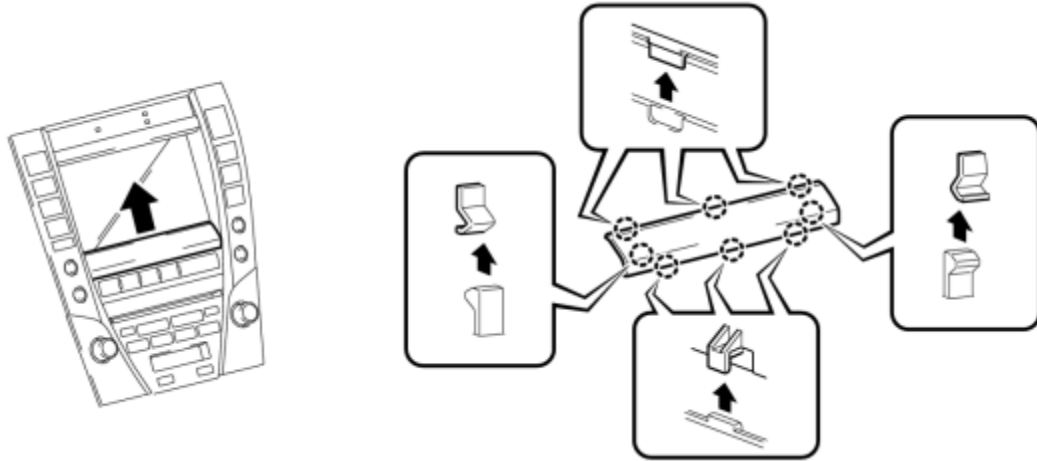

P

- B. TURN THE IGNITION SWITCH TO THE “ACC” OR “ON” POSITION
- C. PUSH THE “MENU” BUTTON.
- D. TOUCH “MAP DVD” ON THE NAVIGATION SCREEN.
- E. TOUCH “EJECT DVD” ON THE NAVIGATION SCREEN TO EJECT THE MAP DISC.
- F. REMOVE AND DISCARD THE OLD DVD, OR IF ELIGIBLE, RETURN FOR REBATE.

## 2. REPLACE THE NAVIGATION DISC

- A. INSERT THE NEW NAVIGATION DVD.
- B. NAVIGATION DISC SHOULD UPDATE AUTOMATICALLY.