

Last Modified: 7-13-2007		1.6 G
Service Category: Audio/Visual/Telematics		Section: Audio/Video
Model Year: 2008	Model: ES350	Doc ID: RM0000020Q2015X
Title: AUDIO / VISUAL: FRONT SIDE SPEAKER: ON-VEHICLE INSPECTION (2008 ES350)		

## ON-VEHICLE INSPECTION

### 1. INSPECT FRONT NO. 1 SPEAKER

#### **HINT:**

Remove interior parts so that the front No. 1 speaker can be seen.

- (a) Check the speaker installation.

OK:

The speaker is securely installed.

If the result is not as specified, reinstall the front No. 1 speaker.

- (b) Visually check the speaker.

OK:

The cone paper of the speaker is not torn.

If the result is not as specified, replace the front No. 1 speaker.

- (c) Speaker resistance check

(1) Disconnect the front No. 1 speaker connector.

(2) Measure the resistance between the terminals of the speaker.

Standard resistance:

Approximately 4  $\Omega$

If the result is not as specified, replace the front No. 1 speaker.

### 2. INSPECT FRONT NO. 2 SPEAKER

#### **HINT:**

Remove interior parts so that the front No. 2 speaker can be seen.

- (a) Check the speaker installation.

OK:

The speaker is securely installed.

If the result is not as specified, reinstall the front No. 2 speaker.

- (b) Visually check the speaker.

OK:

The cone paper of the speaker is not torn.

If the result is not as specified, replace the front No. 2 speaker.

