


Last Modified: 7-13-2007		1.6 A
Service Category: Engine/Hybrid System	Section: Emission Control	
Model Year: 2008	Model: ES350	Doc ID: RM00000100I00EX
Title: 2GR-FE EMISSION CONTROL: AIR FUEL RATIO SENSOR: INSTALLATION (2008 ES350)		

INSTALLATION

1. INSTALL AIR FUEL RATIO SENSOR

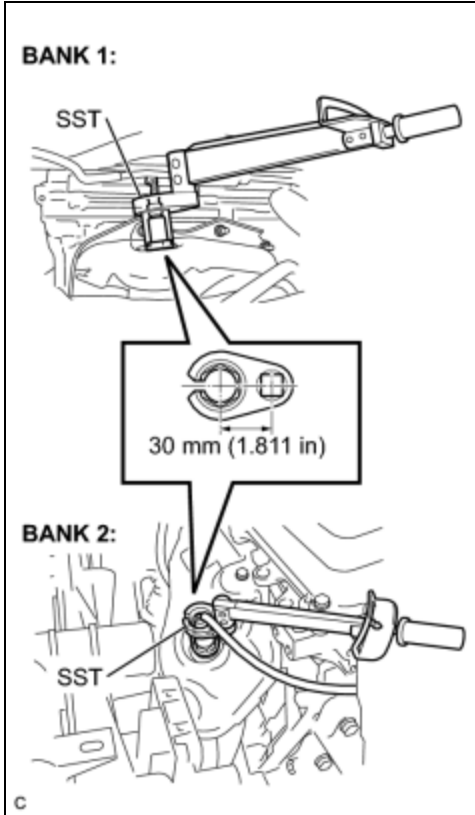


(a) Using SST, install the 2 air fuel ratio sensors to the front pipe assembly.

SST: 09224-00010

Torque: 44 N·m (449 kgf·cm, 32 ft·lbf)

NOTICE:

The torque shown above should be used for tightening without using SST. When the SST is used for tightening, the torque should be calculated based on the length of the SST .

(b) Connect the 2 air fuel ratio sensor connectors.

