

Customizing Your Lexus

Your vehicle includes a variety of electronic features that can be personalized to your preferences. Programming these preferences requires specialized equipment and may be performed by an authorized Lexus dealership.

It is also possible to customize certain vehicle features yourself using the navigation system.

Some function settings are changed simultaneously with other functions being customized. Contact your Lexus dealer for further details.

Settings that can be customized at a dealer

The following table includes some settings that can be customized using the navigation system display. (→P.54)

Item	Function	Default setting	Customized setting
Smart access system with push-button start	Smart access system with push-button start	ON	OFF
	Operation signal (Emergency flashers)	ON	OFF
	Operation signal (Buzzer)	ON	OFF
Wireless remote control	Wireless remote control	ON	OFF
	Unlocking operation	Driver's door unlocked in one step, all doors unlocked in two steps	All doors unlocked in one step
	Automatic door lock function to be activated if door is not opened after being unlocked	ON	OFF
	Time elapsed before automatic door lock function is activated if door is not opened after being unlocked	60 seconds	30 seconds
			120 seconds
	Operation signal (Emergency flashers)	ON	OFF
	Operation signal (Buzzer volume)	Level 7	Level 0 to 7
	Door lock buzzer	ON	OFF
	Trunk unlocking function	ON	OFF
	Trunk unlocking operation	Push and hold	Push twice
One push			
Panic function	ON	OFF	

Item	Function	Default setting	Customized setting
Door lock	Unlocking using a key	Driver's door unlocked in one step, all doors unlocked in two steps	All doors locked in one step
	Speed-detecting automatic door lock function	OFF	ON
	Opening driver's door unlocks all doors	OFF	ON
	Shifting gears to P unlocks all doors	ON	OFF
	Shifting gears to position other than P locks all doors	ON	OFF
Power windows	Linked mechanical key operation	Open and close	OFF Open only Close only
	Wireless remote control linked operation	OFF	Open only
	Linked entry function	ON	OFF
Moon roof (Standard type)	Linked mechanical key operation	Open and close	OFF Open only Close only
	Linked operation of components when mechanical key is used	Slide only	Tilt only
	Wireless remote control linked operation	OFF	Open only
	Linked operation of components when wireless remote control used	Slide only	Tilt only
	Linked entry function	ON	OFF
Multi-information display	Eco Driving Indicator Light	ON	OFF
Automatic light control system	Light sensor sensitivity	Level 3	Levels 1 to 5
	Time elapsed before headlights automatically turn off after doors are closed	30 seconds	0 seconds
			60 seconds
			90 seconds

Customizing Your Lexus

Item	Function	Default setting	Customized setting
Lights	Daytime running lights system (USA only)	ON	OFF
Intuitive parking assist	Back sensor operation display and buzzer	ON	OFF
	Buzzer volume	Level 3	Level 1 to 5
	Distance which a sensor detects	4.5 ft. (150 cm)	1.8 ft. (60 cm)
Illumination	Time elapsed before lights turn off	15 seconds	OFF 7.5 seconds 30 seconds
	Operation when the doors are unlocked	ON	OFF
	Operation after the "ENGINE START STOP" switch turned OFF	ON	OFF
	Front foot well lighting	ON	OFF
	Outer foot light	ON	OFF
Seat belt reminder	Vehicle speed linked seat belt reminder buzzer	ON	OFF

Multi-information display

Country	Available languages
Canada	English and French

■ Settings that can be customized using the navigation system

You can customize the following settings the navigation system display.

(For further information on customizing settings using the navigation system display, refer to the Navigation System Owner's Manual.)

Item	Function	Default setting	Customized setting
Smart access system with push-button start	Smart access system with push-button start	ON	OFF
	Smart door unlocking	Driver's door	All the doors
	Time elapsed before automatic door lock function is activated if door is not opened after being unlocked	60 seconds	OFF
			30 seconds
			120 seconds
Operation signal (Emergency flashers)	ON	OFF	
Wireless remote control	Unlocking operation	Driver's door unlocked in one step, all doors unlocked in two steps	All doors unlocked in one step
	Time elapsed before automatic door lock function is activated if door is not opened after being unlocked	60 seconds	OFF
			30 seconds
			120 seconds
Operation signal (Emergency flashers)	ON	OFF	

Customizing Your Lexus

Item	Function	Default setting	Customized setting
Door lock	Unlocking using a key	Driver's door unlocked in one step, all doors unlocked in two steps	All doors locked in one step
	Speed-detecting automatic door lock function	OFF	ON
	Opening driver's door unlocks all doors	OFF	ON
	Shifting gears to P unlocks all doors	ON	OFF
	Shifting gears to position other than P locks all doors	ON	OFF
Automatic light control system	Light sensor sensitivity	Level 3	Levels 1 to 5
	Time elapsed before headlights automatically turn off after doors are closed	30 seconds	0 seconds
			60 seconds 90 seconds
Automatic air conditioning system	Switching between outside air and recirculated air mode linked to "AUTO" switch operation	Auto	Manual
	A/C Auto switch operation	Auto	Manual
	Exhaust gas sensor sensitivity	Standard	-3 to 3
Lights	Daytime running lights system (USA only)	ON	OFF
Illumination	Time elapsed before lights turn off	15 seconds	7.5 seconds 30 seconds
	Sensitivity of the ambient light sensor used for dimming the meter lights etc.		Standard
	Sensitivity of the ambient light sensor used for brightening the meter lights etc.	Standard	-2 to 2

Memo

A memo form with a header and 20 horizontal lines for writing. The header is a grey tab at the top left with the word "Memo" in bold black text. The main body of the form is a large white rectangle with 20 horizontal grey lines, providing space for handwritten notes. The entire form is set against a light grey background.



Your Lexus dealer

Your Lexus dealer will provide quality maintenance and any other assistance you may require.

If there is not a Lexus dealer near you, please call the following number:

■ U.S. OWNERS

- In the U.S. mainland or Canada:

Lexus Roadside Assistance

1-800-25-LEXUS or **1-800-255-3987** (Toll-Free)

- In Hawaii:

Servco Automotive Roadside Assistance/Customer Services

1-800-25-LEXUS or **1-800-255-3987** (Toll-Free)

■ CANADIAN OWNERS

- In Canada or the U.S. mainland:

Lexus Roadside Assistance/Customer Service

1-800-26-LEXUS or **1-800-265-3987** (Toll-Free)

Please access our **websites** for further information.

- The U.S. mainland: www.lexus.com
- Hawaii: www.servcolexus.com
- Canada : www.lexus.ca

©2009 TOYOTA MOTOR CORPORATION

All rights reserved. This material may not be reproduced or copied, in whole or in part, without the written permission of Toyota Motor Corporation.