 
 


Audio System , LEXUS Navigation System , Parking Assist <Rear View Monitor>

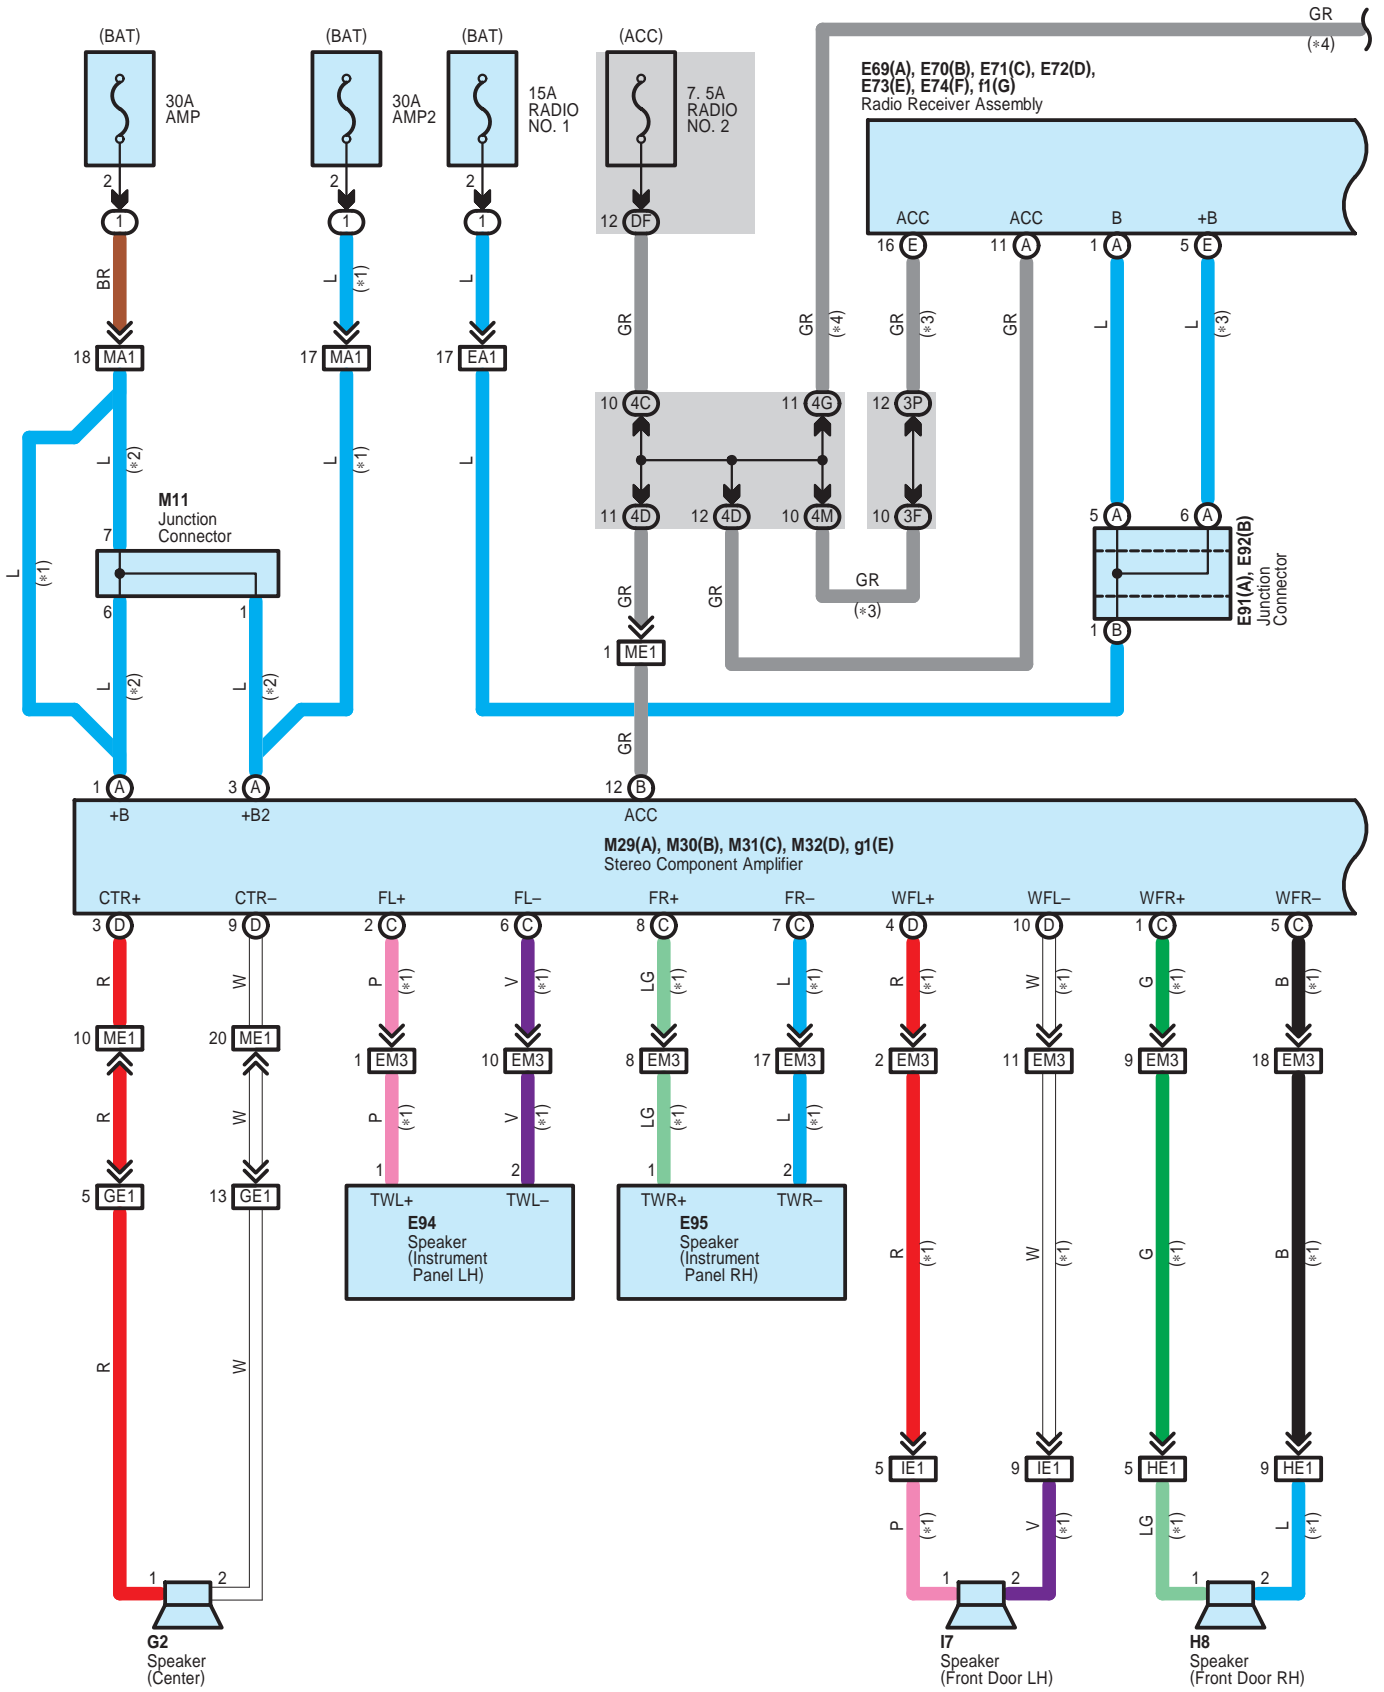 


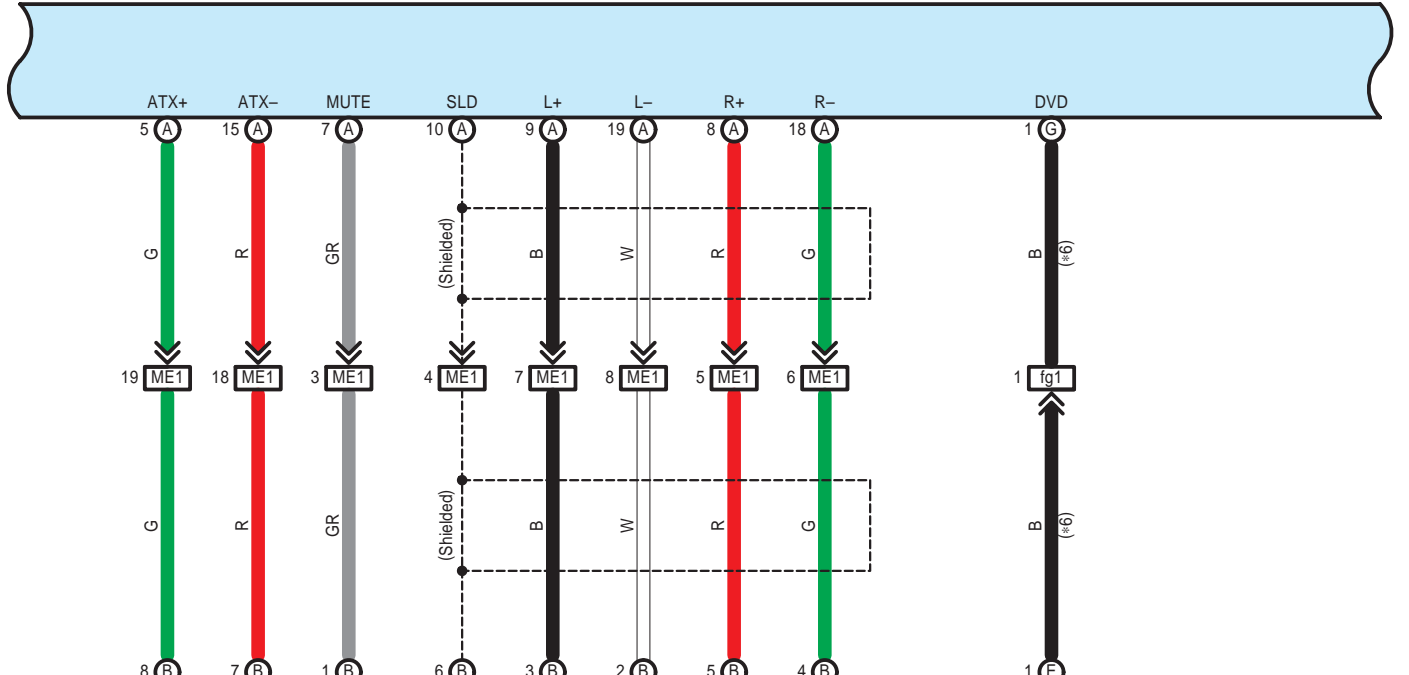


E69(A), E70(B), E71(C), E72(D), E73(E), E74(F), f1(G)
Radio Receiver Assembly





M29(A), M30(B), M31(C), M32(D), g1(E)
Stereo Component Amplifier

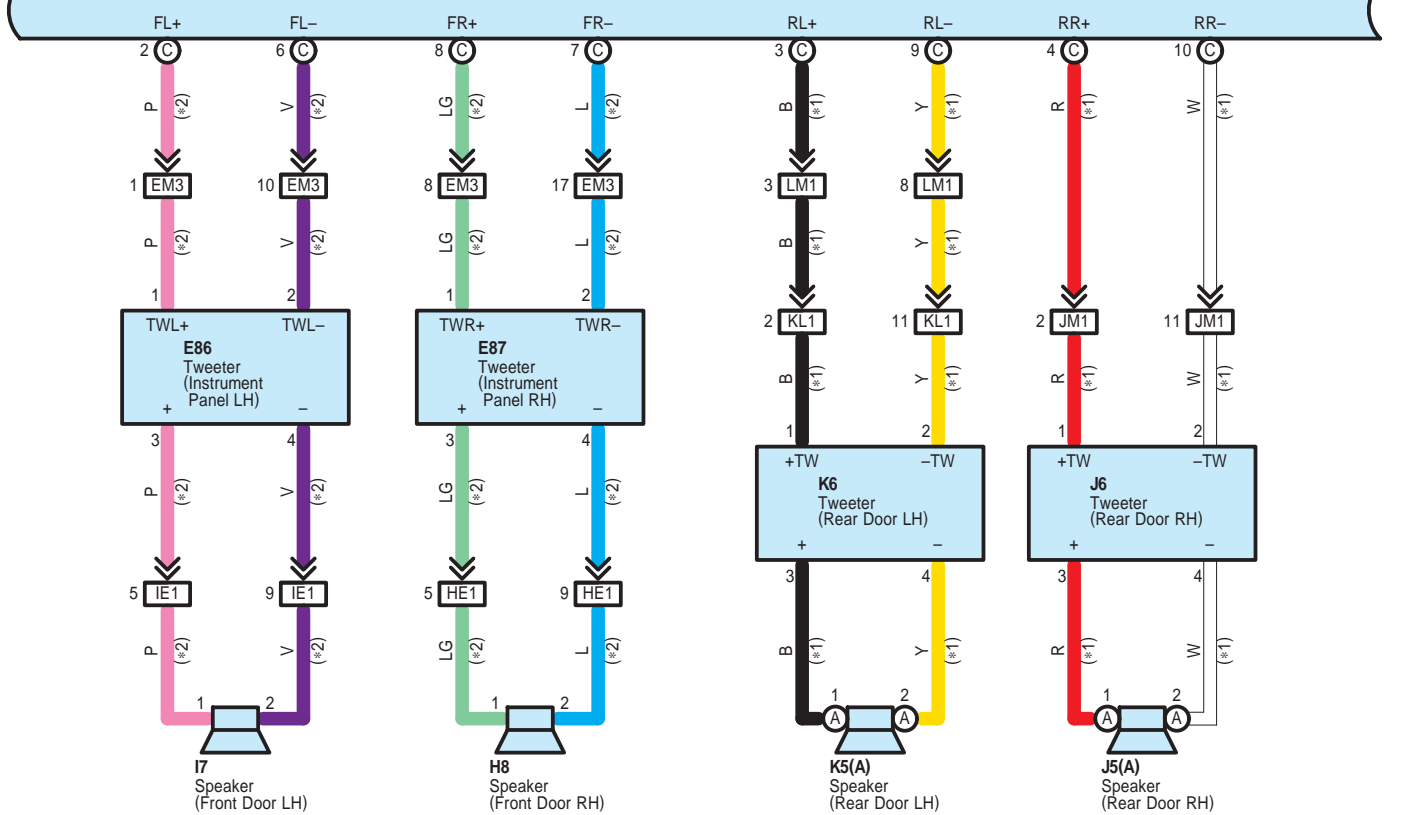

   
- * 1 : 14 Speaker
- * 2 : 8 Speaker
- * 3 : w/ Bluetooth w/o LEXUS Navigation System
- * 4 : w/ LEXUS Navigation System
- * 6 : w/ DVD Changer

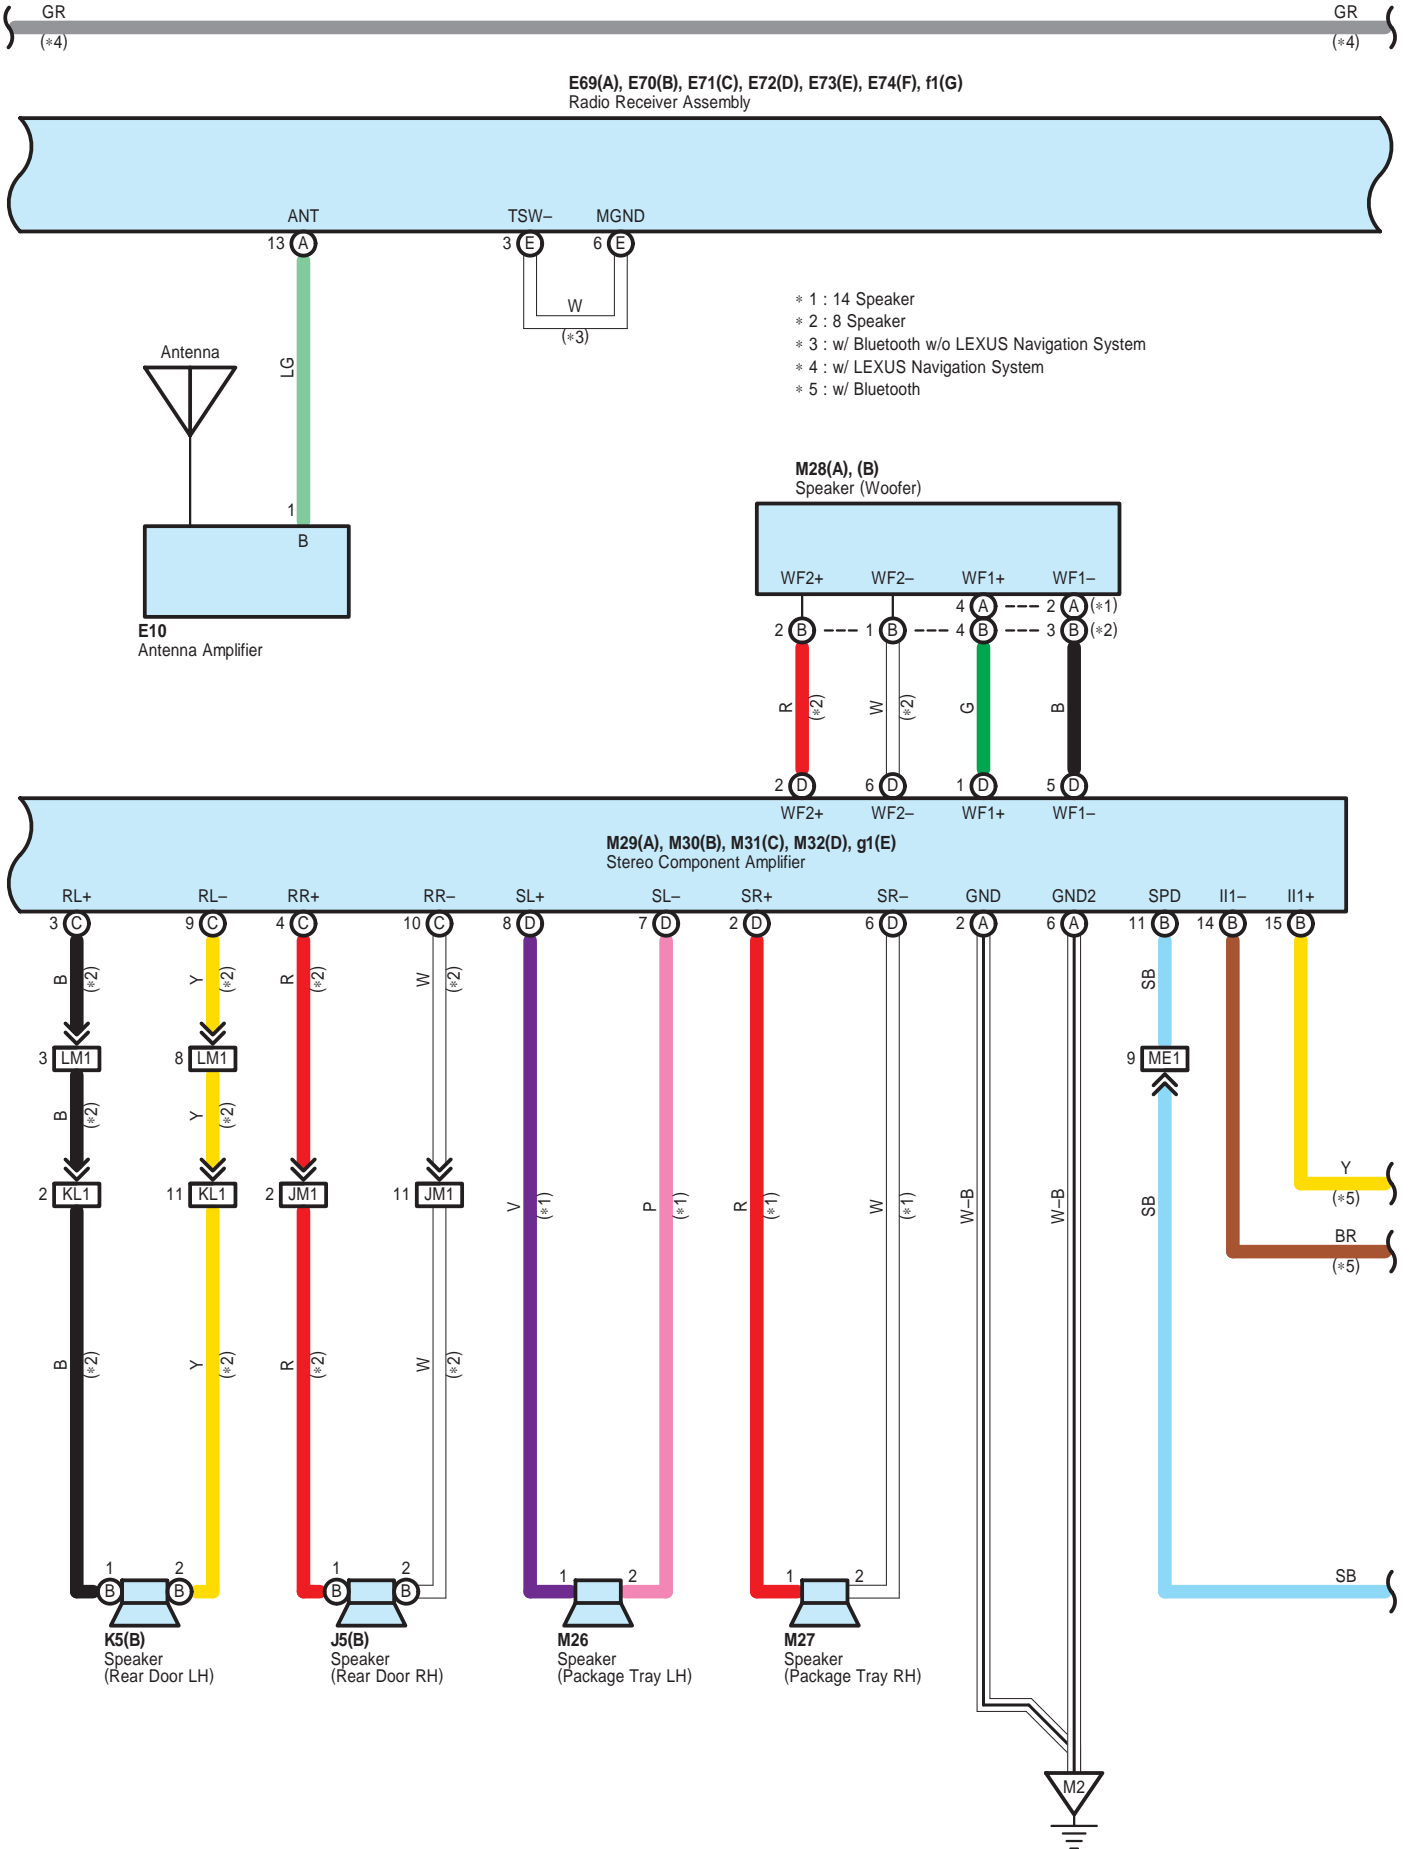


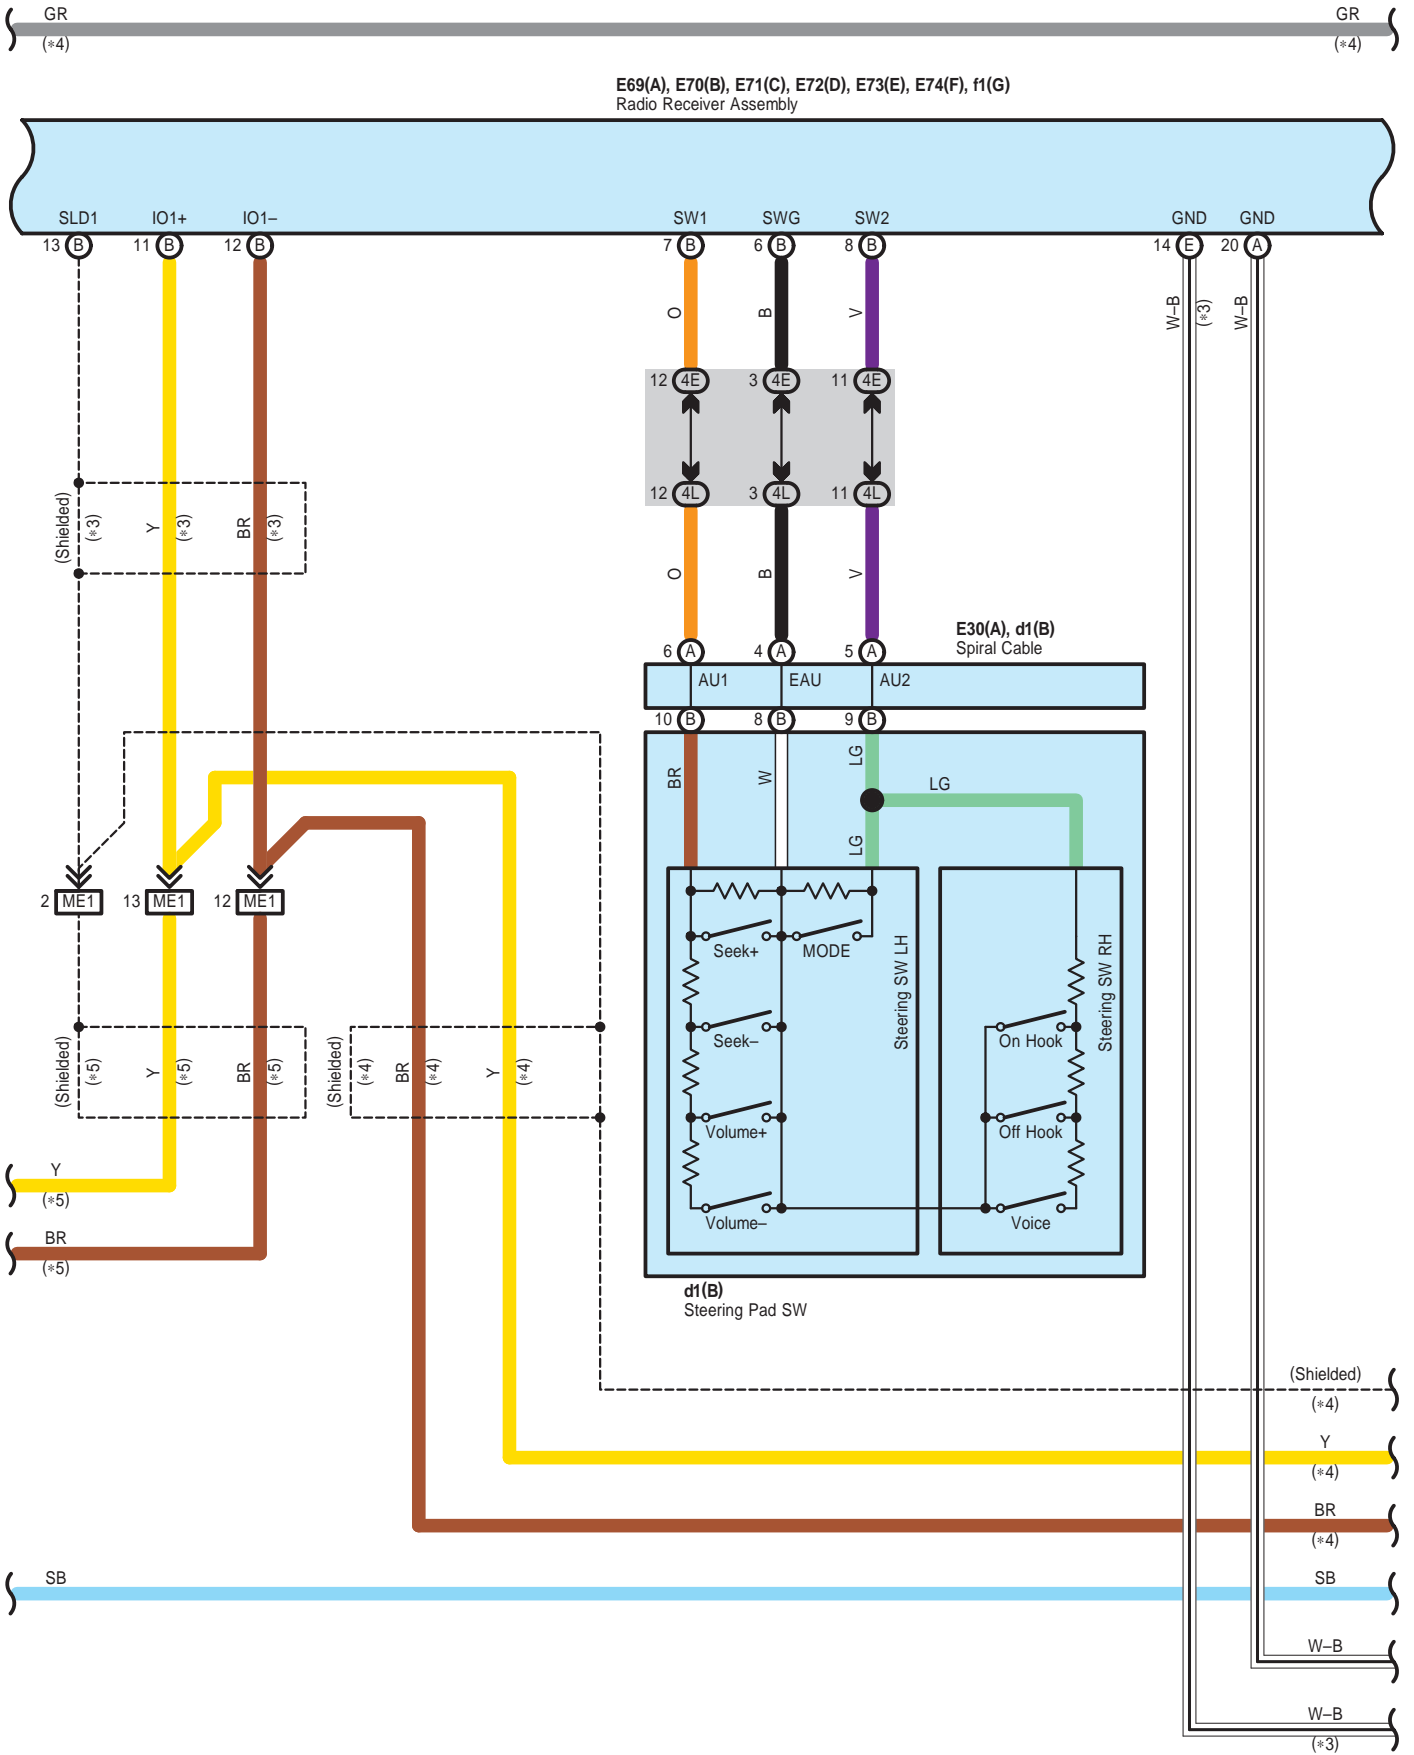

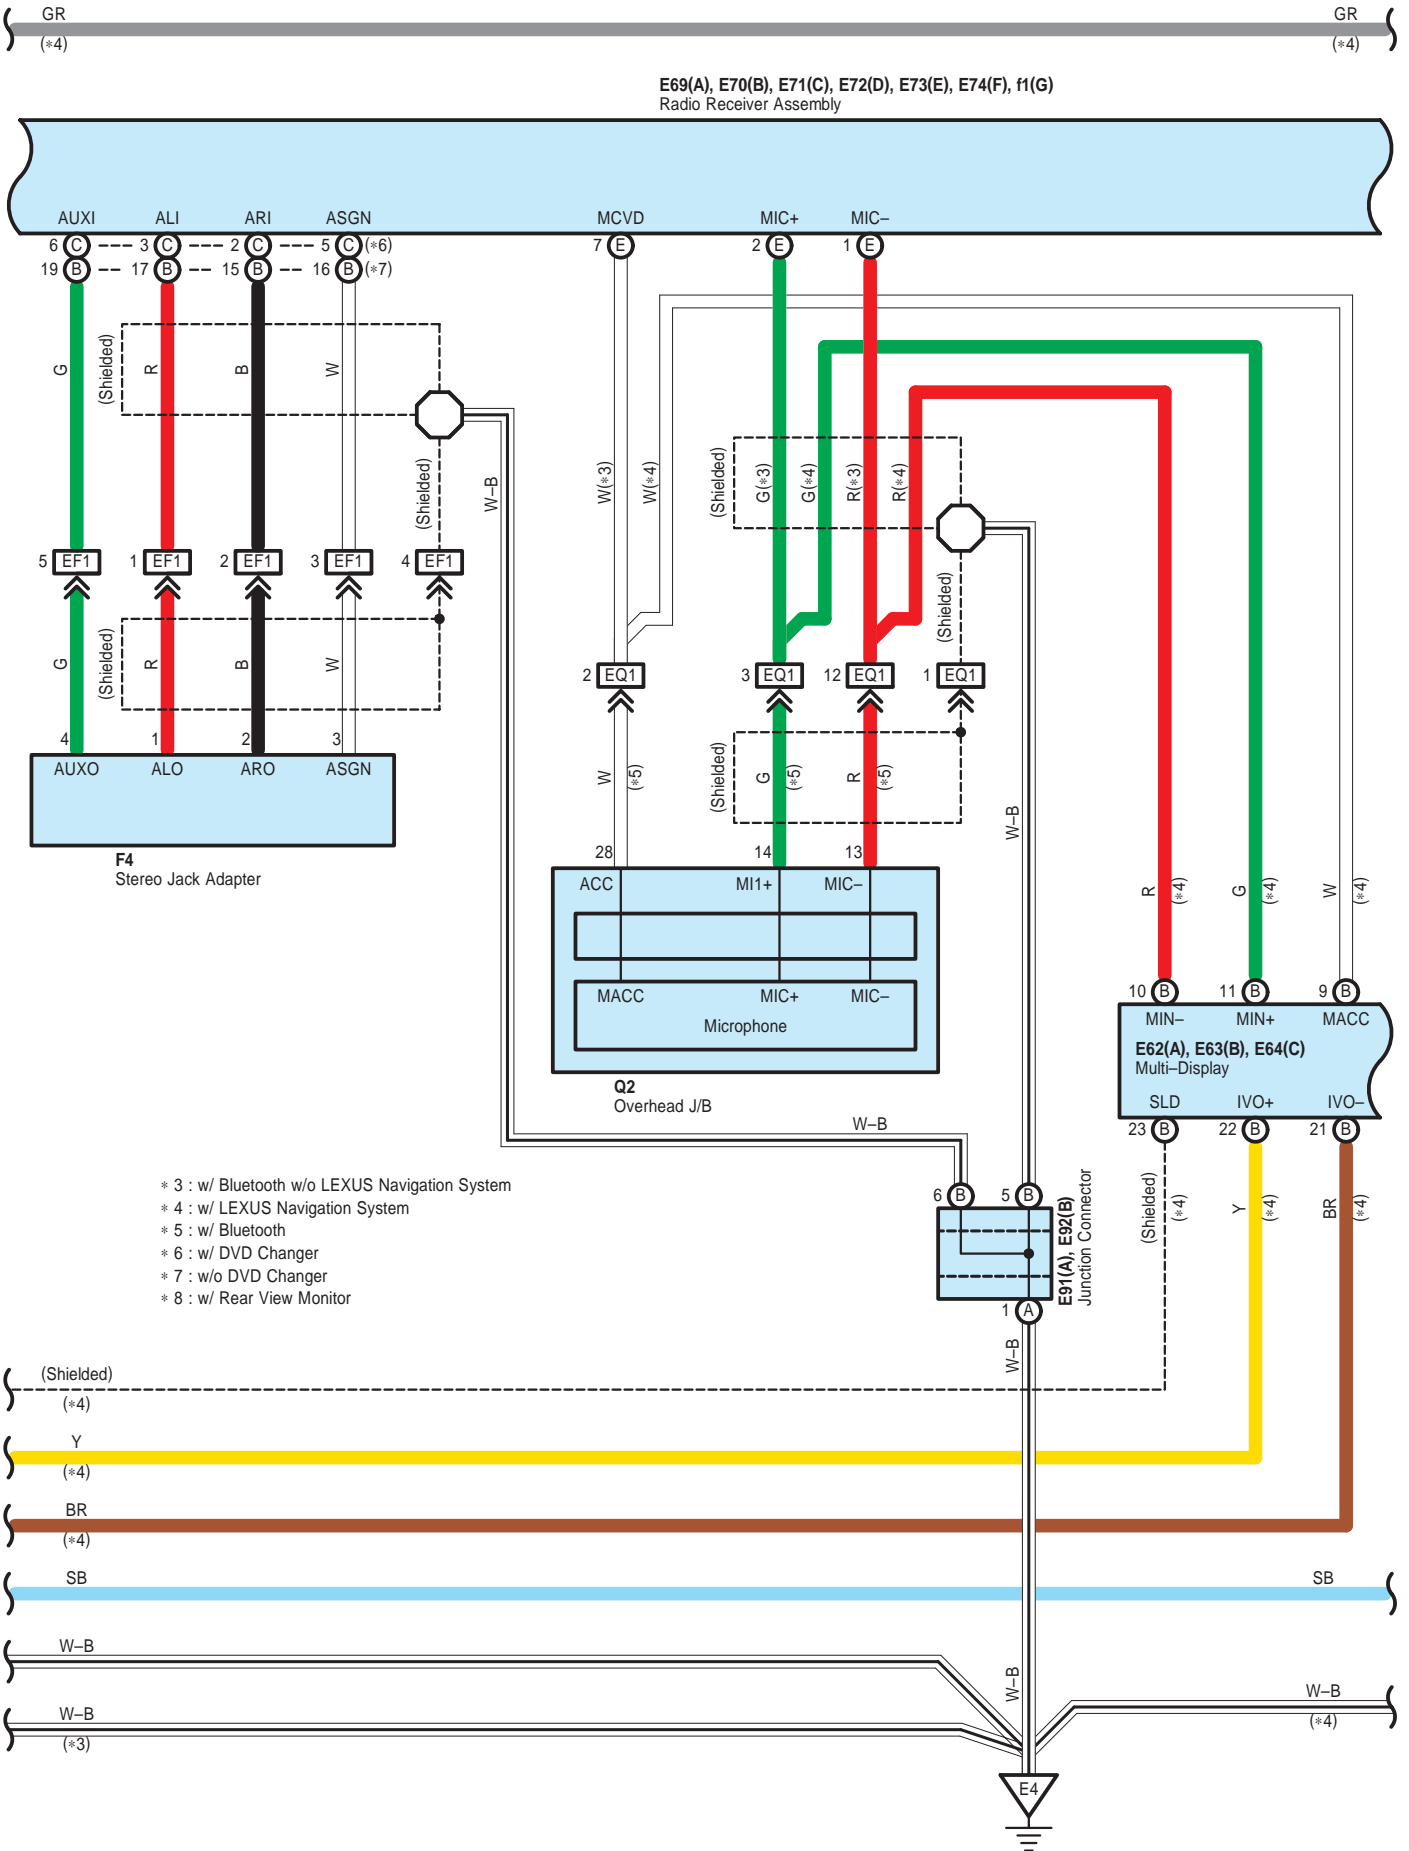

  - * 3 : w/ Bluetooth w/o LEXUS Navigation System
- * 4 : w/ LEXUS Navigation System
- * 5 : w/ Bluetooth
- * 6 : w/ DVD Changer
- * 7 : w/o DVD Changer
- * 8 : w/ Rear View Monitor

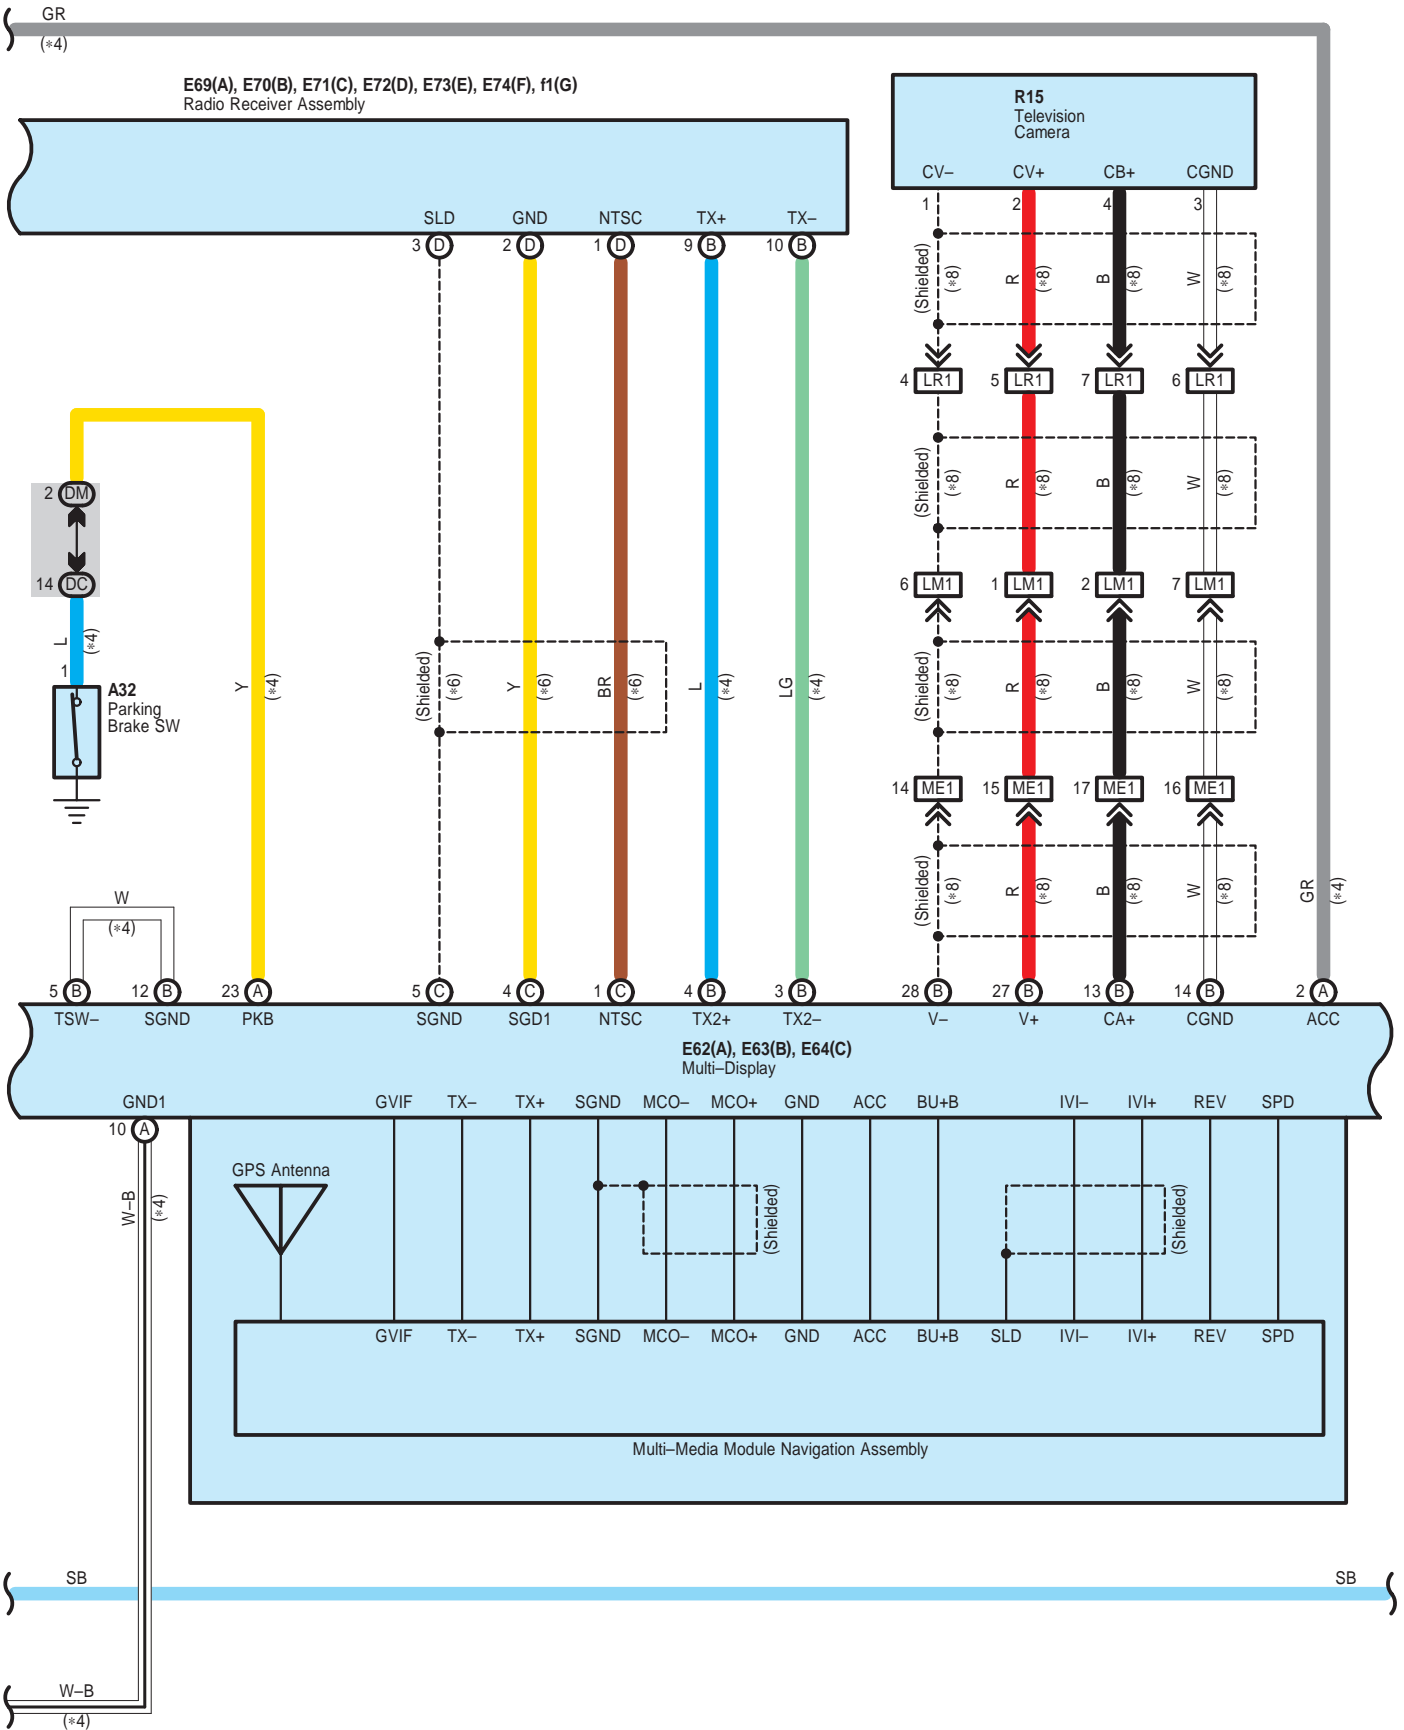


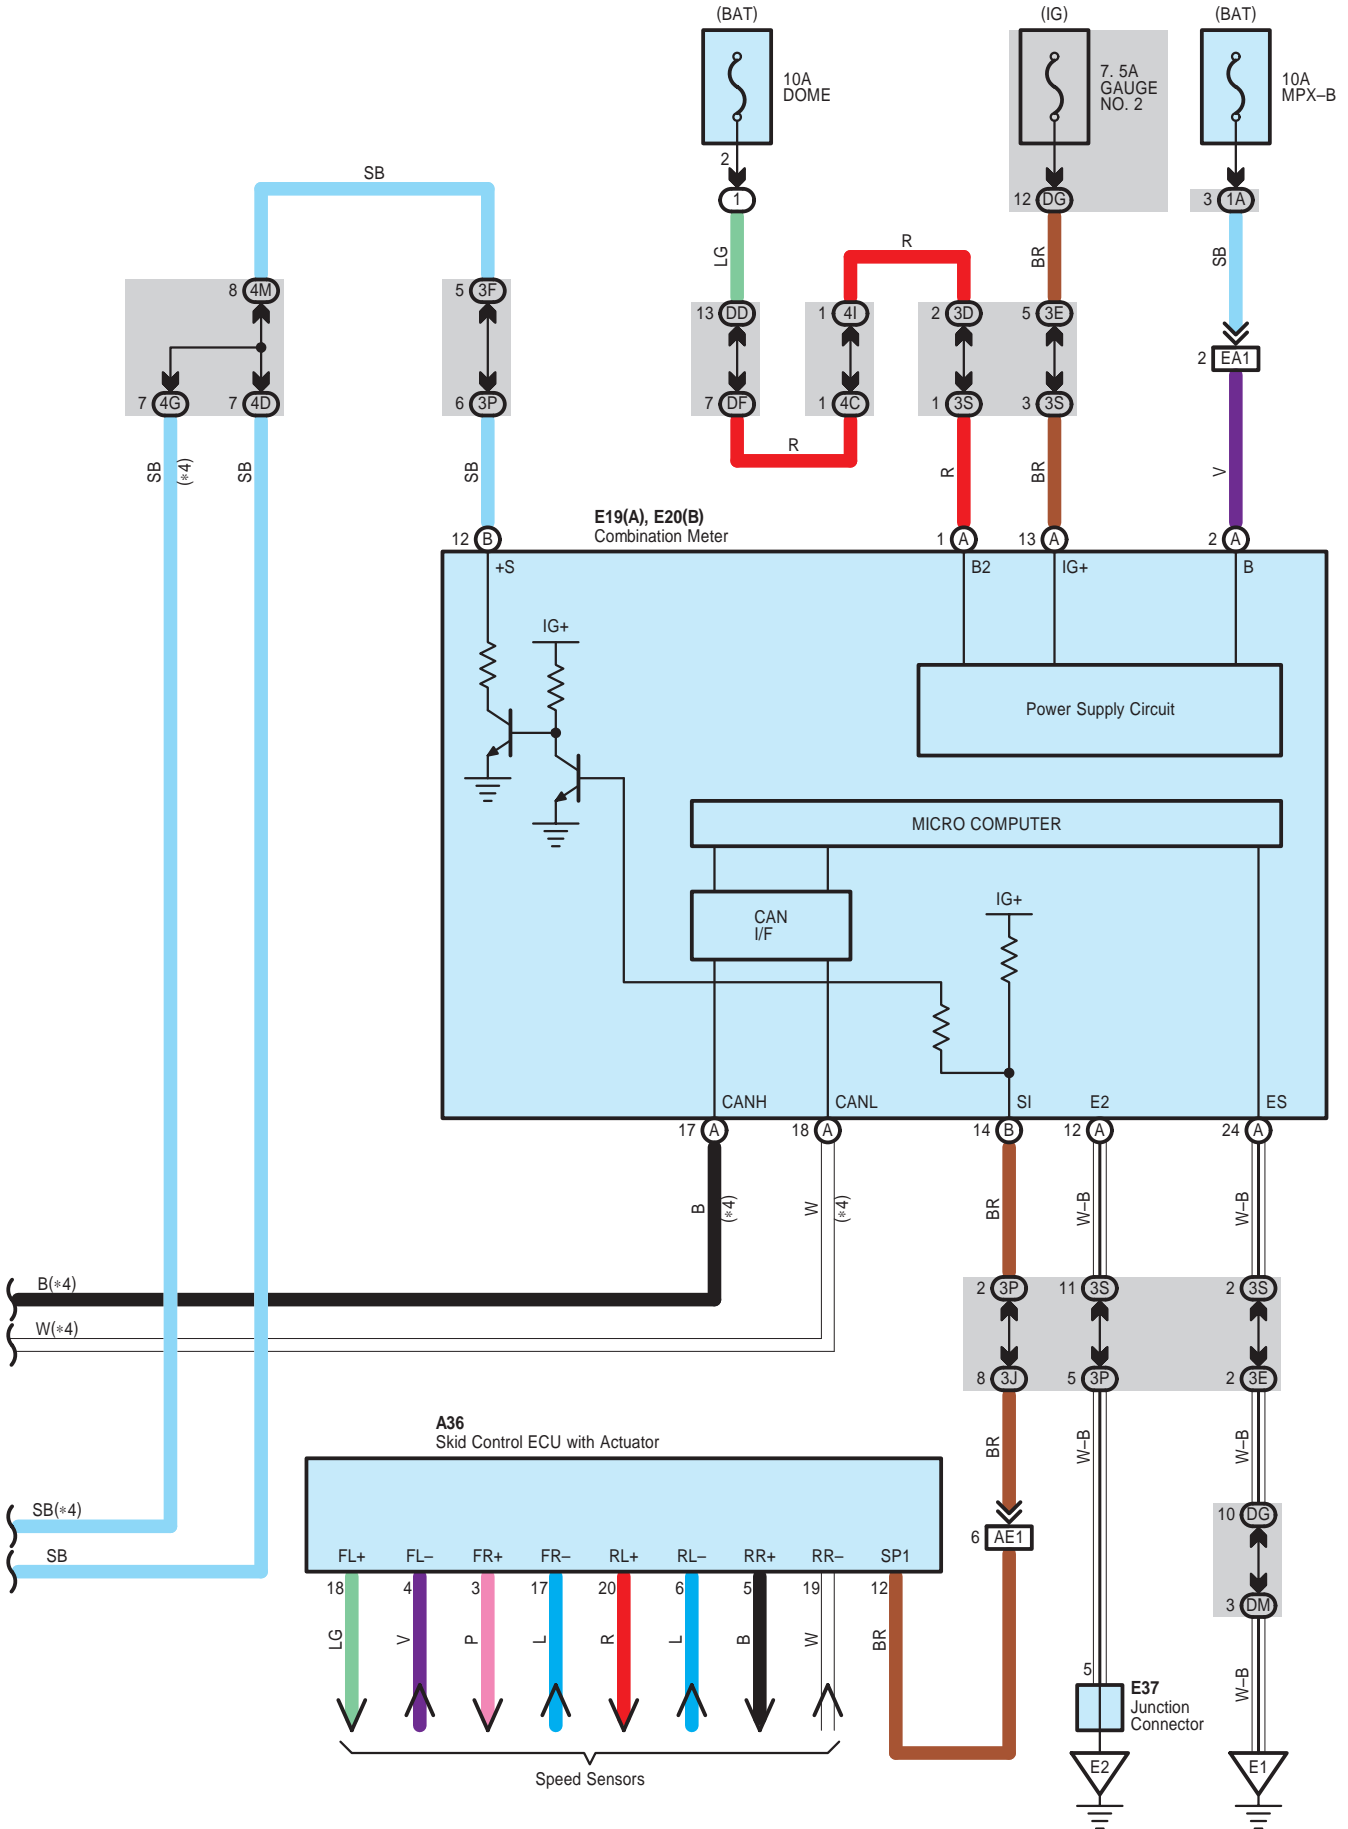


A 32
White



 A 36
Black

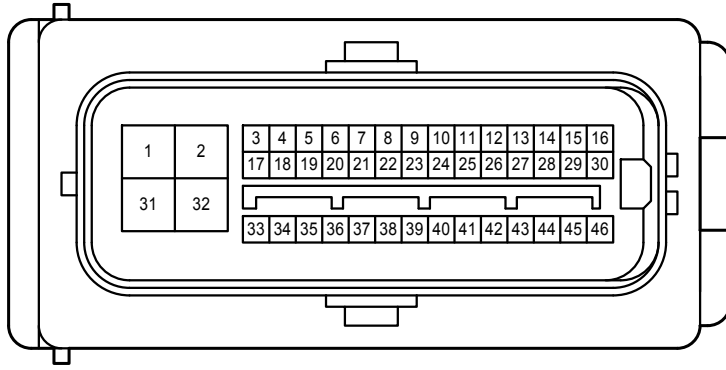


B 36
Gray

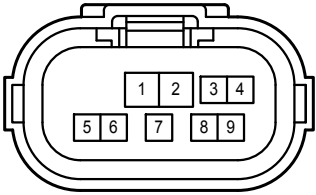 


E 10
White



 
E 19
White

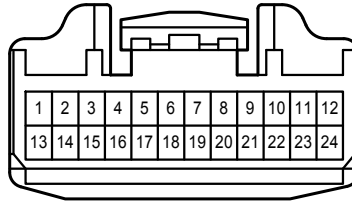


E 20
White

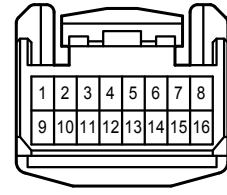 


E 21
Black

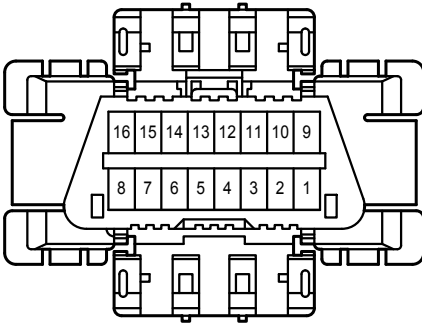 


E 30
Black

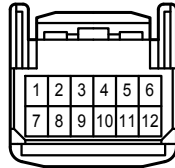 


E 31
Gray

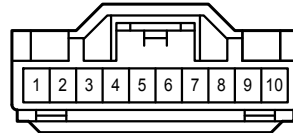 


E 34
Blue

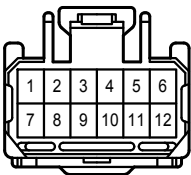 


E 35
Blue

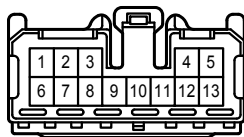 


E 37
White

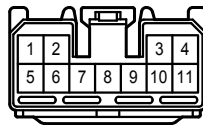 


E 42
White

 


E 44
White

 


E 46
White

 


E 48
White

 


E 62
White

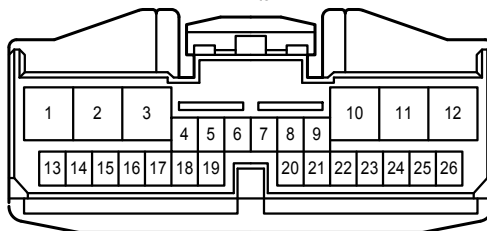 


E 63
White

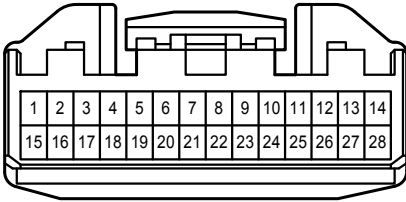 


E 64
Blue

 


E 69
White

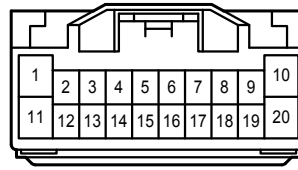 


E 70
White

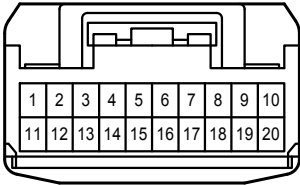 


E 71
Blue

 

E 72
White

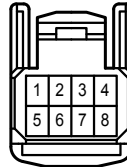 


E 73
White

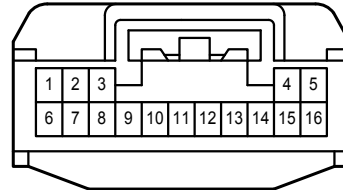 


E 74
White



 
E 86
White

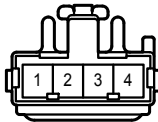


E 87
White

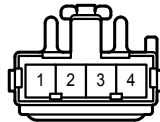 


E 91
Black

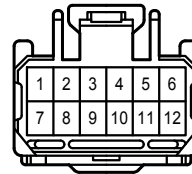 


E 92
Black

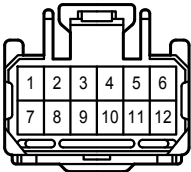 


E 94
White

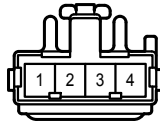 


E 95
White

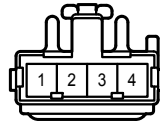 

F 4
Gray

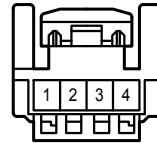 

G 2
White

 

H 8
White



I 7
White



J 5
Gray



 
(8 Speaker)

J 5
White



(14 Speaker)

J 6
White

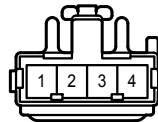

K 5
Gray



 
(8 Speaker)

K 5
White




(14 Speaker)


K 6
White

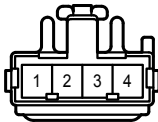


M 11
Blue

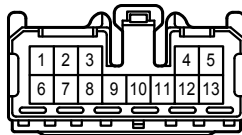 


M 26
White

 


M 27
White






















 


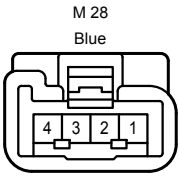 

(8 Speaker)

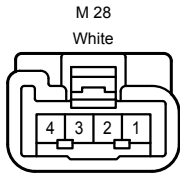 


(14 Speaker)

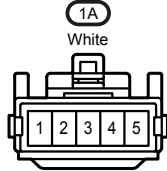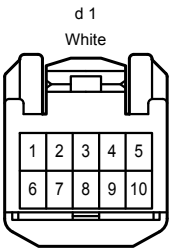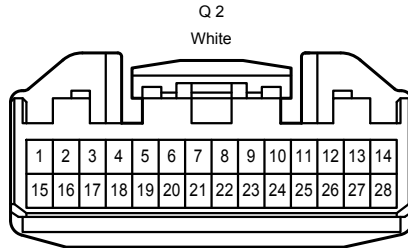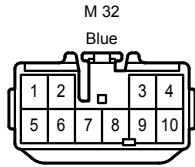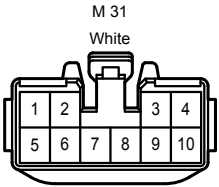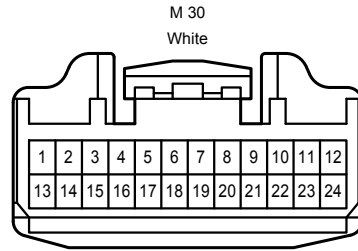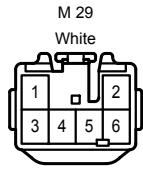                      


4J

 Gray




4L

 Gray




4M

 White




DC

 White

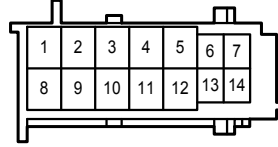


DD

 White

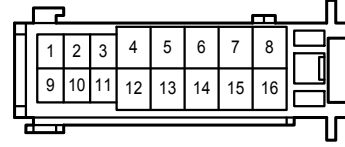


DF

 White

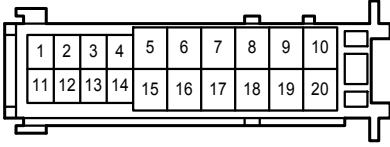


DG

 White

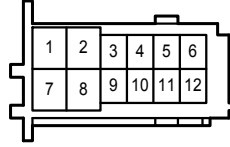


DH

 White

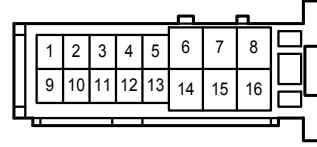


DM

 White

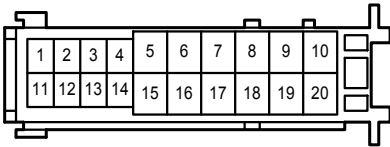


AE1

 Gray

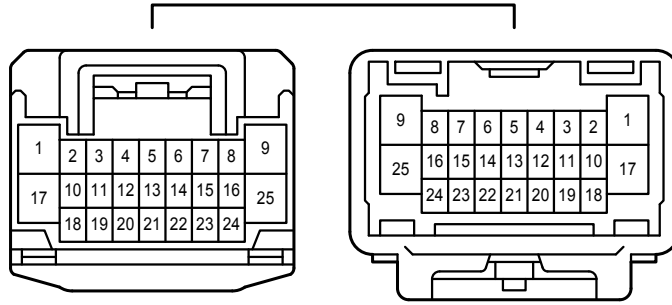

AE3

 
White

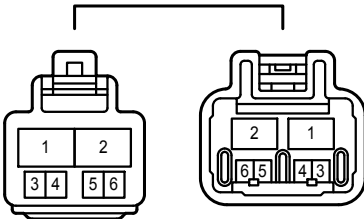

BA2


Black

 White

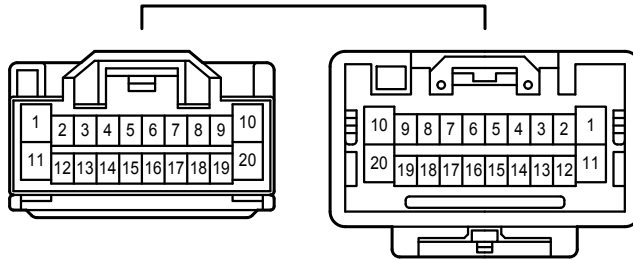


EA1

 White

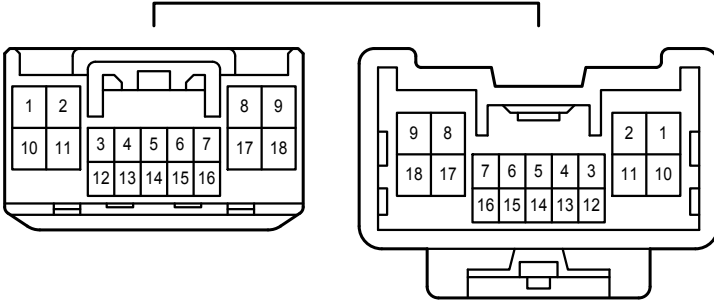


EF1

 
White

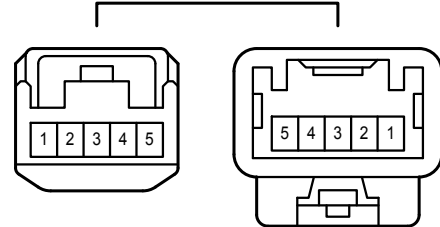


EM3
White

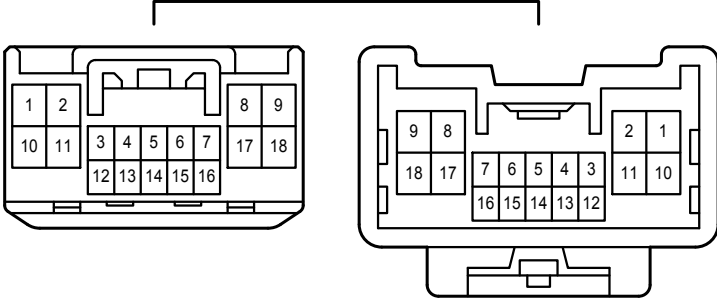 


EQ1
White

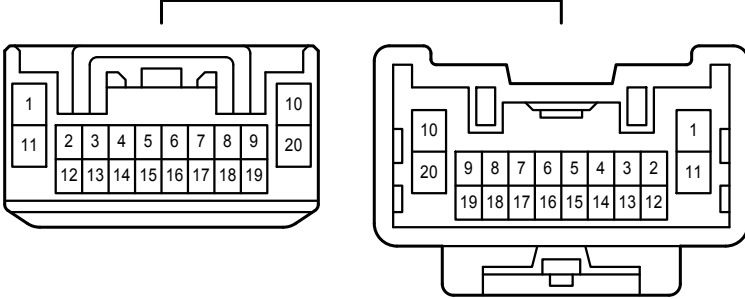 


GE1
White

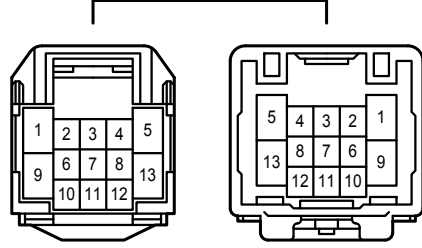 


HE1
White

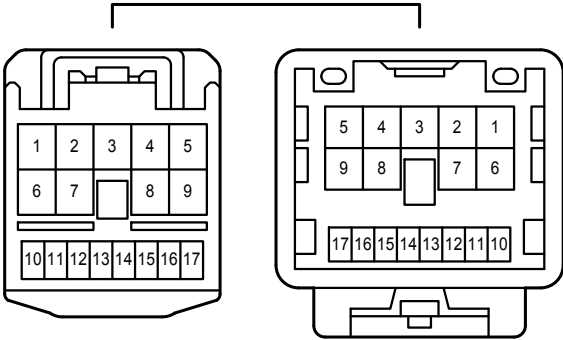 


IE1
White

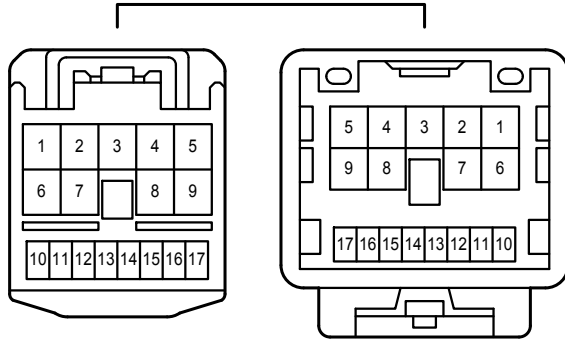 

JM1
White


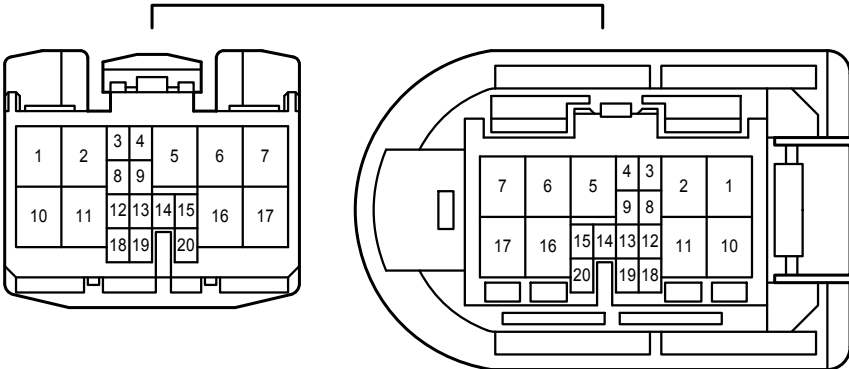 


KL1
White

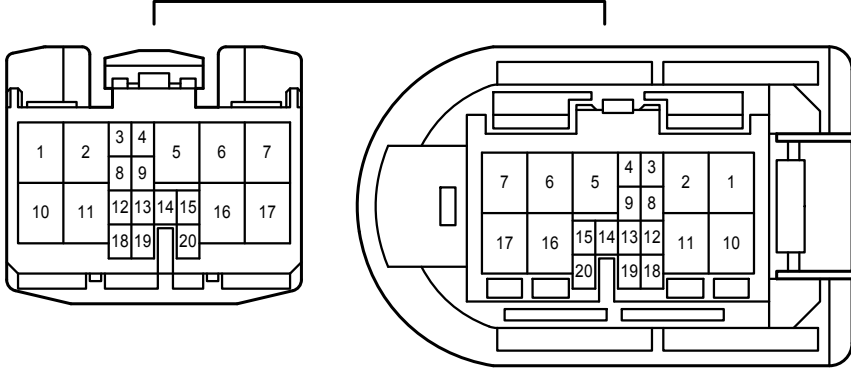 


LM1
White

  LR1
White

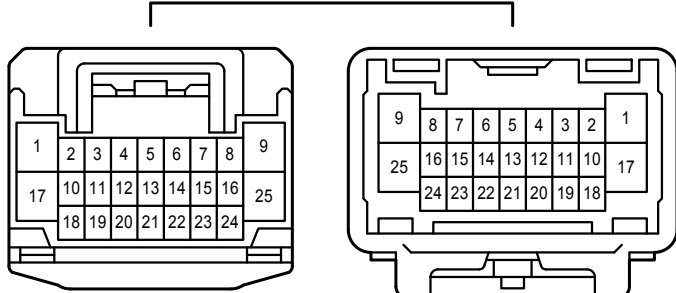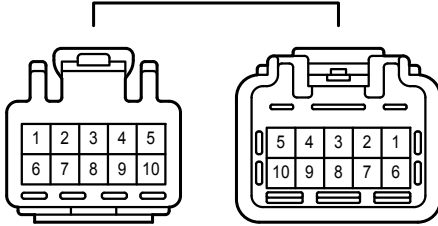

MA1
Black

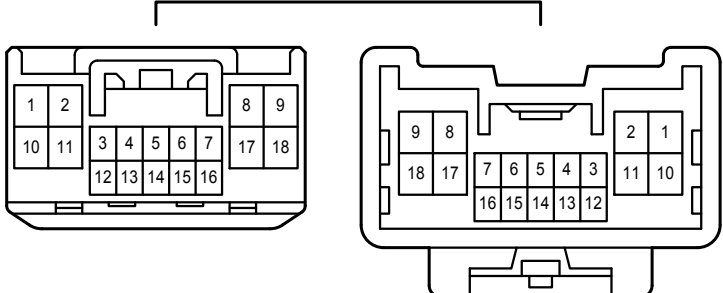 

ME1
Blue

fg1
Blue

