


Last Modified: 7-13-2007		1.6 N
Service Category: Vehicle Exterior	Section: Door/Hatch	
Model Year: 2008	Model: ES350	Doc ID: RM000000XBX00TX
Title: ENGINE HOOD / DOOR: LUGGAGE COMPARTMENT DOOR: ADJUSTMENT (2008 ES350)		

ADJUSTMENT

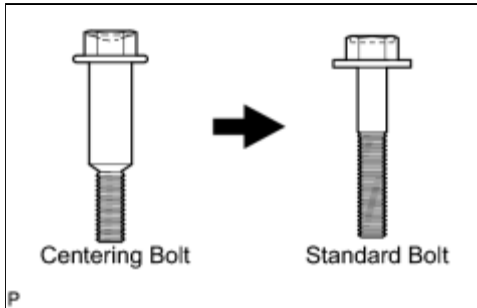

HINT:

- Centering bolts are used to mount the door hinge to the door. The door cannot be adjusted with the centering bolts on. Substitute the centering bolts with standard bolts (with washers) when making adjustments.
- A bolt without a torque specification is shown in the standard bolt chart [INFO](#).

1. REMOVE LUGGAGE COMPARTMENT DOOR ASSIST GRIP [INFO](#)

2. REMOVE LUGGAGE LOCK CONTROL CABLE PLATE [INFO](#)

3. REMOVE LUGGAGE COMPARTMENT DOOR INSIDE HANDLE [INFO](#)

4. REMOVE LUGGAGE COMPARTMENT DOOR COVER [INFO](#)

5. REMOVE LUGGAGE COMPARTMENT FLOOR MAT

6. REMOVE NO. 2 SPARE WHEEL COVER

7. REMOVE SPARE WHEEL COVER TRAY


8. REMOVE LUGGAGE HOLD BELT STRIKER ASSEMBLY [INFO](#)

9. REMOVE NO. 1 LUGGAGE COMPARTMENT TRIM HOOK [INFO](#)


10. REMOVE REAR FLOOR FINISH PLATE [INFO](#)

11. ADJUST LUGGAGE COMPARTMENT DOOR

(a) Loosen the door side hinge bolts to adjust the door horizontally and vertically.

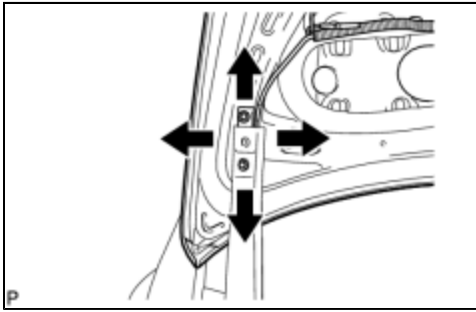

Torque: 8.0 N·m (82 kgf·cm, 71 in·lbf)

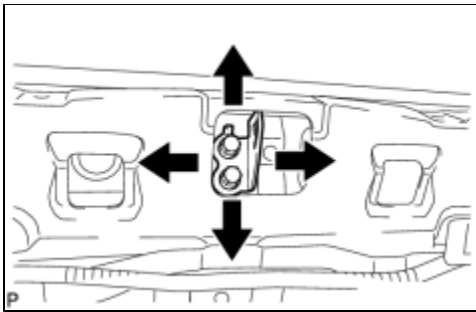

(b) Adjust the striker position by slightly loosening the striker mounting screws and hitting the striker with a plastic hammer.

(c) Tighten the striker mounting screws after the adjustment.

Torque: 5.5 N·m (56 kgf·cm, 49 in·lbf)

12. INSTALL REAR FLOOR FINISH PLATE [INFO](#)

13. INSTALL NO. 1 LUGGAGE COMPARTMENT TRIM HOOK [INFO](#)

14. INSTALL LUGGAGE HOLD BELT STRIKER ASSEMBLY [INFO](#)

15. INSTALL SPARE WHEEL COVER TRAY

16. INSTALL NO. 2 SPARE WHEEL COVER

17. INSTALL LUGGAGE COMPARTMENT FLOOR MAT

18. INSTALL LUGGAGE COMPARTMENT DOOR COVER [INFO](#)

19. INSTALL LUGGAGE COMPARTMENT DOOR INSIDE HANDLE [INFO](#)

20. INSTALL LUGGAGE LOCK CONTROL CABLE PLATE [INFO](#)

21. INSTALL LUGGAGE COMPARTMENT DOOR ASSIST GRIP [INFO](#)

