


Last Modified: 7-13-2007		1.6 A
Service Category: Vehicle Exterior	Section: Lighting (ext)	
Model Year: 2008	Model: ES350	Doc ID: RM000002CSI002X
Title: LIGHTING: HEADLIGHT ASSEMBLY: INSTALLATION (2008 ES350)		

INSTALLATION

1. INSTALL HEADLIGHT ASSEMBLY

(a) Connect the connectors.

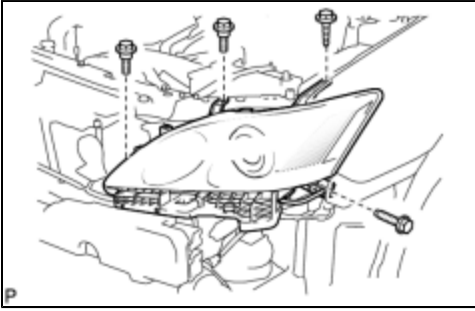

(b) Install the headlight assembly with the 3 bolts and screw.

Torque: 5.4 N·m (55 kgf·cm, 48 in·lbf)

2. INSTALL HOOD TO FRONT FENDER SEAL

3. INSTALL ENGINE ROOM SIDE COVER [INFO](#)

4. INSTALL HOOD HINGE COVER [INFO](#)

5. INSTALL FRONT BUMPER ASSEMBLY [INFO](#)

6. INSTALL COOL AIR INTAKE DUCT SEAL [INFO](#)

7. CONNECT CABLE TO NEGATIVE BATTERY TERMINAL (for HID Headlight)

8. VEHICLE PREPARATION FOR HEADLIGHT AIM ADJUSTMENT [INFO](#)

9. PREPARATION FOR HEADLIGHT AIMING (Using a headlight aim test machine) [INFO](#)

10. PREPARATION FOR HEADLIGHT AIMING (Using a Screen) [INFO](#)

11. HEADLIGHT AIMING INSPECTION [INFO](#)

12. HEADLIGHT AIMING ADJUSTMENT [INFO](#)

13. PERFORM INITIALIZATION (for HID Headlight)

NOTICE:

Some systems need initialization after reconnecting the cable to the negative battery terminal [INFO](#).

