


Last Modified: 7-13-2007		1.6 G
Service Category: Vehicle Exterior		Section: Lighting (ext)
Model Year: 2008	Model: ES350	Doc ID: RM00000197T00ZX
Title: LIGHTING: HAZARD WARNING SWITCH: INSPECTION (2008 ES350)		

## INSPECTION

### 1. INSPECT AIR CONDITION PANEL SUB-ASSEMBLY (w/o Navigation System)

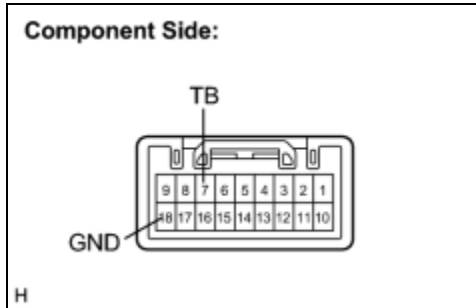


(a) Measure the resistance according to the value(s) in the table below.

Standard resistance:

TESTER CONNECTION	CONDITION	SPECIFIED CONDITION
7 (TB) - 18 (GND)	Hazard warning switch OFF	10 k $\Omega$ or higher
7 (TB) - 18 (GND)	Hazard warning switch ON	Below 1 $\Omega$

If the result is not as specified, replace the air condition panel sub-assembly.

### 2. INSPECT MULTI-DISPLAY WITH RADIO RECEIVER ASSEMBLY (w/ Navigation System)

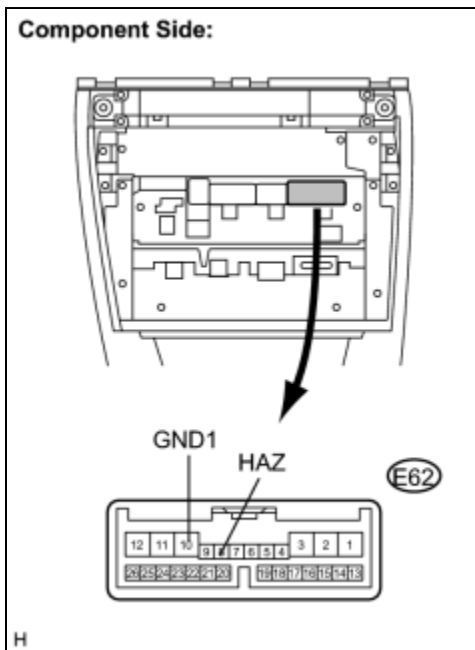

(a) Measure the resistance according to the value(s) in the table below.

Standard resistance:

TESTER CONNECTION	CONDITION	SPECIFIED CONDITION
E62-8 (HAZ) - E62-10 (GND1)	Hazard warning switch OFF	10 k $\Omega$ or higher
E62-8 (HAZ) - E62-10 (GND1)	Hazard warning switch ON	Below 1 $\Omega$

If the result is not as specified, replace the multi-display with radio receiver assembly.

