



Last Modified: 7-13-2007		1.7 A
Service Category: Vehicle Interior	Section: Mirror (int)	
Model Year: 2008	Model: ES350	Doc ID: RM000001PGI00PX
Title: MIRROR: INNER REAR VIEW MIRROR: REMOVAL (2008 ES350)		

REMOVAL

1. REMOVE INNER REAR VIEW MIRROR STAY HOLDER COVER

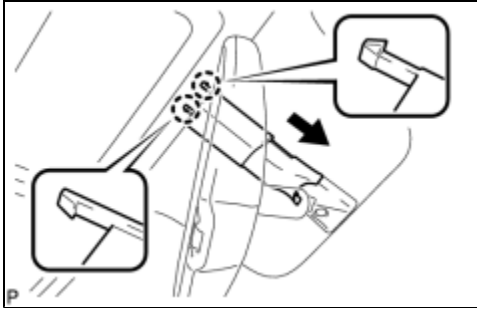


(a) Disengage the 2 claws and slide the inner rear view mirror stay holder cover as shown in the illustration.

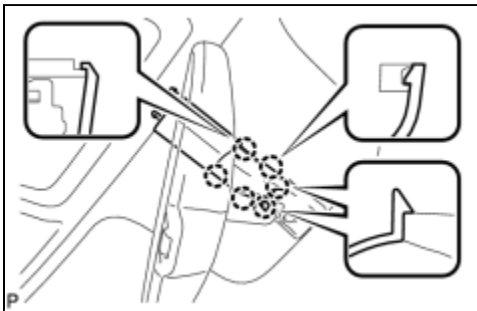

(b) Disengage the 6 claws and remove the inner rear view mirror stay holder cover.

2. REMOVE INNER REAR VIEW MIRROR ASSEMBLY

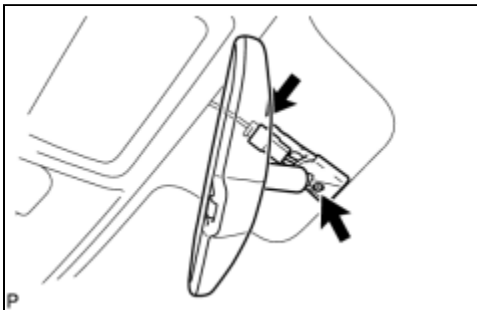

(a) Disconnect the connector.

(b) Using a "TORX" socket wrench (T20), remove the screw and the inner rear view mirror.

(c) Slide the inner rear view mirror assembly in the direction indicated by the arrow shown in the illustration to remove it.

