

Hood


Release the lock from the inside of the vehicle to open the hood.

STEP 1



Pull the hood release lever.
The hood will pop up slightly.

STEP 2

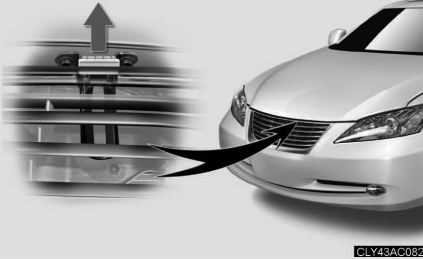

Lift the hood catch and lift the hood.

4

Maintenance and care

⚠ CAUTION

■ Pre-driving check

Check that the hood is fully closed and locked.

If the hood is not locked properly it may open while the vehicle is in motion and cause an accident, which may result in death or serious injury.

Positioning the jack


When raising your vehicle with the jack, position the jack correctly. Improper placement may damage your vehicle or cause injury.

■ Front



CLY43AC003

■ Rear

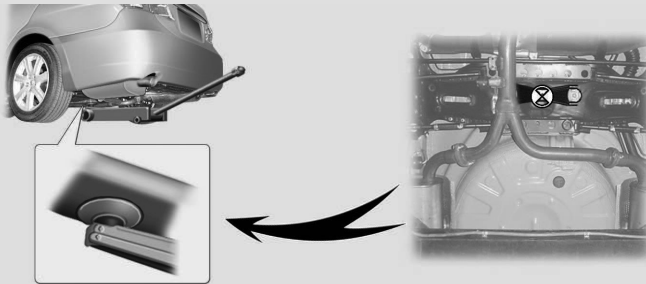

CLY43AC004

⚠ CAUTION**■ When raising your vehicle:**

Make sure to observe the following to reduce the possibility of death or serious injury.

- Do not put any part of your body or get underneath the vehicle supported only by the jack.
Always use automotive jack stands or a solid, level, surface.
- Do not start the engine while the vehicle is supported by the jack.
- Stop the vehicle on level firm ground, firmly set the parking brake and put the shift lever in P.
- Make sure to set the jack properly at the jack point.
Raising the vehicle with an improperly positioned jack will damage the vehicle and may cause the vehicle to fall off the jack.
- Do not raise the vehicle while someone is in the vehicle.
- When raising the vehicle, do not place any objects on top of or underneath the jack.

4

Maintenance and care