

Last Modified: 7-13-2007		1.6 D
Service Category: Vehicle Exterior	Section: Window/Glass	
Model Year: 2008	Model: ES350	Doc ID: RM0000011V201FX
Title: WINDSHIELD / WINDOWGLASS: POWER WINDOW CONTROL SYSTEM: INITIALIZATION (2008 ES350)		

## INITIALIZATION

### 1. INITIALIZE POWER WINDOW REGULATOR MOTOR

#### NOTICE:

- If the power window motor or power window regulator assembly is replaced, initialization is required (initialization is not necessary when the negative battery terminal is disconnected and reconnected).
- No other electrical systems should be operated during initialization. Initialization will be interrupted if a voltage drop occurs in the power being supplied to the power window motor.
- Replacing the door glass or door glass run may cause a difference to exist between the current door glass position and the position memorized in the ECU. In this case, the jam protection function may work improperly. Return the system to the pre-initialized condition and reinitialize the system.

#### HINT:

- The AUTO UP function will not work unless initialization is completed.
- The indicator on the power window master switch will blink when the engine switch is on (IG), until initialization has been completed. The indicator will remain on after initialization is successfully completed.

- Connect the negative battery terminal.
- Turn the engine switch on (IG). The indicator on the power window master switch will blink.
- Fully close the door glass by operating the power window master switch. After the door glass stops, hold the power window master switch in the AUTO UP position for 1 second or more.
- Check that the indicator on the power window master switch remains on.

#### HINT:

**If the indicator does not remain on, this means that initialization has not been completed successfully. In this case, lower the door glass at least 50 mm (1.96 in.) and hold the power window master switch in the AUTO UP position for 1 second after the window closes fully.**

### 2. TO RETURN THE SYSTEM TO THE PRE-INITIALIZED CONDITION

Disconnect the power window regulator motor connector during power window operation. This will return the motor to the pre-initialized condition.

