
Last Modified: 7-13-2007		1.6 A
Service Category: Vehicle Exterior	Section: Exterior Panels/Trim	
Model Year: 2008	Model: ES350	Doc ID: RM000002DBN002X
Title: EXTERIOR: REAR BUMPER: REASSEMBLY (2008 ES350)		

REASSEMBLY


1. INSTALL WHEEL HOUSE REINFORCEMENT LH

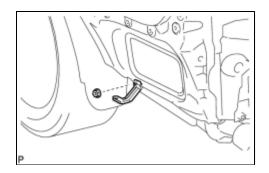

(a) Install the wheel house reinforcement LH with the nut.

2. INSTALL WHEEL HOUSE REINFORCEMENT RH

3. INSTALL REAR BUMPER SIDE SUPPORT LH

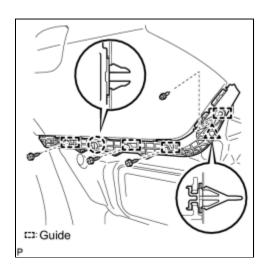


(a) Engage the clip, claw and 4 guides, and install the rear bumper side support LH.

Torque: 2.0 N·m (20 kgf·cm, 18 in·lbf)


- (b) Install the 4 screws.
- 4. INSTALL REAR BUMPER SIDE SUPPORT RH
- 5. INSTALL REAR BUMPER REINFORCEMENT

(a) Install the rear bumper reinforcement with the 6 nuts.

Torque: 68 N·m (693 kgf·cm, 50 ft·lbf)

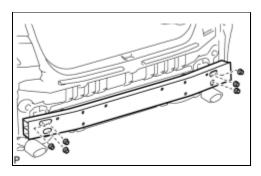


6. INSTALL REAR BUMPER ARM LH

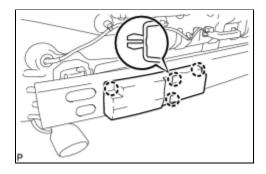

(a) Engage the 4 claws and install the rear bumper arm LH.

7. INSTALL REAR BUMPER ARM RH


8. INSTALL REAR BUMPER BAR

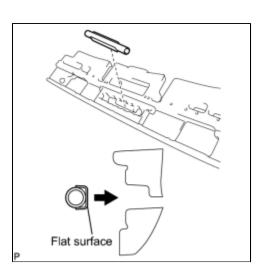

(a) Install the rear bumper bar as shown in the illustration.

9. INSTALL REAR BUMPER ENERGY ABSORBER

(a) Install the rear bumper energy absorber.

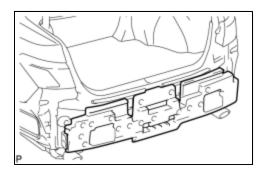

- 10. INSTALL REAR BUMPER PLATE
- 11. INSTALL LUGGAGE ROOM WIRE (w/ Intuitive Parking Assist System)
- 12. INSTALL NO. 1 ULTRASONIC SENSOR RETAINER (w/ Intuitive Parking Assist System)
- 13. INSTALL NO. 1 ULTRASONIC SENSOR (w/ Intuitive Parking Assist System)



