


Last Modified: 7-13-2007		1.6 A
Service Category: Vehicle Exterior	Section: Door/Hatch	
Model Year: 2008	Model: ES350	Doc ID: RM00000194ZOOMX
Title: ENGINE HOOD / DOOR: FUEL LID OPENER MOTOR ASSEMBLY: REMOVAL (2008 ES350)		

## REMOVAL

1. REMOVE LUGGAGE COMPARTMENT FLOOR MAT
2. REMOVE NO. 2 SPARE WHEEL COVER
3. REMOVE SPARE WHEEL COVER TRAY
4. REMOVE LUGGAGE HOLD BELT STRIKER ASSEMBLY [INFO](#)
5. REMOVE NO. 1 LUGGAGE COMPARTMENT TRIM HOOK [INFO](#)
6. REMOVE REAR FLOOR FINISH PLATE [INFO](#)
7. REMOVE LUGGAGE COMPARTMENT INNER TRIM COVER LH [INFO](#)
8. REMOVE FUEL LID OPENER MOTOR ASSEMBLY

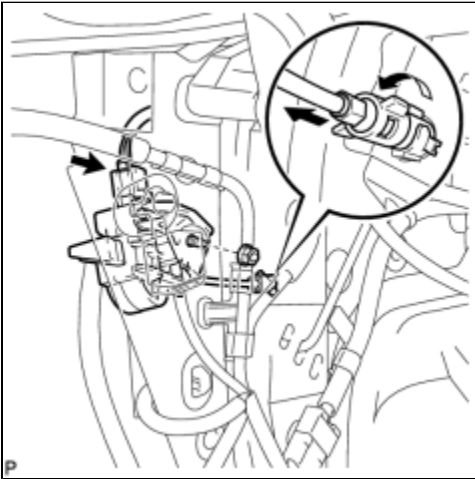

(a) Disconnect the connector.

(b) Remove the lock and nut as shown in the illustration.

(c) Remove the fuel lid with motor lock assembly.

