

Last Modified: 7-13-2007		1.6 T
Service Category: Suspension	Section: Tire Pressure Monitoring	
Model Year: 2008	Model: ES350	Doc ID: RM000000XMT01BX
Title: TIRE AND WHEEL: TIRE PRESSURE WARNING SYSTEM: PROBLEM SYMPTOMS TABLE (2008 ES350)		

PROBLEM SYMPTOMS TABLE

HINT:

- Use the table below to help determine the cause of the problem symptom. The potential causes of the symptoms are listed in order of probability in the "Suspected Area" column of the table. Check each symptom by checking the suspected areas in the order they are listed. Replace parts as necessary.
- Inspect the fuses and relays related to this system before inspecting the suspected areas below.

TIRE PRESSURE WARNING SYSTEM

SYMPTOM	SUSPECTED AREA	SEE PAGE
Tire pressure warning system does not operate.	1. Tire pressure warning valve and transmitter	-
	2. Tire pressure warning antenna and receiver	INFO
	3. Power source circuit	INFO
	4. TC and CG terminal circuit	INFO
	5. Combination meter assembly	INFO
	6. Tire pressure warning ECU	INFO
DTC check cannot be done.	1. Power source circuit	INFO
	2. TC and CG terminal circuit	INFO
	3. Tire pressure warning ECU	INFO
Tire pressure warning light malfunctions (Does not light up).	1. Power source circuit	INFO
	2. Tire pressure warning light circuit	INFO
	3. Combination meter assembly	INFO
	4. Tire pressure warning ECU	INFO
Tire pressure warning light malfunction (Remains on).	1. Tire pressure check	INFO
	2. Initialization	INFO
	3. Tire pressure warning light circuit	INFO
	4. Combination meter assembly	INFO
	5. Tire pressure warning ECU	INFO
Tire pressure warning light malfunctions (Blinking).	1. Check DTC	INFO
	2. Tire pressure warning ECU connector poorly connected	-
	3. TC and CG terminal circuit	INFO
	4. Test mode (SIGNAL CHECK)	INFO

	5. Tire pressure warning ECU	INFO
Initialization cannot be done.	1. Test mode (SIGNAL CHECK)	INFO
	2. Tire pressure warning reset switch	INFO
	3. Tire pressure warning ECU	INFO
Cannot be switched between "Main" and "2nd".	1. Tire pressure warning select switch	INFO
	2. Wire harness or connector	INFO
	3. Tire pressure warning ECU	INFO

