

Last Modified: 7-13-2007		1.6 A
Service Category: Engine/Hybrid System	Section: Fuel System	
Model Year: 2008	Model: ES350	Doc ID: RM0000011R600JX
Title: 2GR-FE FUEL: FUEL PRESSURE PULSATION DAMPER: REMOVAL (2008 ES350)		

## REMOVAL

### 1. DISCHARGE FUEL SYSTEM PRESSURE

#### HINT:



### 2. DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL

#### NOTICE:

When disconnecting the cable, some systems need to be initialized after the cable is reconnected .

### 3. DRAIN ENGINE COOLANT

### 4. REMOVE COOL AIR INTAKE DUCT SEAL

### 5. REMOVE ENGINE ROOM SIDE COVER LH

### 6. REMOVE ENGINE ROOM SIDE COVER RH


### 7. REMOVE FRONT SUSPENSION CENTER UPPER BRACE

### 8. REMOVE V-BANK COVER SUB-ASSEMBLY

### 9. REMOVE AIR CLEANER CAP SUB-ASSEMBLY

### 10. REMOVE INTAKE AIR SURGE TANK ASSEMBLY

### 11. REMOVE FUEL PRESSURE PULSATION DAMPER ASSEMBLY

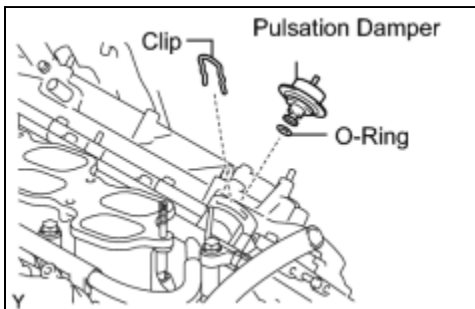

(a) Remove the clip.

(b) Pull out the fuel pressure pulsation damper from the fuel delivery pipe.

(c) Remove the O-ring from the fuel pressure pulsation damper.

