
Last Modified: 7-13-2007		1.6 A
Service Category: Engine/Hybrid System	Section: Fuel System	
Model Year: 2008	Model: ES350	Doc ID: RM000001IR400JX
Title: 2GR-FE FUEL: FUEL PRESSURE PULSATION DAMPER: INSTALLATION (2008 ES350)		

## INSTALLATION

## 1. INSTALL FUEL PRESSURE PULSATION DAMPER ASSEMBLY

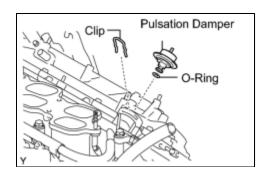

- (a) Apply a light coat of spindle oil or gasoline to a new O-ring and install it to the fuel pressure pulsation damper.
- (b) Install the fuel pressure pulsation damper to the fuel delivery pipe.
- (c) Install the clip.
- 2. INSTALL INTAKE AIR SURGE TANK ASSEMBLY
- 3. INSTALL AIR CLEANER CAP SUB-ASSEMBLY
- 4. ADD ENGINE COOLANT
- 5. CONNECT CABLE TO NEGATIVE BATTERY TERMINAL

## **NOTICE:**

When disconnecting the cable, some systems need to be initialized after the cable is reconnected

- 6. INSPECT FOR COOLANT LEAK
- 7. INSPECT FOR FUEL LEAK
- 8. INSTALL V-BANK COVER SUB-ASSEMBLY
- 9. INSTALL FRONT SUSPENSION CENTER UPPER BRACE
- 10. INSTALL ENGINE ROOM SIDE COVER RH
- 11. INSTALL ENGINE ROOM SIDE COVER LH
- 12. INSTALL COOL AIR INTAKE DUCT SEAL NEO