

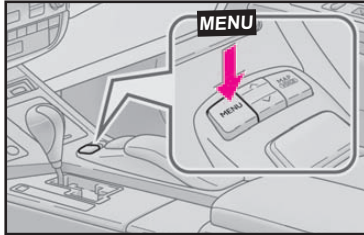 
# Lexus Personalized Settings

Your vehicle includes a variety of electronic features that can be programmed to your preferences. Programming of these features is performed once at no charge by your Lexus Dealer provided you obtain the service at the 6 month/5,000-mile scheduled maintenance service.

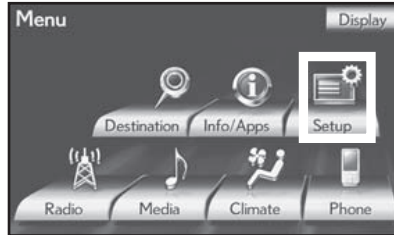 


It is also possible to customize certain vehicle features yourself using the navigation system.

## Vehicles with Navigation system:



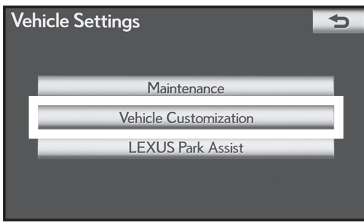 
**STEP 1** Press the **MENU** button.



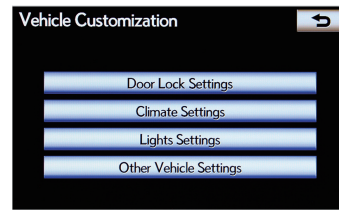 
**STEP 2** Select  using the Remote Touch unit and push knob to select.



**STEP 3** Select  and push knob to select.



**STEP 4** Select **Vehicle Customization** and push knob to select.

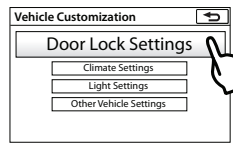

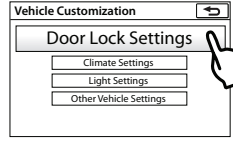

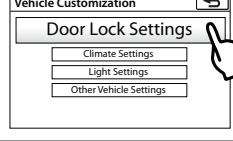

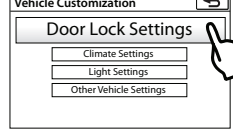



**STEP 5** Select category and scroll to specific customization setting.

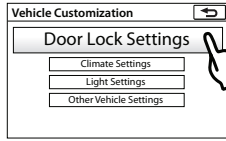

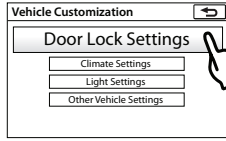

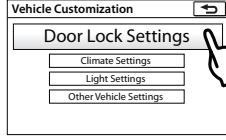

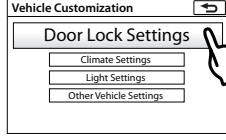

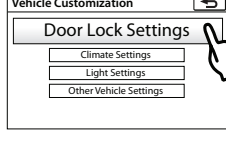









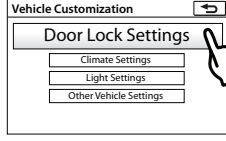








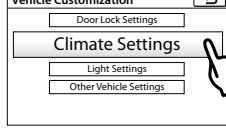

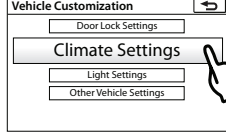

Vehicle must be in "ON" mode to program personalized settings.

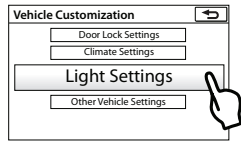

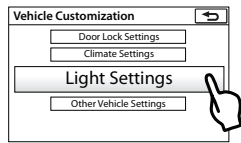

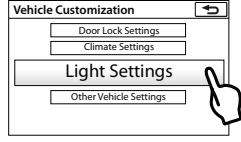

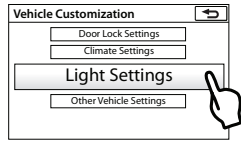

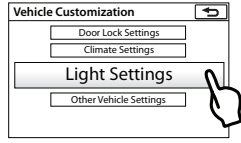

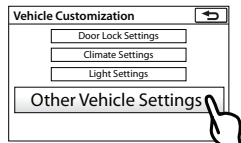



After changing the settings, select .













Please refer to the 2013 ES 350 Quick Guide, or Navigation Owner's Manual for more information on Remote Touch operations.










	Settings that can be customized by:	
	Using the navigation system	Dealer
<h3>Door Lock Settings</h3> <p><b>1. Auto Lock by Speed</b> When the vehicle reaches 13 mph:</p> <ul style="list-style-type: none"> <li><input type="checkbox"/> The doors will not lock. (Standard) = Off</li> <li><input type="checkbox"/> All the doors will automatically lock. = On</li> </ul>		
<p><b>2. Auto Lock by Shift from P</b> When the vehicle is taken out of park and placed into another range:</p> <ul style="list-style-type: none"> <li><input type="checkbox"/> The doors, if unlocked, will not automatically lock. = Off</li> <li><input type="checkbox"/> The doors automatically lock. (Standard) = On</li> </ul>		
<p><b>3. Auto Unlock by Shift to P</b> When the engine is running and the vehicle is placed into park:</p> <ul style="list-style-type: none"> <li><input type="checkbox"/> All the doors will remain locked. = Off</li> <li><input type="checkbox"/> All the doors will automatically unlock. (Standard) = On</li> </ul>		
<p><b>4. Auto Unlock by Driver Door</b> When the vehicle is turned off and the driver door is opened within 10 seconds:</p> <ul style="list-style-type: none"> <li><input type="checkbox"/> All of the remaining doors will remain locked. (Standard) = Off</li> <li><input type="checkbox"/> All of the remaining doors will automatically unlock. = On</li> </ul>		

LPS options were correct at time of development. All options are subject to change without prior notice.

<u>Door Lock Settings (cont'd)</u>	Using the system	Dealer
<p><b>5. Unlock on Second Key Turn</b>                      When using the mechanical key to unlock the doors:</p> <ul style="list-style-type: none"> <li><input type="checkbox"/> Turning the key one time will unlock all doors. = Off</li> <li><input type="checkbox"/> Turning the key one time unlocks the driver door, and two times unlocks all doors. (Standard) = On</li> </ul>		
<p><b>6. Remote 2-Press Unlock</b>                      When using the electronic key to unlock the doors:</p> <ul style="list-style-type: none"> <li><input type="checkbox"/> Pressing the unlock button one time will unlock all doors. = Off</li> <li><input type="checkbox"/> Pressing the unlock button one time unlocks the driver door, and two times unlocks all doors. (Standard) = On</li> </ul>		
<p><b>7. Select Doors to Unlock</b>                      When pressing the unlock button one time on the electronic key:</p> <ul style="list-style-type: none"> <li><input type="checkbox"/> All doors will unlock (Option # 6 Remote 2-Press Unlock must be Off). = All</li> <li><input type="checkbox"/> Only driver door unlocks (Option # 6 Remote 2-Press Unlock must be On). (Standard) = Driver</li> </ul>		
<p><b>8. Auto Relock Timer</b>                      When the unlock button on the electronic key is pressed and the doors are not opened:</p> <ul style="list-style-type: none"> <li><input type="checkbox"/> The doors will automatically re-lock in 30 seconds.</li> <li><input type="checkbox"/> The doors will automatically re-lock in 60 seconds. (Standard)</li> <li><input type="checkbox"/> The doors will automatically re-lock in 120 seconds.</li> </ul>		
<p><b>9. Lock/Unlock Feedback - Lights</b>                      Using the electronic key, the following functions can be programmed:</p> <ul style="list-style-type: none"> <li><input type="checkbox"/> Press the lock/unlock button and the emergency flashers will not flash. = Off</li> <li><input type="checkbox"/> Press the lock/unlock button and the emergency flashers will flash. (Standard) = On</li> </ul>		
<p><b>10. Lock/Unlock Feedback-Tone</b>                      When the lock button is pressed on the electronic key, the system volume can be programmed as follows:</p> <div style="display: flex; justify-content: space-around; align-items: center;"> <div style="text-align: center;"> off</div> <div style="text-align: center;"> volume 1</div> <div style="text-align: center;"> volume 2</div> <div style="text-align: center;"> volume 3</div> <div style="text-align: center;"> volume 4</div> <div style="text-align: center;"> volume 5 (standard)</div> <div style="text-align: center;"> volume 6</div> <div style="text-align: center;"> volume 7</div> </div>		
<b><u>Climate Settings</u></b>		
<p><b>11. Smog Sensor Sensitivity</b>                      When in AUTO recirculation mode, the sensor will determine when to switch from outside air to recirculated air based on outside air quality:</p> <div style="display: flex; justify-content: space-around; align-items: center;"> <div style="text-align: center;"> lowest sensitivity</div> <div style="text-align: center;"> sensitivity 2</div> <div style="text-align: center;"> sensitivity 3</div> <div style="text-align: center;"> normal (standard)</div> <div style="text-align: center;"> sensitivity 5</div> <div style="text-align: center;"> sensitivity 6</div> <div style="text-align: center;"> highest sensitivity</div> </div>		
<p><b>12. Auto A/C Mode</b>                      When Auto A/C is selected:</p> <ul style="list-style-type: none"> <li><input type="checkbox"/> It will automatically engage the air conditioner compressor to reach the set temperature. (Standard) = On</li> <li><input type="checkbox"/> It will automatically achieve a set temperature, warm or cool, without engaging the air conditioner compressor.* = Off</li> </ul> <p>* Note: The AC compressor will be engaged when the auto AC button is pressed a second time.</p>		

	Using the navigation system	Dealer
<p><b>Light Settings</b></p> <p><b>13. Headlamps-ON Sensitivity</b> When driving the vehicle, the front headlights can be programmed to turn ON under darker or lighter ambient light conditions. (Headlight switch must be in "AUTO" mode):</p> <p> <input type="radio"/> very dark              <input type="radio"/> dark              <input type="radio"/> normal (standard)              <input type="radio"/> light              <input type="radio"/> very light         </p>		
<p><b>14. Headlamps Auto-OFF timer</b> After turning off the ignition and all the doors are closed, if the headlights are in the AUTO position:</p> <p> <input type="checkbox"/> The headlights will turn off immediately, when the vehicle is turned off and the driver door is opened.  <input type="checkbox"/> The headlights will turn off in 30 seconds. (Standard)  <input type="checkbox"/> The headlights will turn off in 60 seconds.  <input type="checkbox"/> The headlights will turn off in 90 seconds.         </p>		
<p><b>15. Daytime Running Lights</b> Illumination of daytime running lights:</p> <p> <input type="checkbox"/> OFF.  <input type="checkbox"/> ON. (Standard)         </p>		
<p><b>16. Interior Lights Off Timer</b> After closing the door, the interior lights can be adjusted to stay on for the following:</p> <p> <input type="checkbox"/> 15 seconds. (Standard)  <input type="checkbox"/> 7.5 seconds.  <input type="checkbox"/> 30 seconds.         </p>		
<p><b>17. Exterior Lights Off Timer</b> After closing the door, the exterior lights can be adjusted to stay on for the following:</p> <p> <input type="checkbox"/> 15 seconds. (Standard)  <input type="checkbox"/> 7.5 seconds.  <input type="checkbox"/> 30 seconds.  <input type="checkbox"/> 0 seconds.         </p>		
<p><b>Other Vehicle Settings</b></p> <p><b>18. Driver's Seat Easy Exit</b> When the vehicle is placed in park, the ignition turned off, the driver seat can be set to the following:</p> <p> <input type="checkbox"/> Remain in the current position, as set by the driver. = Off  <input type="checkbox"/> Automatically move away from the steering wheel partially. = Partial  <input type="checkbox"/> Automatically move away from the steering wheel fully. = Full (Standard)         </p>		
<p><b>Programmable by Dealer Only</b></p> <p><b>19. Access System with Elec. Key</b> When unlocking the doors:</p> <p> <input type="checkbox"/> Deactivates SmartAccess, only accessible using elec. key unlock button. = Off  <input type="checkbox"/> Use SmartAccess (touch door handle) or remote buttons. (Standard)= On         </p>	<p>_____</p>	 Dealer only
<p><b>20. Efficient Ventilation Mode</b> When the front defogger is activated:</p> <p> <input type="checkbox"/> It will automatically blow air onto the windshield without engaging the air conditioner compressor. = Off  <input type="checkbox"/> It will automatically engage the air conditioner compressor to blow air onto the windshield. (Standard)= On         </p>	<p>_____</p>	 Dealer only

<u>Programmable by Dealer Only (cont'd)</u>	Using the navigation system	Dealer
<p><b>21. Instrument Dim. Sensitivity</b> Level of light required to dim the instrument panel lights:</p> <p>  </p>	_____	 Dealer only
<p><b>22. Instrument Rest. Sensitivity</b> Level of light required to brighten the instrument panel lights:</p> <p>  </p>	_____	 Dealer only
<p><b>23. Interior light</b> The interior light will illuminate when POWER is switched to OFF.</p> <p> <input type="checkbox"/> On. (Standard) = On  <input type="checkbox"/> Off. = Off         </p>	_____	 Dealer only
<p><b>24. Illumination of the interior cabin light when unlocking door</b> When using the electronic key or mechanical key to unlock the door, the interior cabin light can be programmed for the following:</p> <p> <input type="checkbox"/> The cabin light will illuminate. (Standard) = On  <input type="checkbox"/> The cabin light will not illuminate. = Off         </p>	_____	 Dealer only
<p><b>25. Illumination of the interior cabin light when approaching the vehicle</b> When approaching the vehicle with the electronic key, the interior cabin light can be programmed for the following:</p> <p> <input type="checkbox"/> The cabin light will illuminate. (Standard) = On  <input type="checkbox"/> The cabin light will not illuminate. = Off         </p>	_____	 Dealer only
<p><b>26. Foot lights</b> When using the electronic key to unlock the doors:</p> <p> <input type="checkbox"/> The outer foot lights will illuminate. (Standard) = On  <input type="checkbox"/> The outer foot lights will not illuminate. = Off         </p>	_____	 Dealer only
<p><b>27. Panic mode</b> When pressing the panic button on the electronic key:</p> <p> <input type="checkbox"/> The alarm will sound intermittently and the vehicle lights will flash. (Standard) = On  <input type="checkbox"/> The alarm will not sound and the vehicle lights will not flash. = Off         </p>	_____	 Dealer only
<p><b>28. Door lock buzzer</b> When the lock button on the electronic key is pressed and a door is not fully closed:</p> <p> <input type="checkbox"/> The buzzer will not sound. = Off  <input type="checkbox"/> The buzzer will sound. (Standard) = On         </p>	_____	 Dealer only
<p><b>29. Open Windows with Elec. Key</b> When pressing the unlock button on the electronic key for 3 seconds:</p> <p> <input type="checkbox"/> The windows will not roll down. (Standard) = Off  <input type="checkbox"/> All the windows will roll down. = On         </p>	_____	 Dealer only
<p><b>30. Open windows warning*</b> When pressing the unlock button on the electronic key for 3 seconds to roll down the windows:</p> <p> <input type="checkbox"/> The buzzer will not sound. = Off  <input type="checkbox"/> The buzzer will sound. (Standard) = On            * Option #29 must be on.         </p>	_____	 Dealer only

Programmable by Dealer Only (cont'd)	Using the navigation system	Dealer
<b>31. Slide/Tilt Moonroof with Elec. Key</b> When option #29 is on, the moonroof can be programmed for the following: <input type="checkbox"/> Slide. (Standard) <input type="checkbox"/> Tilt.	_____	 Dealer only
<b>32. Opening windows using key</b> When using the mechanical key to operate the windows: <input type="checkbox"/> Turning the key right and holding the position for 2 seconds will not open the windows. (Standard) = Off <input type="checkbox"/> Turning the key right and holding the position for 2 seconds will open the windows. = On	_____	 Dealer only
<b>33. Slide/Tilt Moonroof using Key</b> When option #32 is on, the moonroof can be programmed for the following: <input type="checkbox"/> Slide. (Standard) <input type="checkbox"/> Tilt.	_____	 Dealer only
<b>34. Tilt Away of Steering Wheel</b> When the vehicle is placed in park, the ignition turned off, the steering wheel can be set to the following: <input type="checkbox"/> Automatically move up and away from the driver position setting. (Standard) = On <input type="checkbox"/> Remain in the current position, as set by the driver. = Off	_____	 Dealer only
<b>35. Opening the Trunk</b> By pressing on the trunk release button, located on the electronic key, the trunk will open. The release button can be programmed as follows: <input type="checkbox"/> Press button one time to release the trunk. (No delay) <input type="checkbox"/> Press button two times to release the trunk. <input type="checkbox"/> Press and hold button for 0.8 seconds to release the trunk. (Standard) <input type="checkbox"/> Press and hold button for 2 seconds to release the trunk. <input type="checkbox"/> The button can be turned off so the trunk cannot be opened using the electronic key.	_____	 Dealer only
<b>36. Automatic Rear Sunshade*</b> The rear sunshade automatically lowers when the shift lever is shifted into reverse: <input type="checkbox"/> ON. (Standard) <input type="checkbox"/> OFF *if equipped.	_____	 Dealer only
<b>37. Rear Sunshade Reverse Timer*</b> When the vehicle is placed into reverse, the sunshade automatically lowers in: <input type="checkbox"/> 0.7 seconds (Standard) <input type="checkbox"/> 1.2 seconds <input type="checkbox"/> 0.9 seconds <input type="checkbox"/> 0 seconds *if equipped.	_____	 Dealer only
<b>38. Lane change flasher volume</b> When the turn signal is flashing, the volume can be programmed: <input type="checkbox"/> Medium (Standard) <input type="checkbox"/> Soft <input type="checkbox"/> Loud	_____	 Dealer only
<b>39. Lane Change Signal Flashes</b> Push the turn signal lever partway to signal a lane change, it will flash: <input type="checkbox"/> OFF <input type="checkbox"/> 3 Times (Standard) <input type="checkbox"/> 5 Times <input type="checkbox"/> 7 Times	_____	 Dealer only

Date \_\_\_\_\_ Customer Signature \_\_\_\_\_

Repair Order Number (Dealer only)

Vehicle Identification Number (Dealer only)