


FOG LIGHT

FROM POWER SOURCE SYSTEM (SEE PAGE 58)

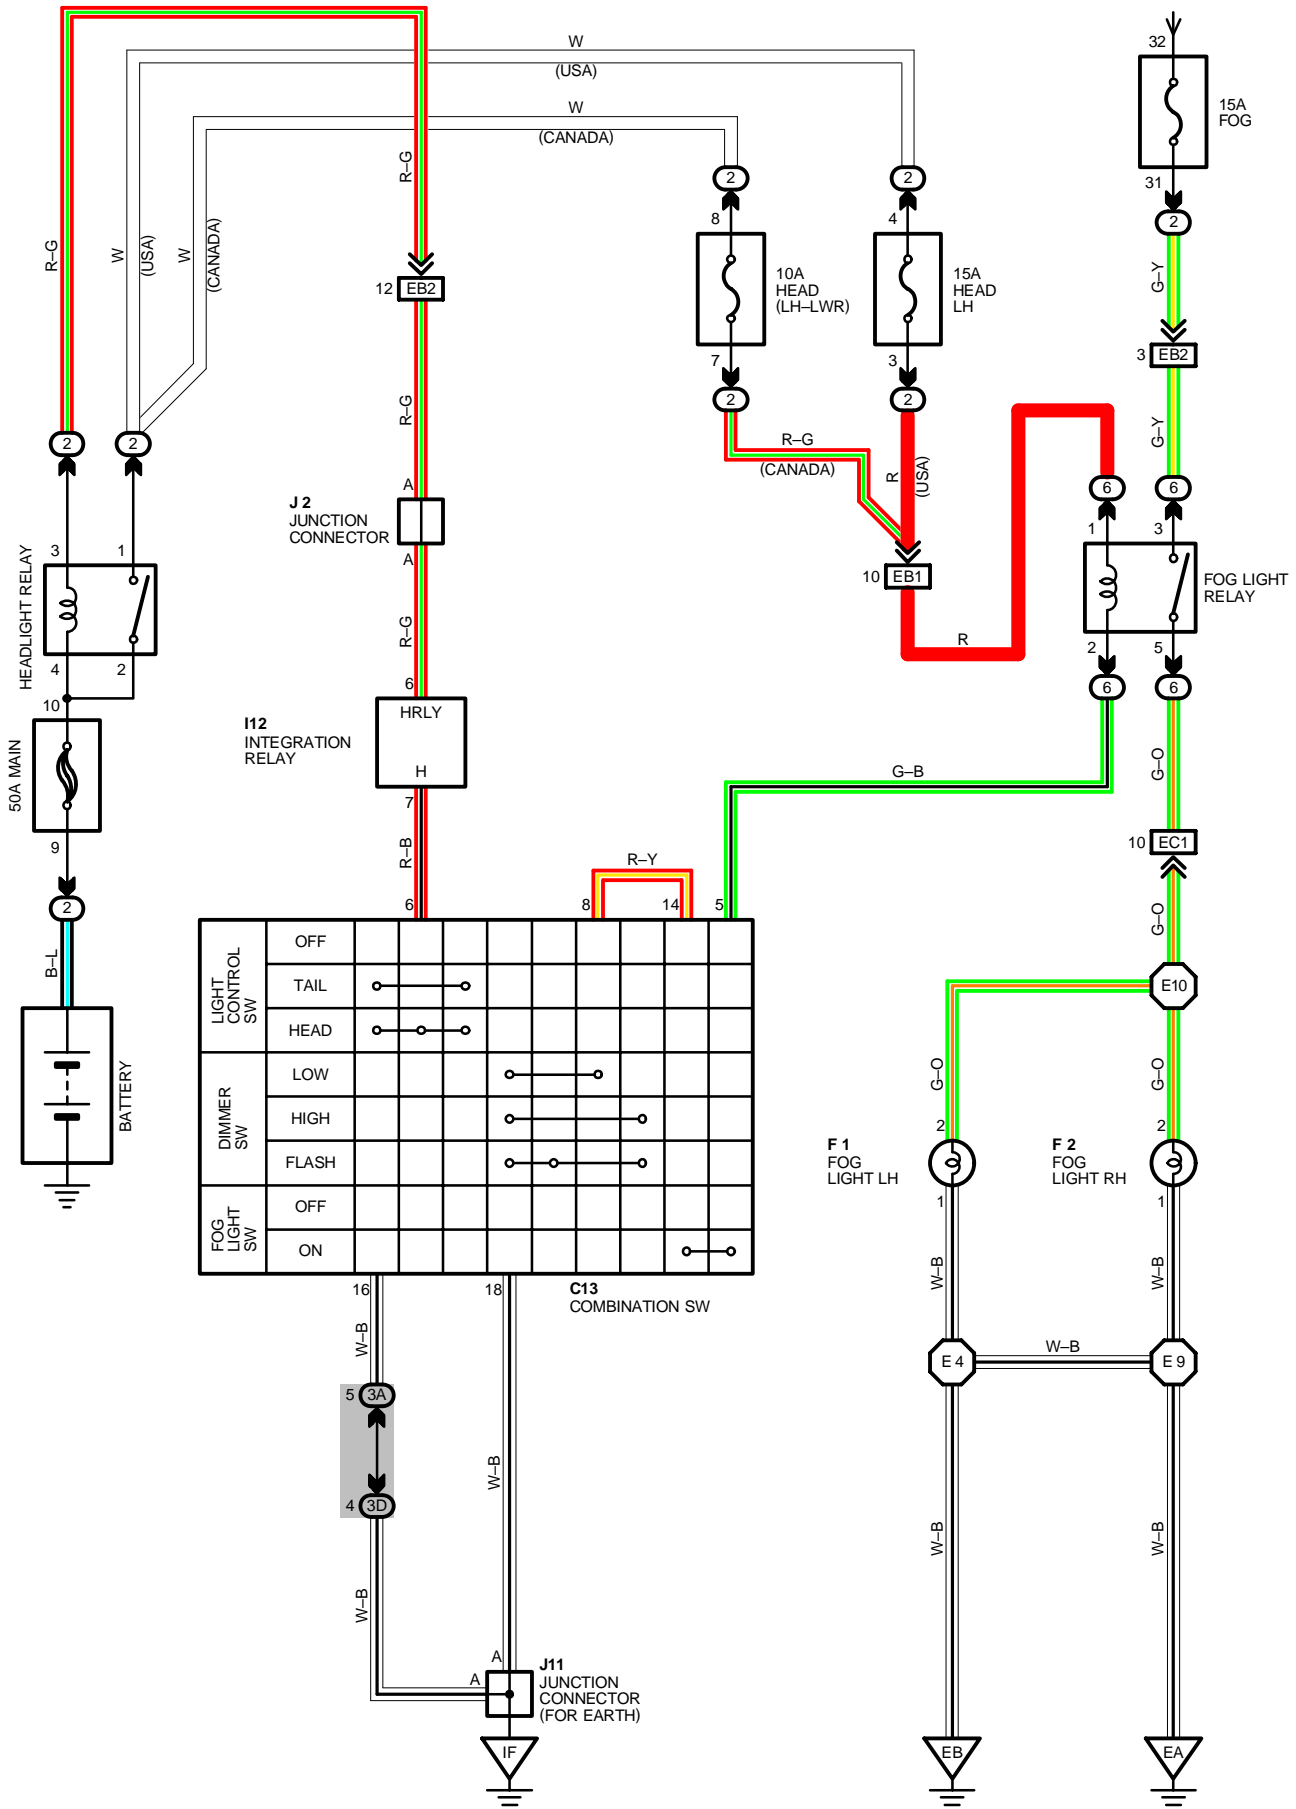

SERVICE HINTS

FOG LIGHT RELAY

(6) 3- (6) 5 : CLOSED WITH LIGHT CONTROL SW AT **HEAD** POSITION, DIMMER SW AT **LOW** POSITION AND FOG LIGHT SW **ON** POSITION

○ : PARTS LOCATION

CODE	SEE PAGE	CODE	SEE PAGE	CODE	SEE PAGE
C13	28	F 2	26	J 2	29
F 1	26	I12	29	J11	29

○ : RELAY BLOCKS

CODE	SEE PAGE	RELAY BLOCKS (RELAY BLOCK LOCATION)
2	19	R/B NO. 2 (ENGINE COMPARTMENT LEFT)
6	24	R/B NO. 6 (LEFT KICK PANEL)

○ : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

CODE	SEE PAGE	JUNCTION BLOCK AND WIRE HARNESS (CONNECTOR LOCATION)
3A	22	COWL WIRE AND J/B NO. 3 (BEHIND THE INSTRUMENT PANEL CENTER)
3D		

□ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

CODE	SEE PAGE	JOINING WIRE HARNESS AND WIRE HARNESS (CONNECTOR LOCATION)
EB1	34	COWL WIRE AND R/B NO. 2 WIRE (INSIDE OF R/B NO. 2)
EB2		
EC1	34	COWL WIRE AND ENGINE ROOM MAIN WIRE (INSIDE OF R/B NO. 2)


▽ : GROUND POINTS

CODE	SEE PAGE	GROUND POINTS LOCATION
EA	34	FRONT SIDE OF RIGHT FENDER
EB	34	FRONT SIDE OF LEFT FENDER
IF	36	BEHIND COMBINATION METER

○ : SPLICE POINTS

CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS	CODE	SEE PAGE	WIRE HARNESS WITH SPLICE POINTS
E 4	34	ENGINE ROOM MAIN WIRE	E10	34	ENGINE ROOM MAIN WIRE
E 9					

C13

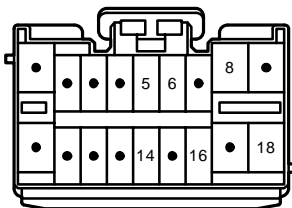


F 1 BLACK




F 2 BLACK



I12

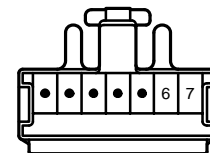


J 2

 

(HINT : SEE PAGE 7)

J11

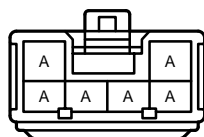

(HINT : SEE PAGE 7)