

Where is the fuel and the coolant going to spill from?

This is the fuel line, right?

Where am I disconnecting this?





Where are the two starter bolts?  
Particularly where is the  
hard to reach one?  
Do I need to remove these?

