



# EVAPORATOR REMOVAL

AC0X2-01

1. REMOVE A/C UNIT  
(See page AC-24)
2. REMOVE HEATER RADIATOR  
(See page AC-55)

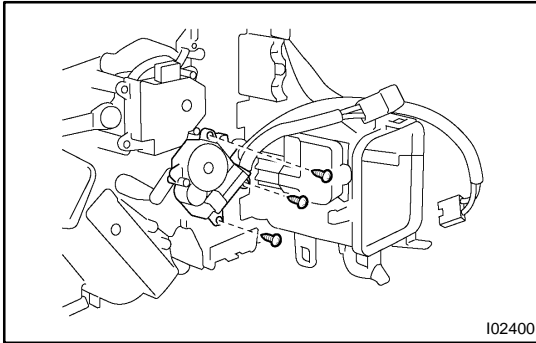

3. REMOVE AIR MIX SERVOMOTOR PASSENGER SIDE
  - (a) Disconnect the connector.
  - (b) Remove the 3 screws and servomotor.

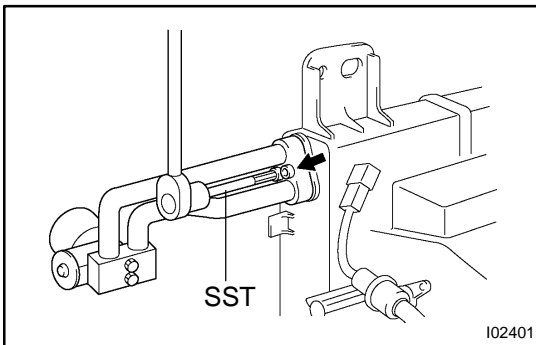

4. REMOVE TUBE AND ACCESSORY
  - (a) Pry out packing.

HINT:  
At the time of installation, please refer to the following item.  
Do not reuse the packing.

  - (b) Using SST, remove the 2 bolts and the tube and accessory.  
SST 07110-61050  
**Torque: 4.1 N·m (42 kgf·cm, 36 in.-lbf)**


**NOTICE:**

**Cap the open fittings immediately to keep moisture or dirt out of the system.**

**HINT:**

At the time of installation, please refer to the following item.  
Lubricate 2 new O-rings with compressor oil and install them to the tube.

- (c) Remove screw and drain pipe.

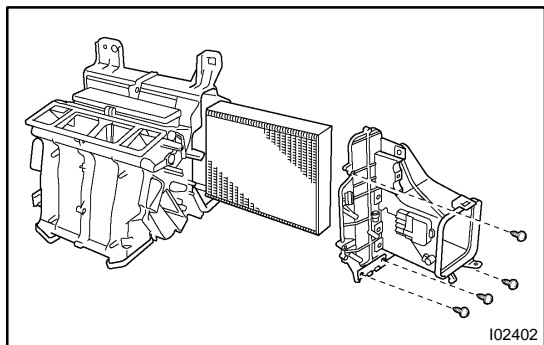**5. REMOVE EVAPORATOR**

- (a) Disconnect the connector from blower motor control relay.
- (b) Remove the screw and drain hose.
- (c) Remove the 4 screws and cover.
- (d) Pull out the evaporator.

**HINT:**

At the time of installation, please refer to the following item.  
If evaporator is replaced, add compressor oil to evaporator.

**Add 40 cc (1.4 fl. oz.)**

**Compressor oil: ND-OIL 8 or equivalent**