

DIAGNOSTIC TROUBLE CODE CHART

If a DTC is displayed during the DTC check, check the circuit listed in the table below and proceed to the page given.

DTC No. (See Page)	Detection Item	Trouble Area	*1PWR Indicator Light Blink	*2Memory
P0500/42 (DI-186)	Vehicle Speed Sensor Malfunction	<ul style="list-style-type: none"> • Open or short in vehicle speed sensor circuit • Vehicle speed sensor • Combination meter • Engine & ECT ECU • Automatic Transmission Assembly 	○	○
P0710/38 (DI-170)	Transmission Fluid Temperature Sensor Circuit Malfunction (ATF Temperature Sensor)	<ul style="list-style-type: none"> • Open or short in ATF temperature sensor circuit • ATF temperature sensor circuit • Engine & ECT ECU 	○	○
P0715/67 (DI-172)	Input/Turbine Speed Sensor Circuit Malfunction (O/D Direct Clutch Speed Sensor)	<ul style="list-style-type: none"> • Open or short in O/D direct clutch speed sensor circuit • O/D direct clutch speed sensor • Engine & ECT ECU • Automatic Transmission Assembly 	○	○
P0753/62 (DI-175)	Shift Solenoid "A" Electrical Malfunction (No.1 Solenoid Valve)	<ul style="list-style-type: none"> • Open or short No.1 solenoid valve circuit • No.1 solenoid valve • Engine & ECT ECU 	○	○
P0758/63 (DI-175)	Shift Solenoid "B" Electrical Malfunction (No.2 Solenoid Valve)	<ul style="list-style-type: none"> • Open or short No.2 solenoid valve circuit • No.2 solenoid valve • Engine & ECT ECU 	○	○
P0763/76 (DI-175)	Shift Solenoid "C" Electrical Malfunction (No.3 Solenoid Valve)	<ul style="list-style-type: none"> • Open or short No.3 solenoid valve circuit • No.3 solenoid valve • Engine & ECT ECU 	○	○
P0768/65 (DI-181)	Shift Solenoid "D" Electrical Malfunction (No.4 Solenoid Valve)	<ul style="list-style-type: none"> • Open or short No.4 solenoid valve circuit • No.4 solenoid valve • Engine & ECT ECU 	○	○
P1755/68 (DI-184)	Linear Solenoid for Lock-up Control Circuit Malfunction (SLU Solenoid Valve)	<ul style="list-style-type: none"> • Open or short in SLU solenoid valve circuit • SLU solenoid valve • Engine & ECT ECU 	X	○
P1760/77 (DI-186)	Linear Solenoid for Line Pressure Control Circuit Malfunction (SLT Solenoid Valve)	<ul style="list-style-type: none"> • Open or short in SLT solenoid valve circuit • SLT solenoid valve • Engine & ECT ECU 	X	○
P1765/46 (DI-189)	Linear Solenoid for Accumulator Pressure Control Circuit Malfunction (SLN Solenoid Valve)	<ul style="list-style-type: none"> • Open or short in SLN solenoid valve circuit • SLN solenoid valve • Engine & ECT ECU 	X	○
P1780/97 (DI-192)	Park/Neutral Position Switch Malfunction (Neutral Start Switch)	<ul style="list-style-type: none"> • Short in neutral start switch circuit • Neutral start switch • Engine & ECT ECU 	○	○

*1: "○" mark means PWR indicator light blinks once every 2 seconds.

"X" mark means PWR indicator light never blinks.

*2: "○" mark means Engine & ECT ECU memorizes the malfunction code if the Engine & ECT ECU detects the DTC detection condition.

HINT:

This DTC may be output when the clutch, brake and gear components etc. inside the automatic transmission are damaged.