
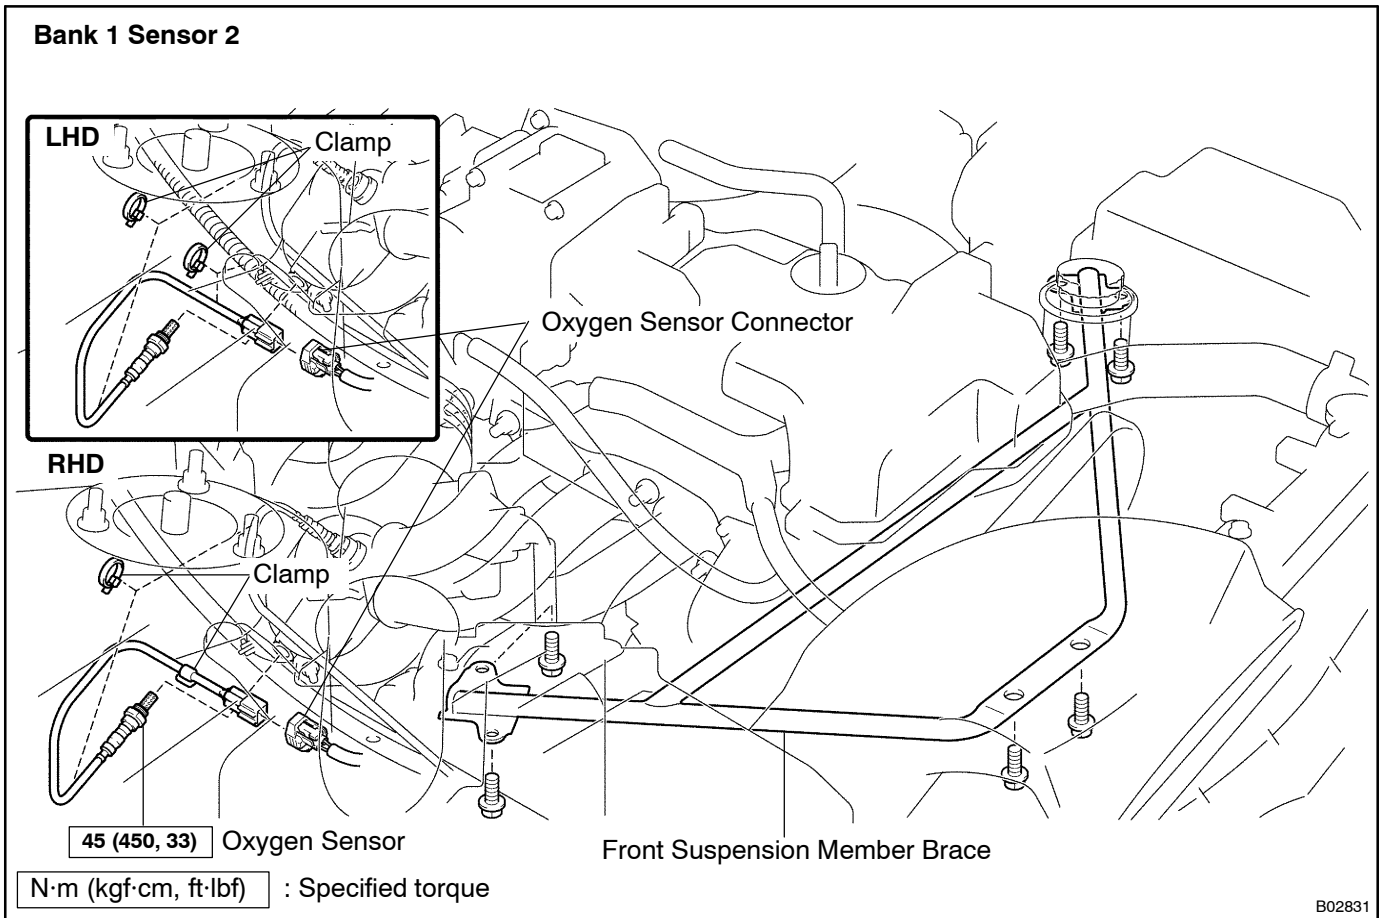


# OXYGEN SENSOR (Except G.C.C. Countries)


SFO0B-02

## COMPONENTS

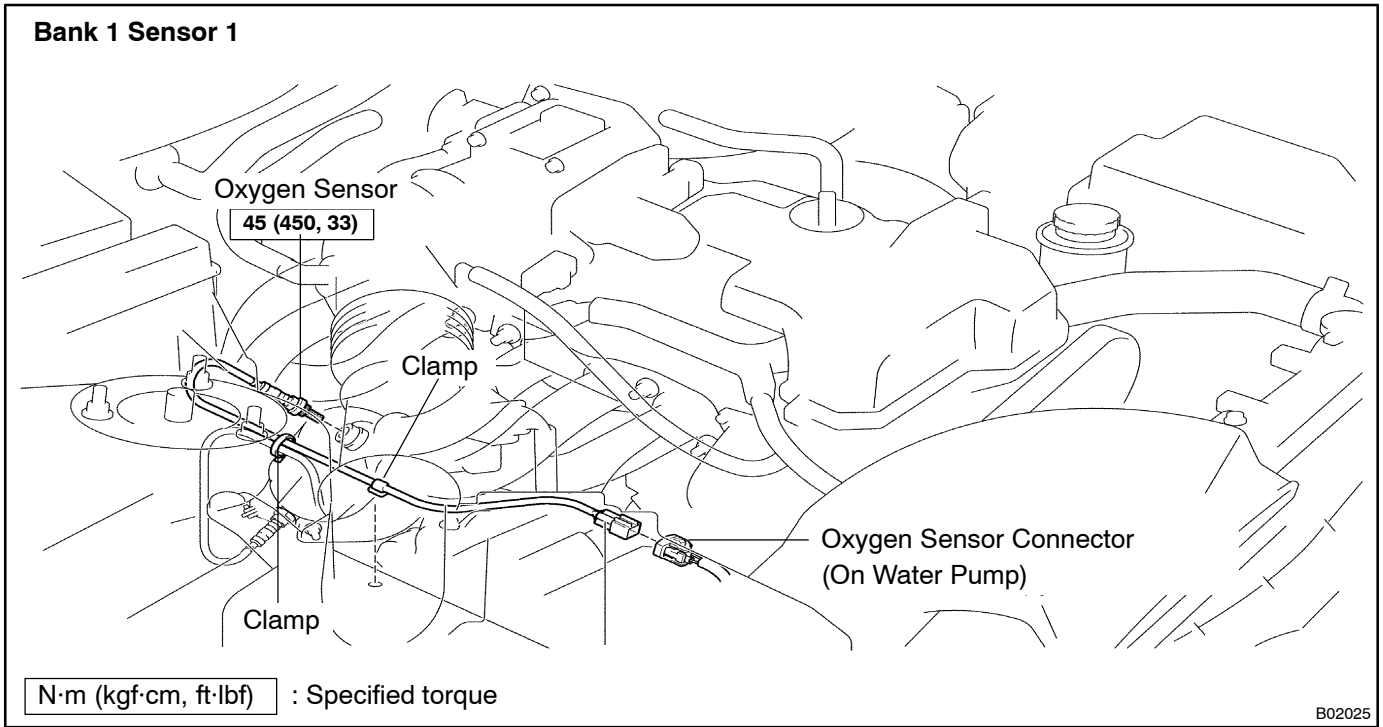



**Bank 2 Sensor 1**

Air Cleaner, Air Flow Meter and Intake Air Resonator Assembly

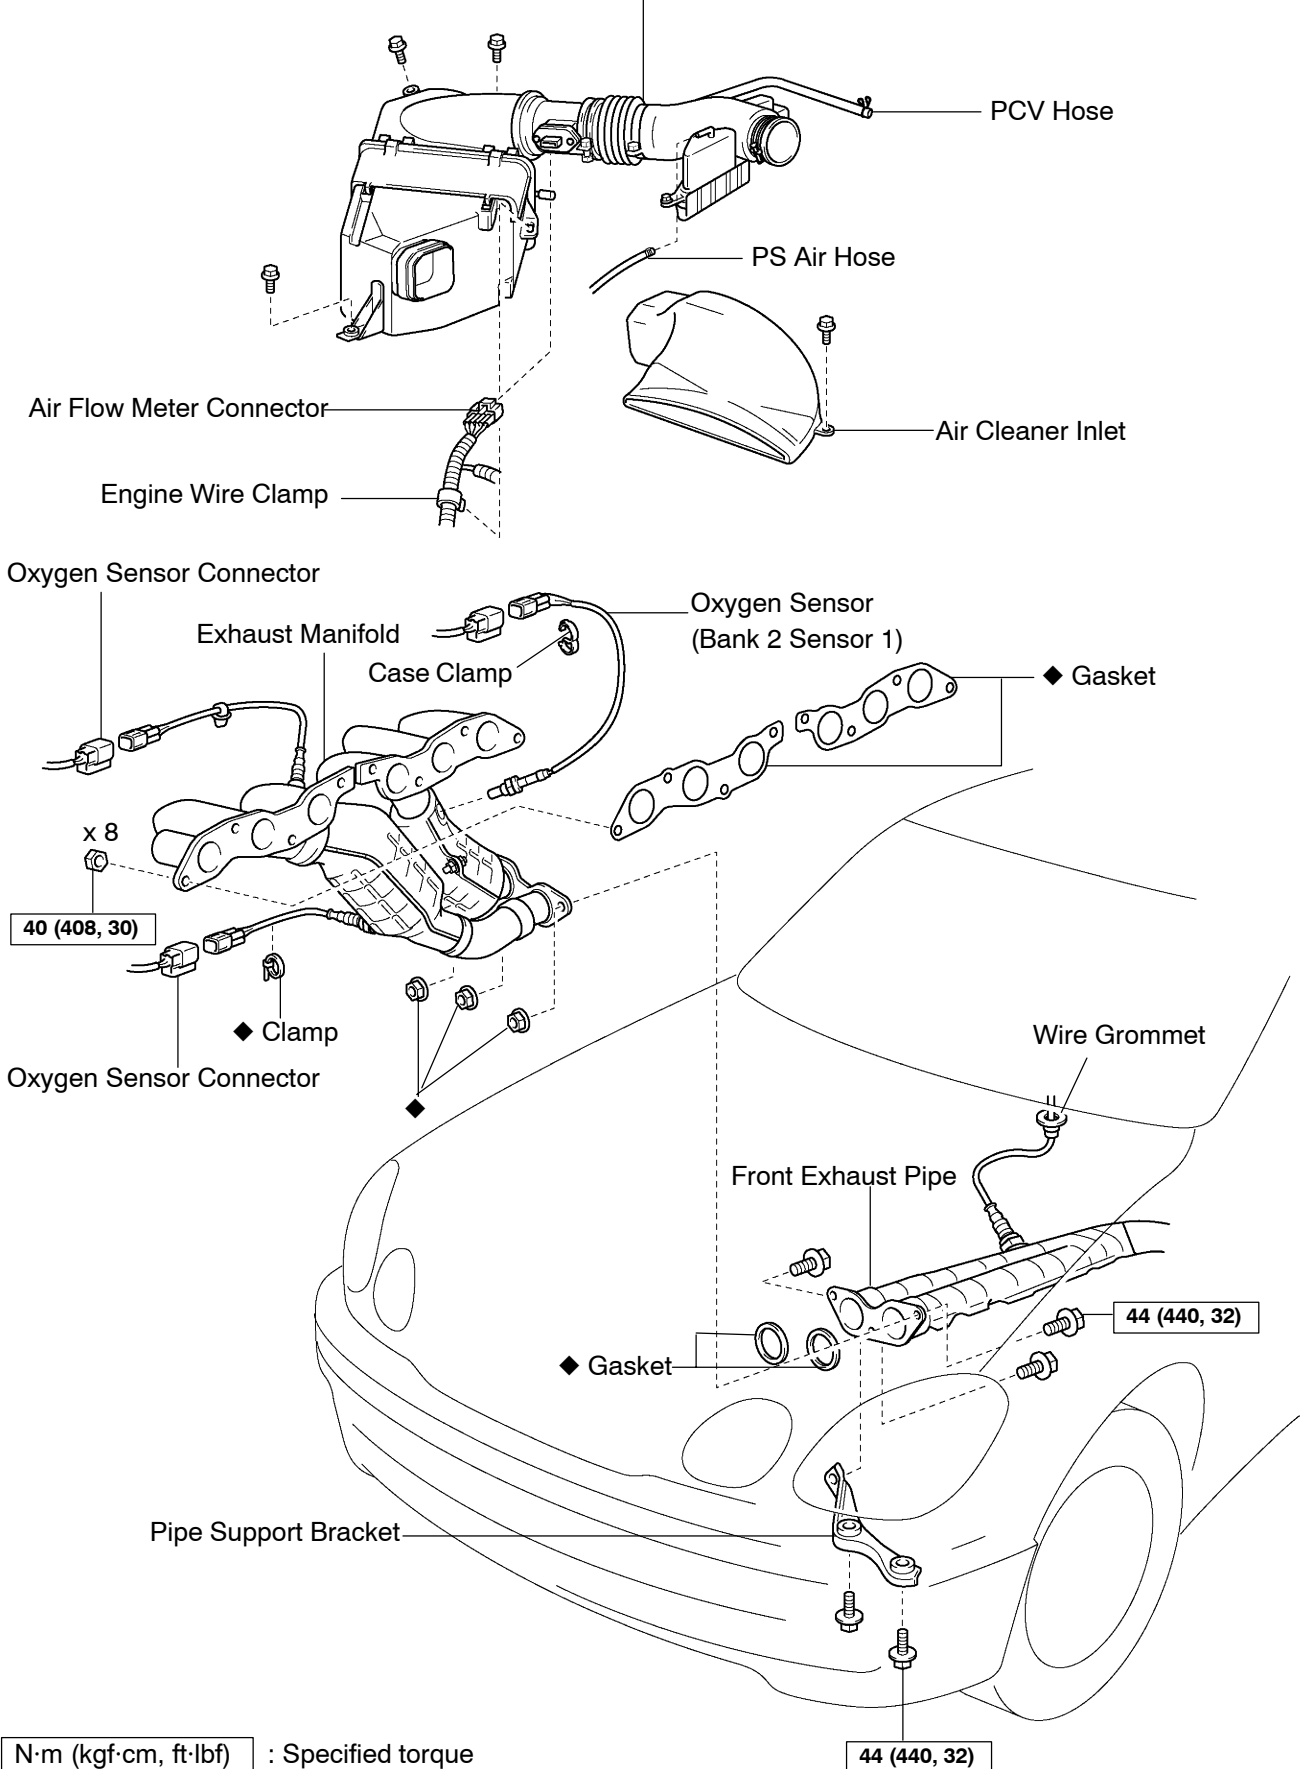

**N·m (kgf·cm, ft·lbf)** : Specified torque  
 ◆ Non-reusable part

Bank 2 Sensor 2

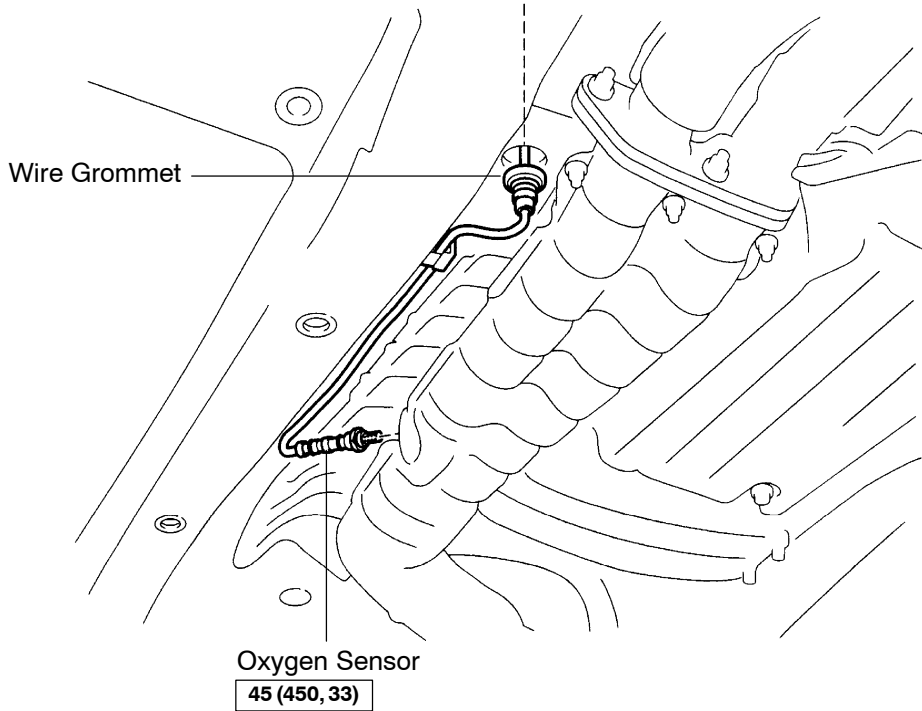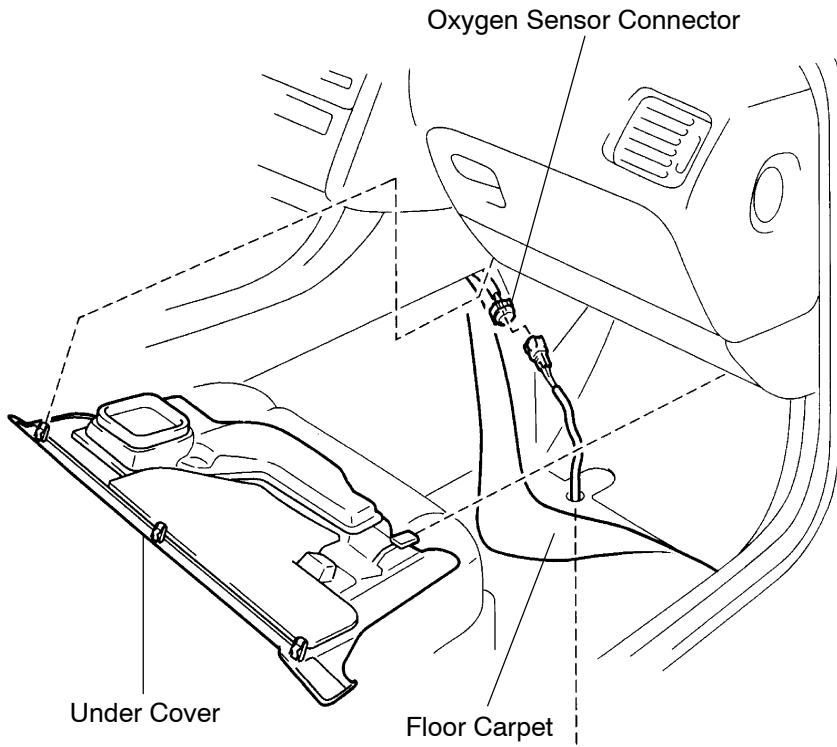

N·m (kgf·cm, ft·lbf) : Specified torque