


Last Modified: 12-22-2008	5.1 A	From: 200501
Model Year: 2006	Model: GS300	Doc ID: RM000000XRD000X
Title: LIGHTING: AFS ECU: REMOVAL (2006 GS300 GS430)		

REMOVAL

1. DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL

Wait at least 90 seconds after disconnecting the cable from the negative (-) battery terminal to prevent airbag and seat belt pretensioner activation.

2. REMOVE FRONT DOOR SCUFF PLATE

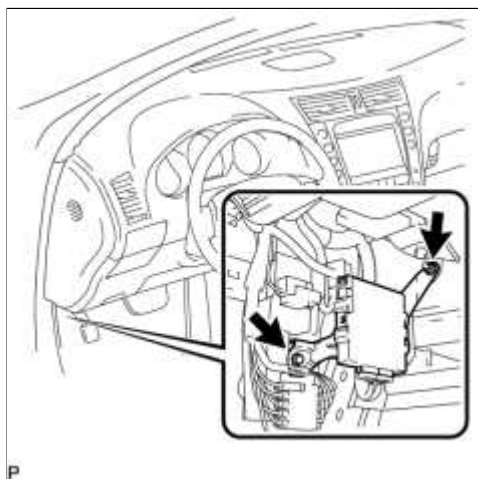

3. REMOVE HEADLIGHT SWIVEL ECU ASSEMBLY

- (a) Disconnect the connector.
- (b) Remove the bolt, nut and ECU.

