

[Select Vehicle](#) | [New TSBs](#) | [Technician's Reference](#)

Component Search:

OK


 Conversion Calculator

**2006 Lexus GS 430 V8-4.3L (3UZ-FE)**

[Vehicle Level](#) → [Power and Ground Distribution](#) → [Fusible Link](#) → [Locations](#) ←

### Locations


Engine Room R/B, J/B No.1-Near The Battery

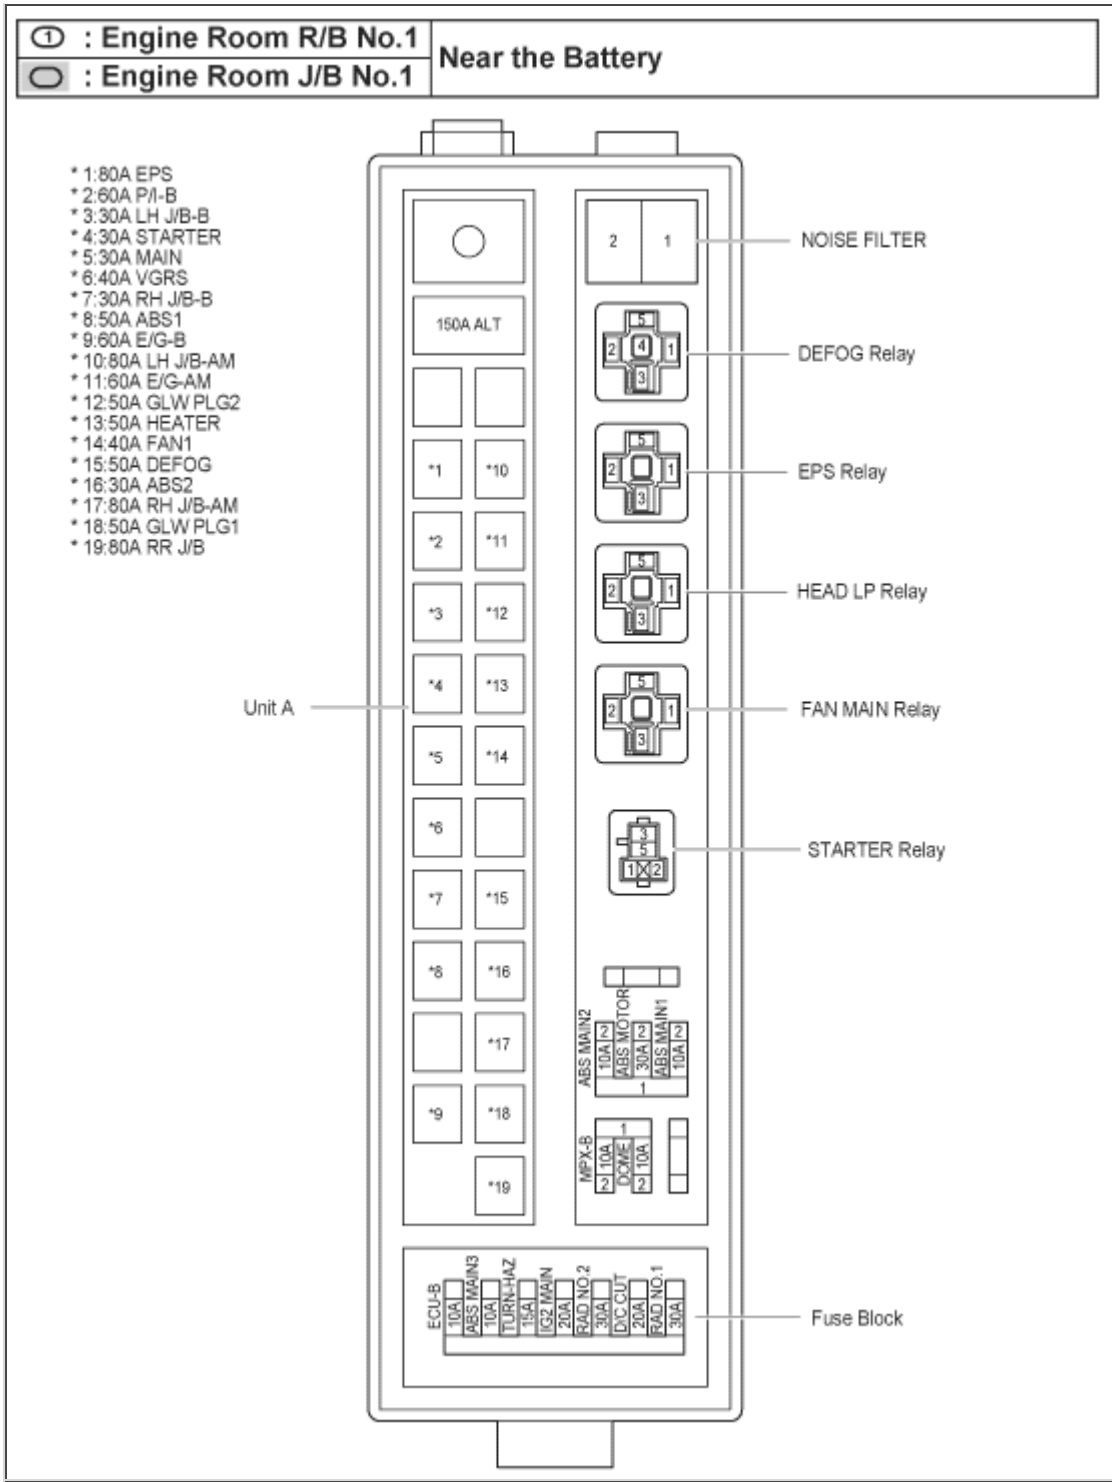

Zoom

Sized for Print


Engine Room R/B, J/B No.2-Engine Compartment

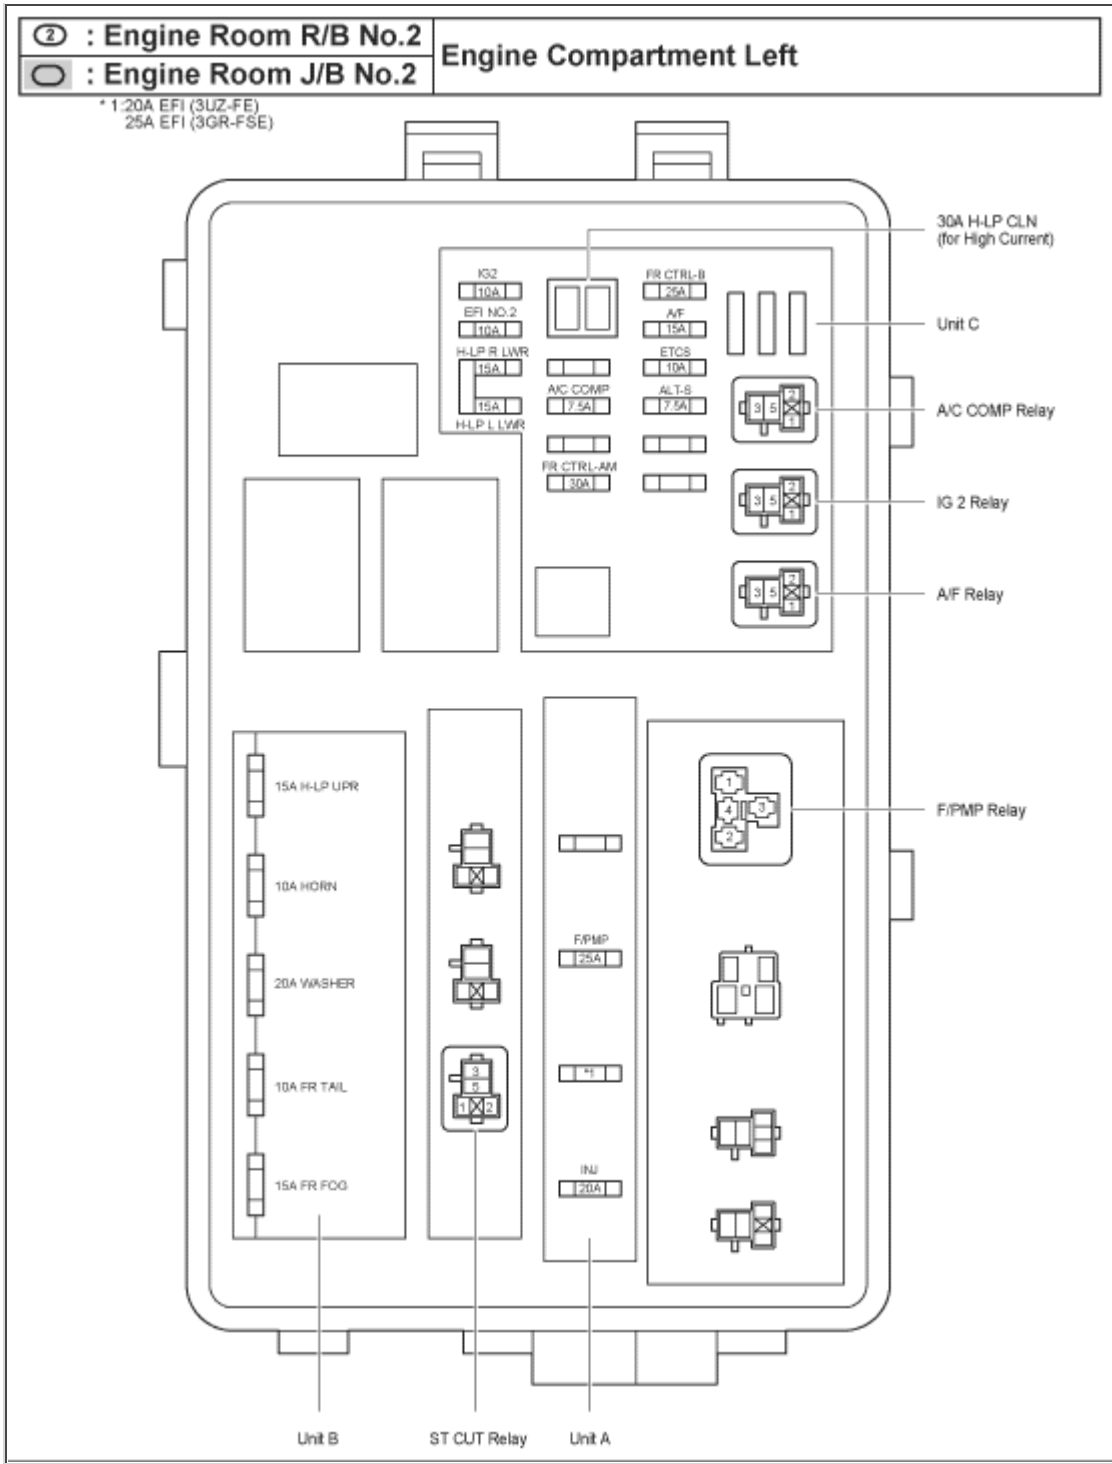

Zoom

Sized for Print


Cowl Side J/B LH-Cowl Side Left

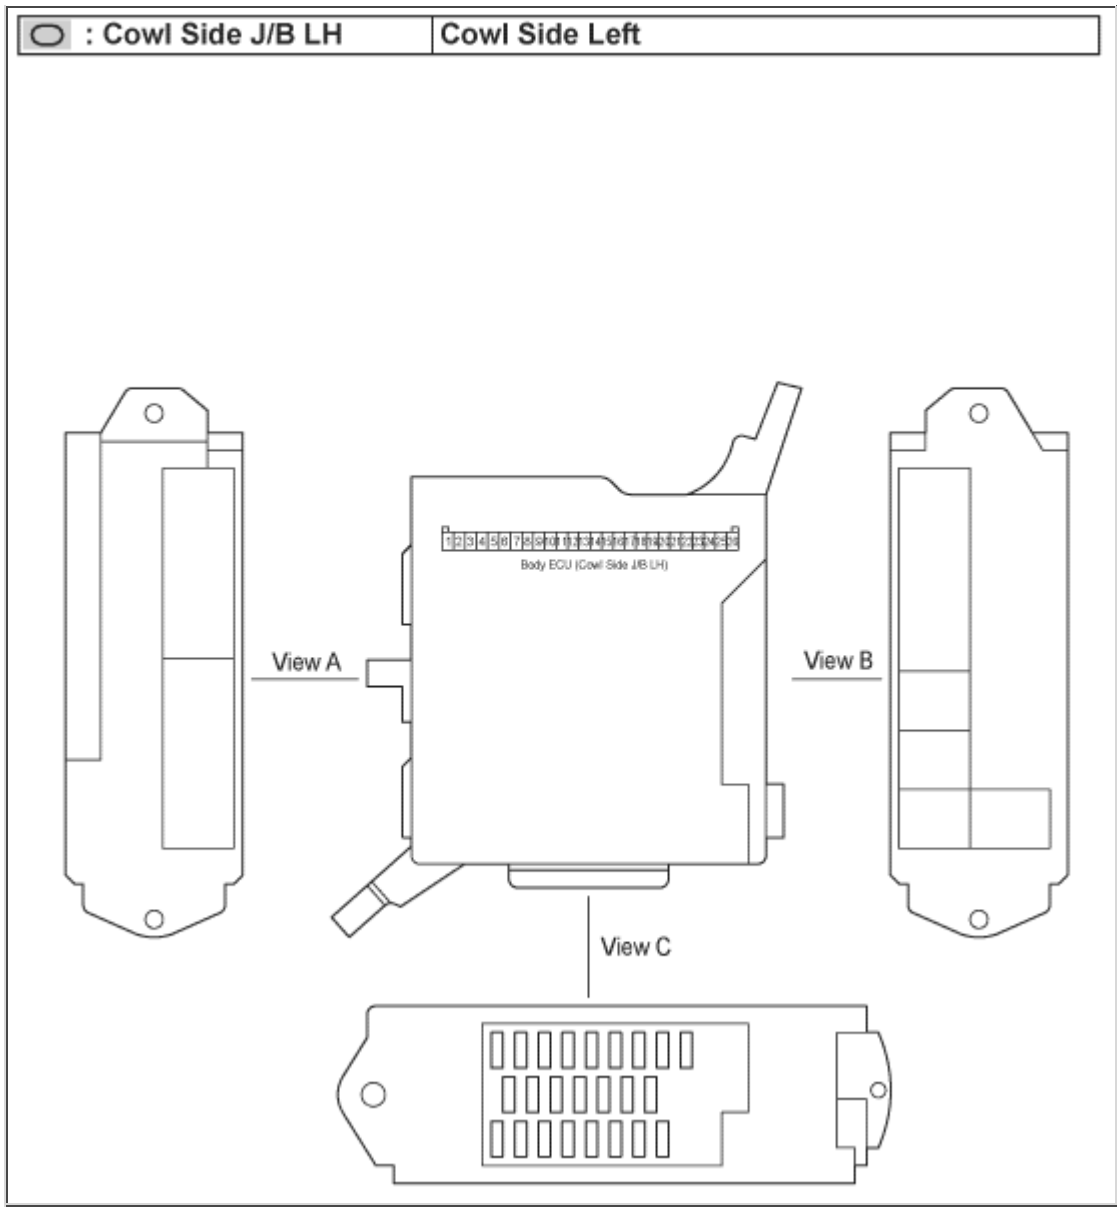

Zoom

Sized for Print


Cowl Side J/B RH-Cowl Side Right

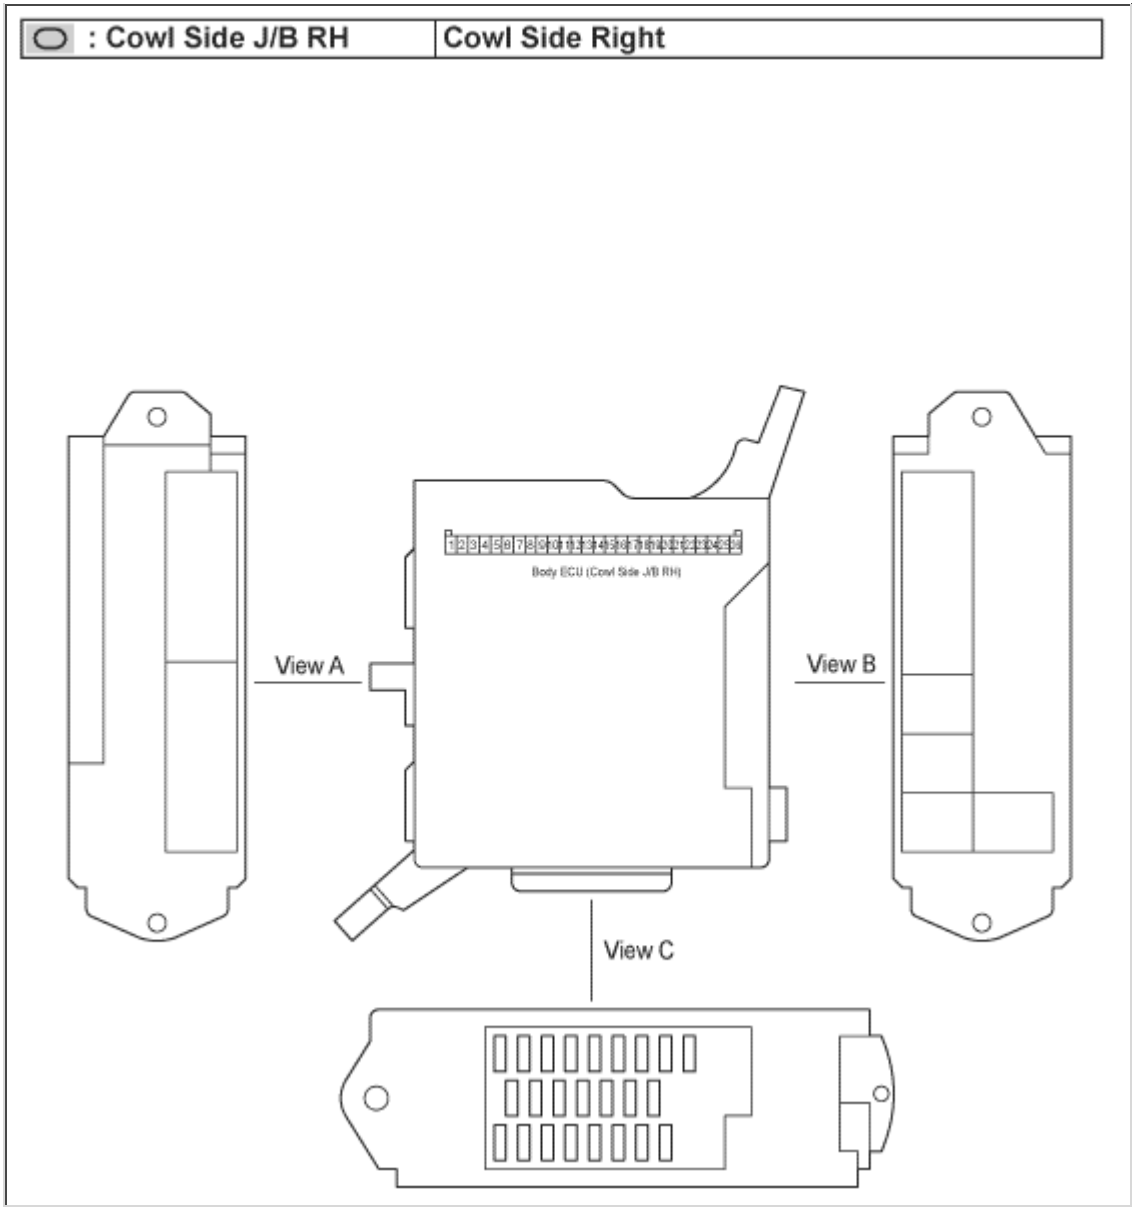

Zoom

Sized for Print


Engine Room R/B 1

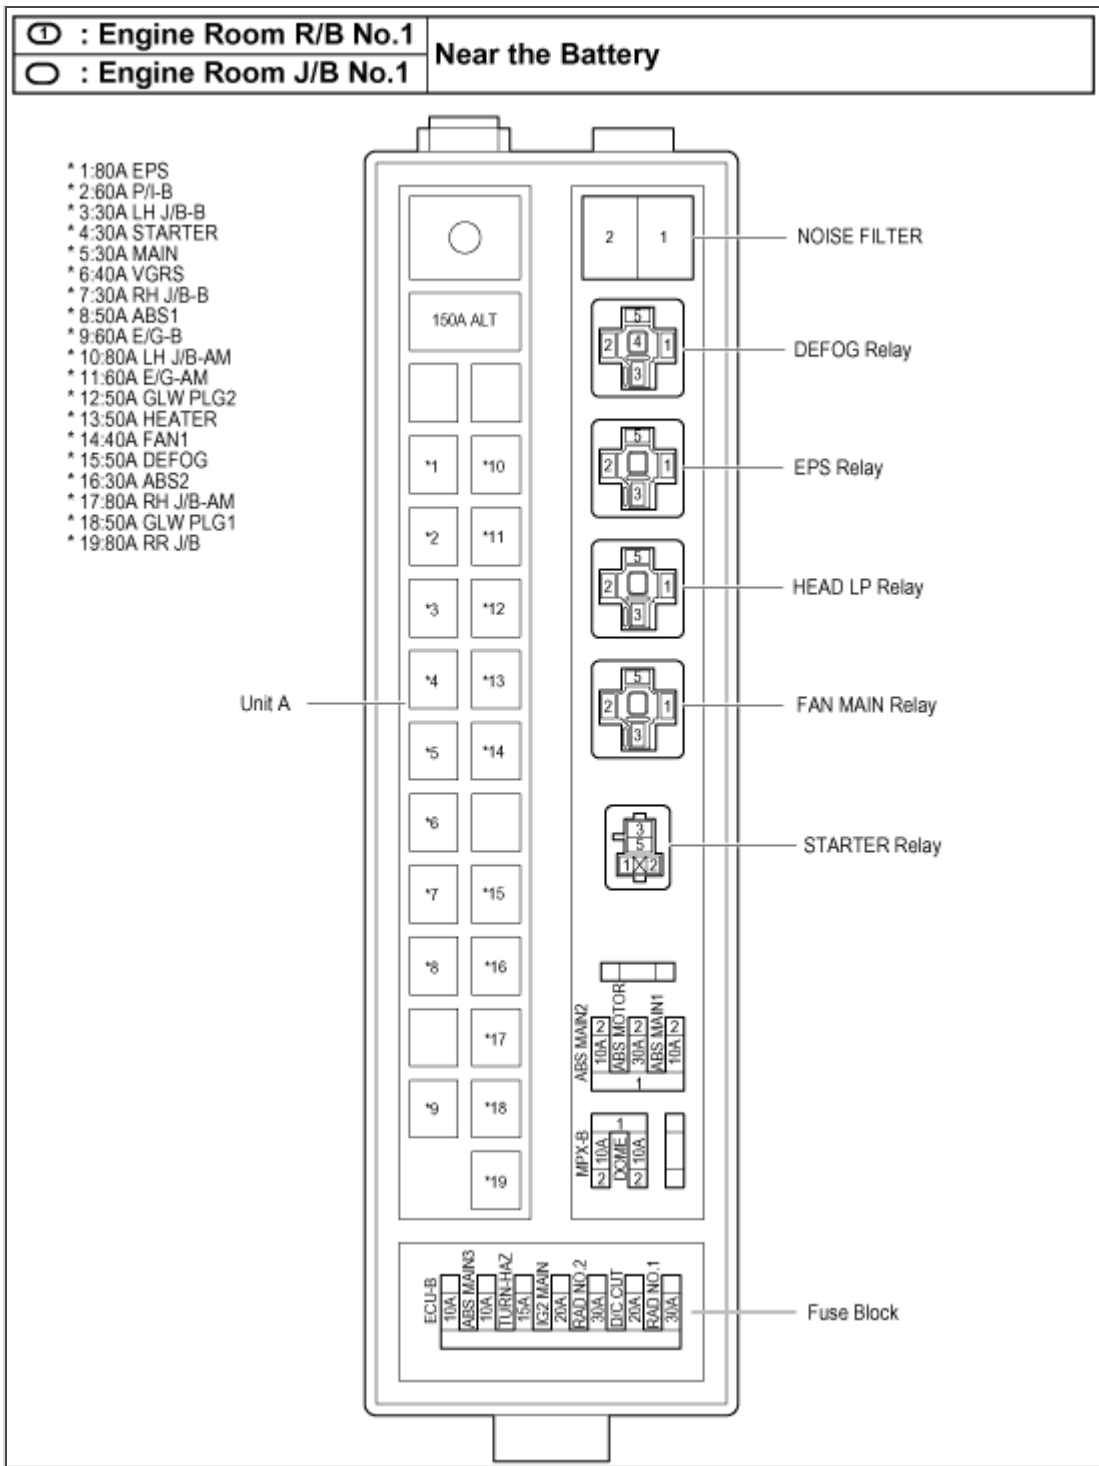

Zoom

Sized for Print


Engine Room R/B 2

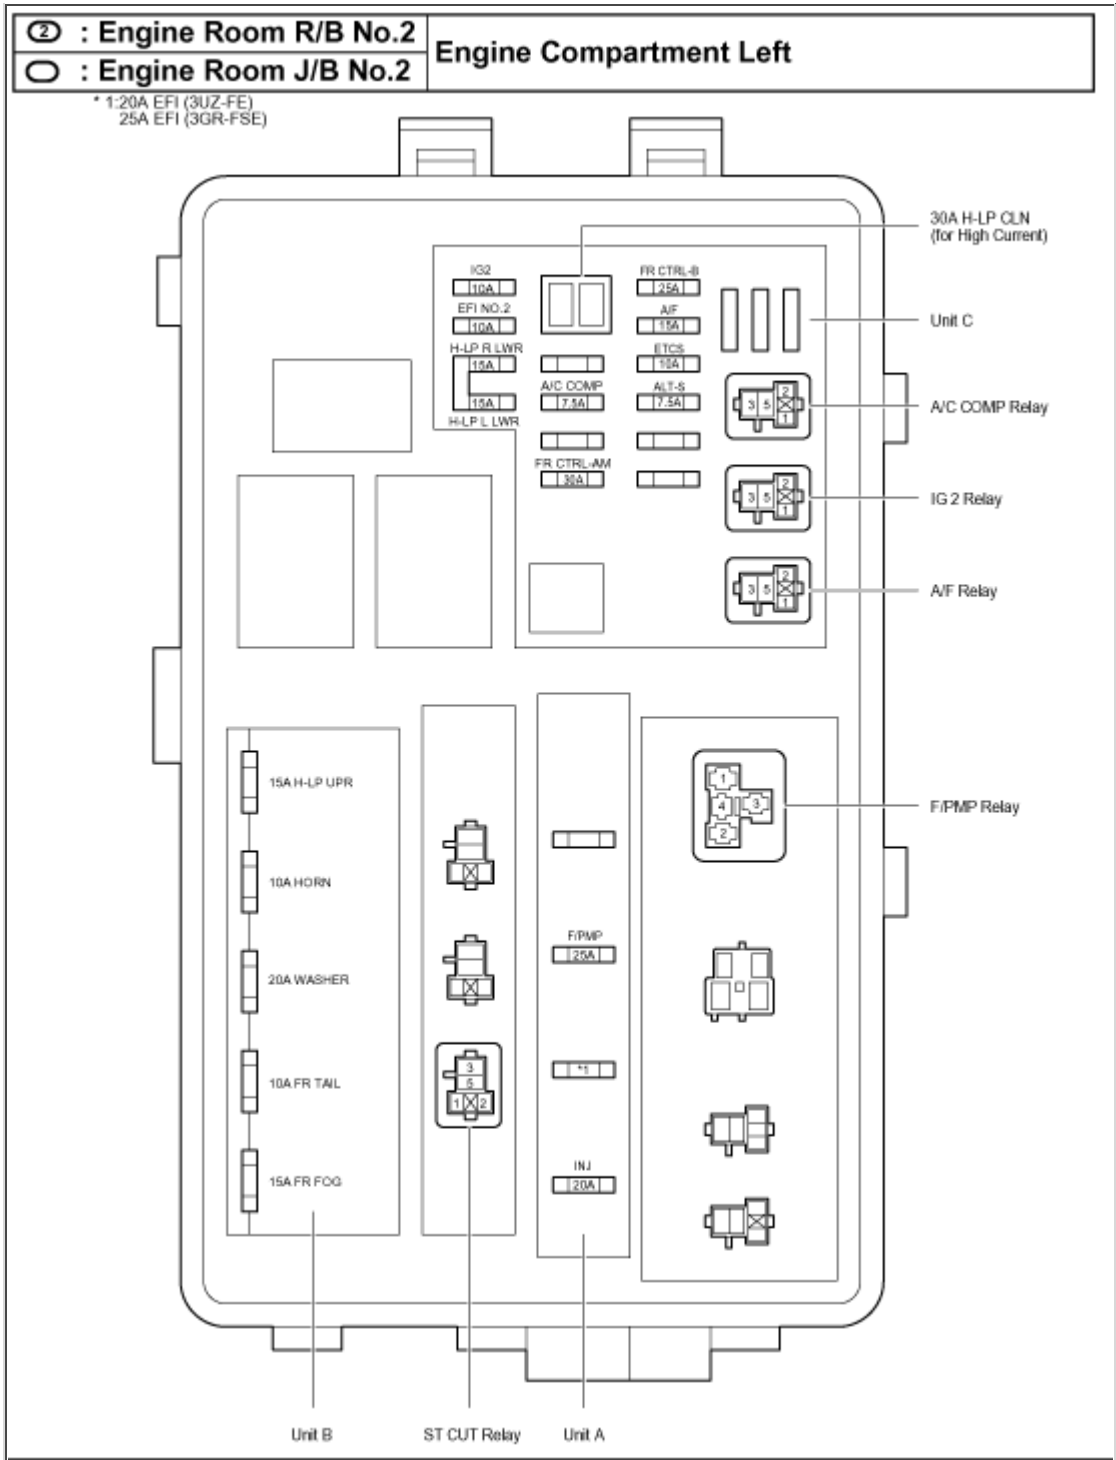

Zoom


Sized for Print

Engine Room R/B 3 - 3UZ-FE Engine

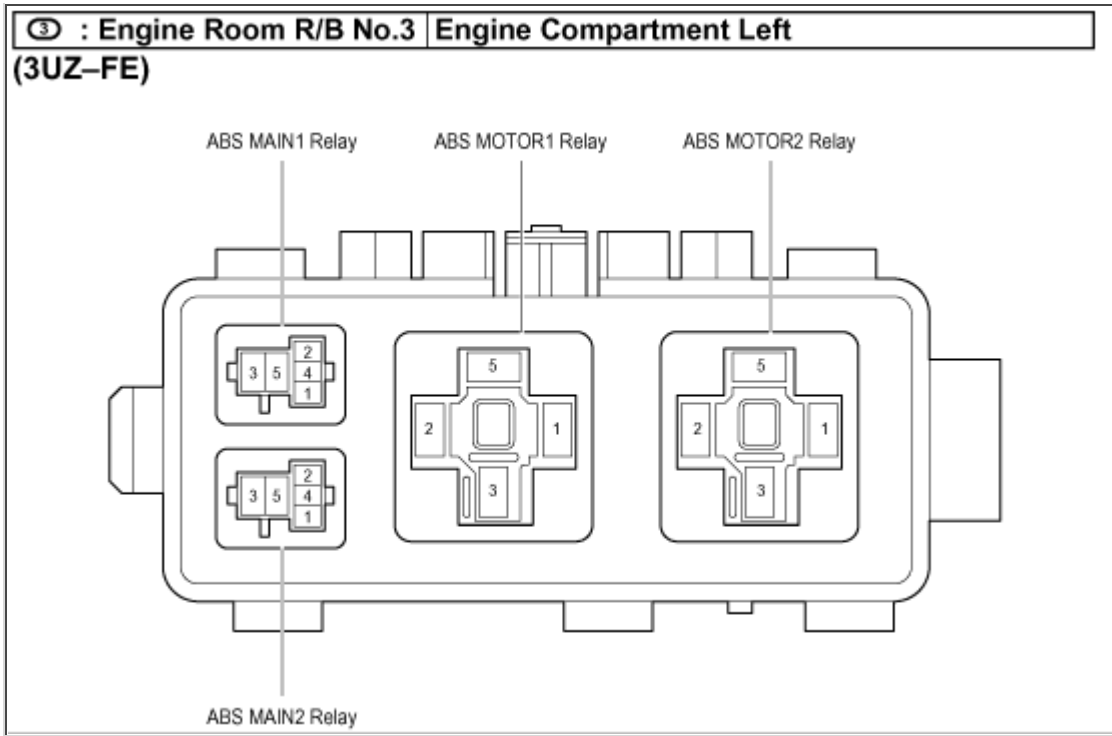

Zoom

Sized for Print

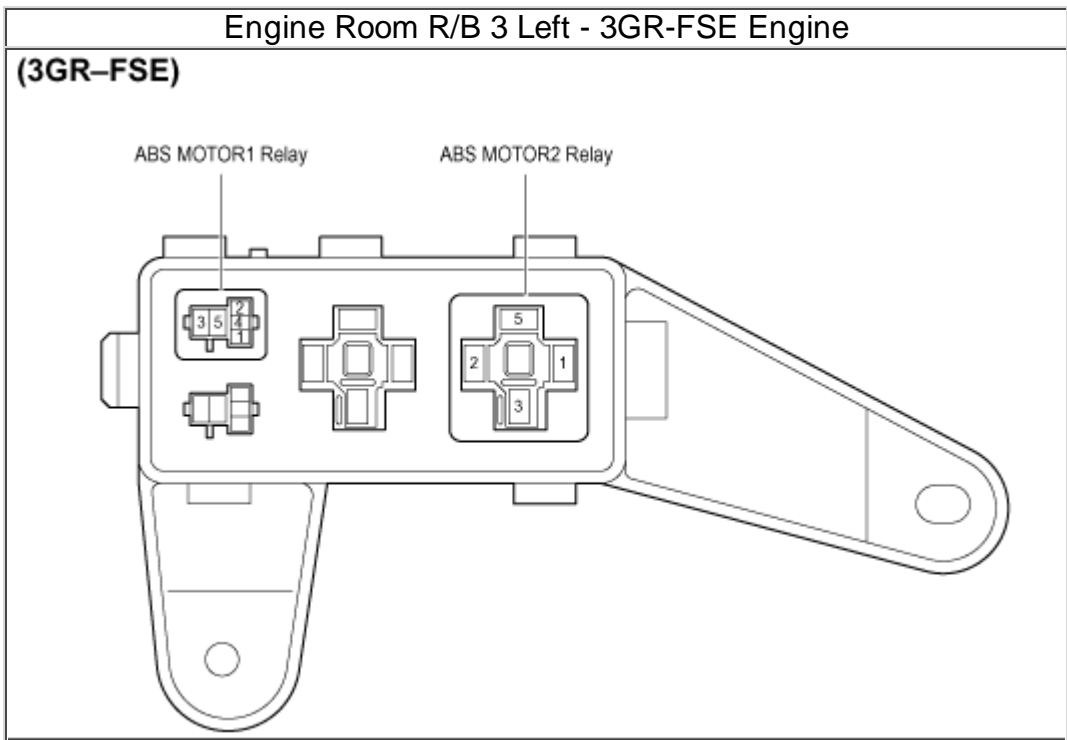


Zoom

Sized for Print


**Engine Room R/B 4 Right - 3GR-FSE Engine**



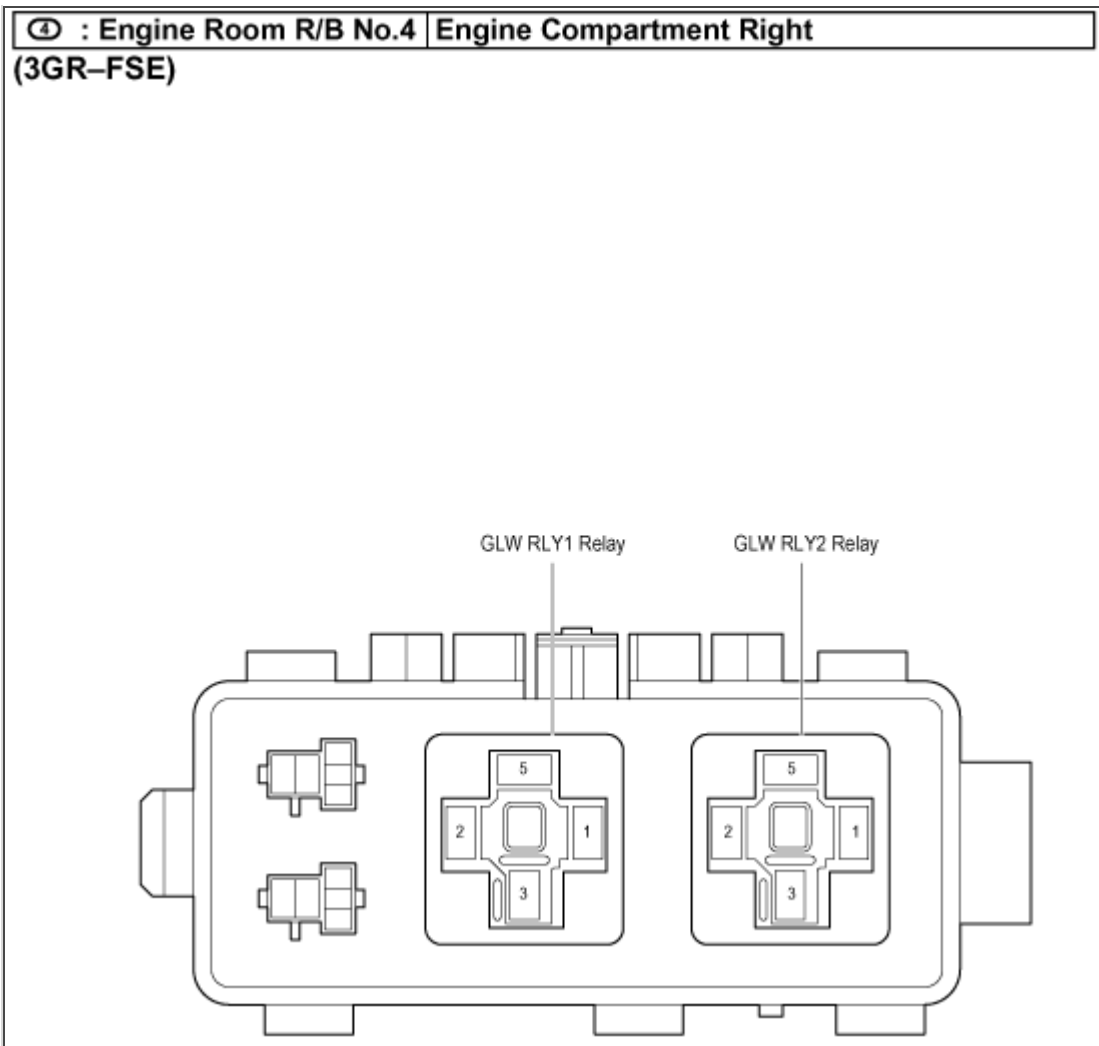


Zoom


Sized for Print

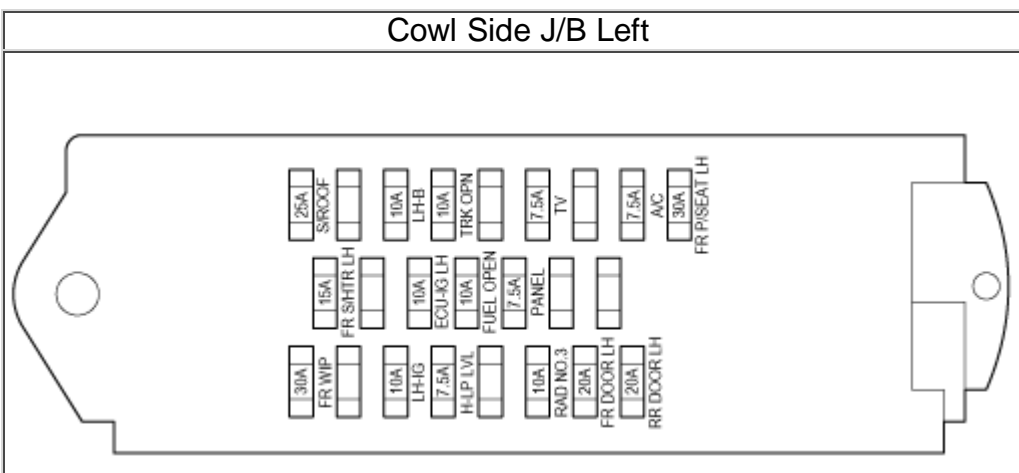

Zoom

 Sized for Print




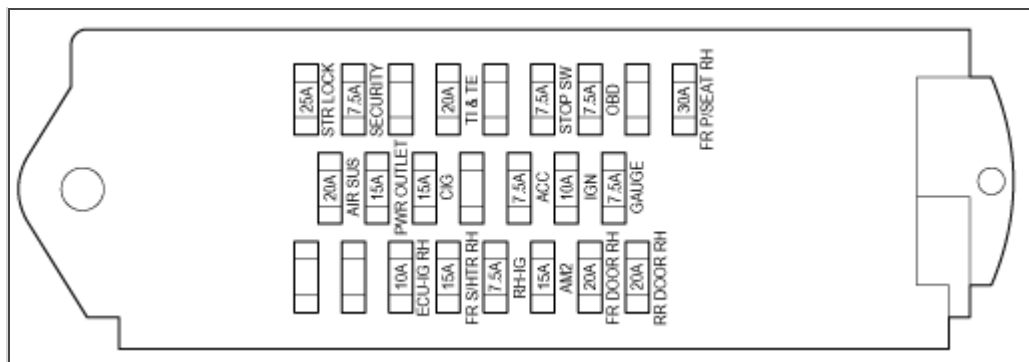

Zoom

Sized for Print


Luggage Room J/B Left

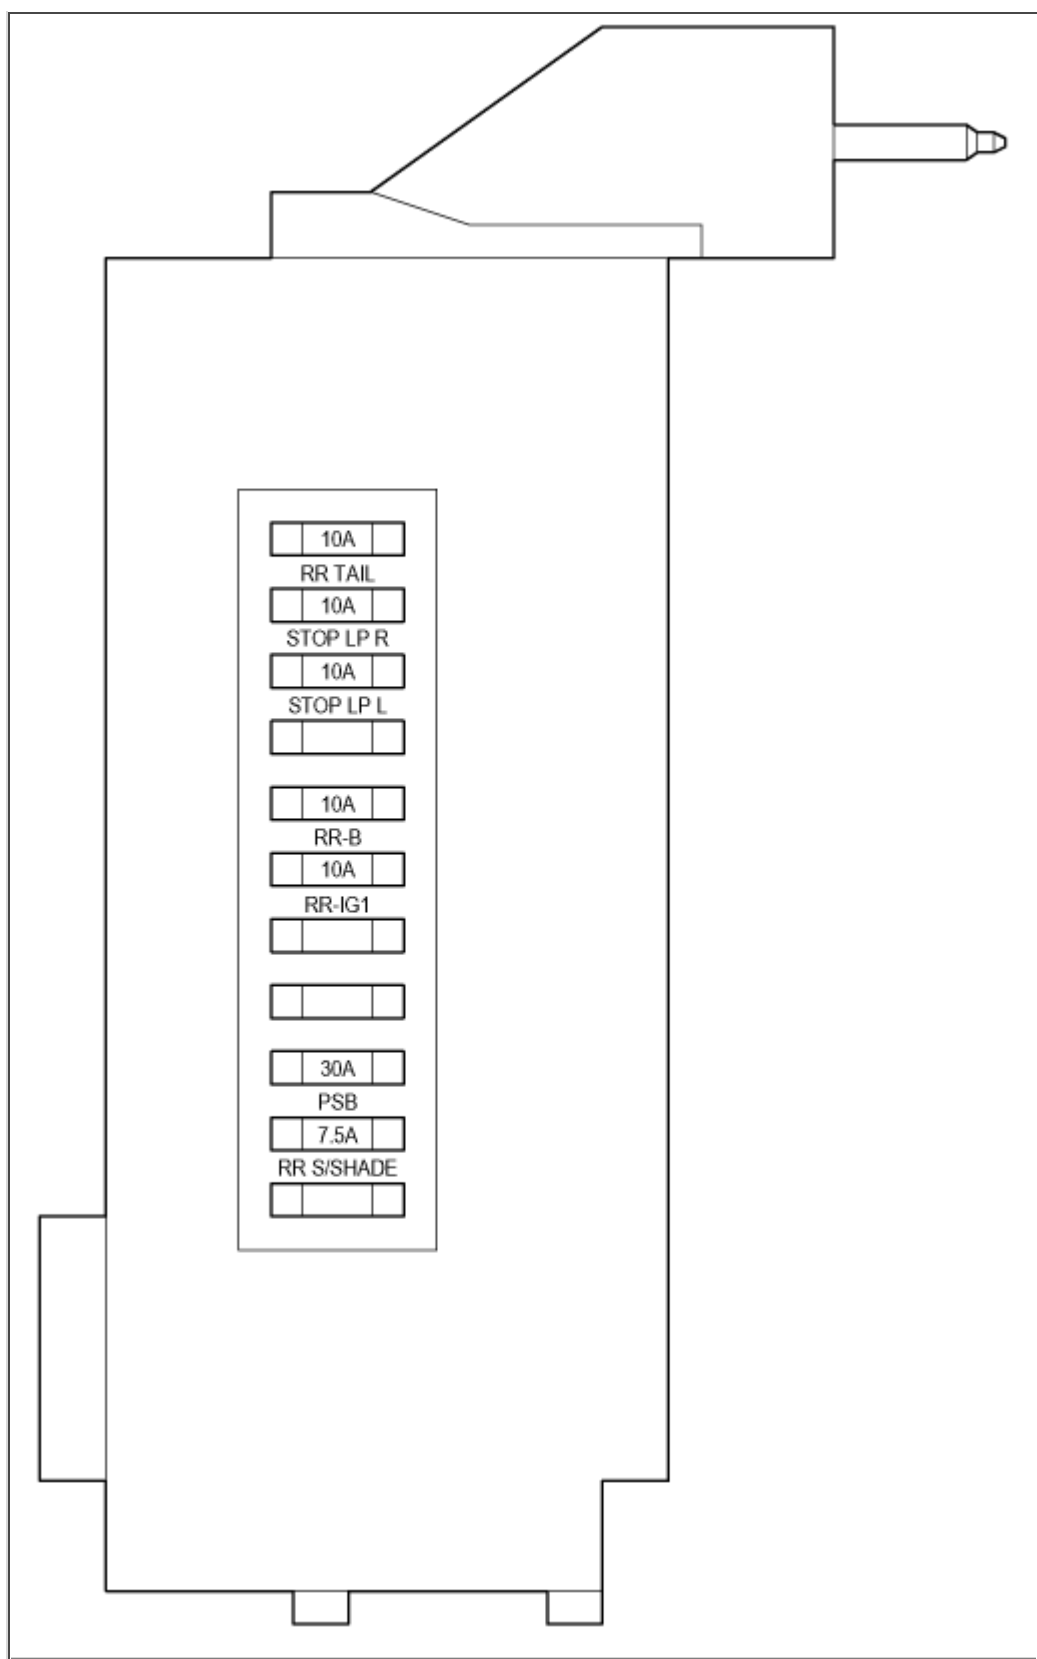

Zoom


Sized for Print

### Fuse Details

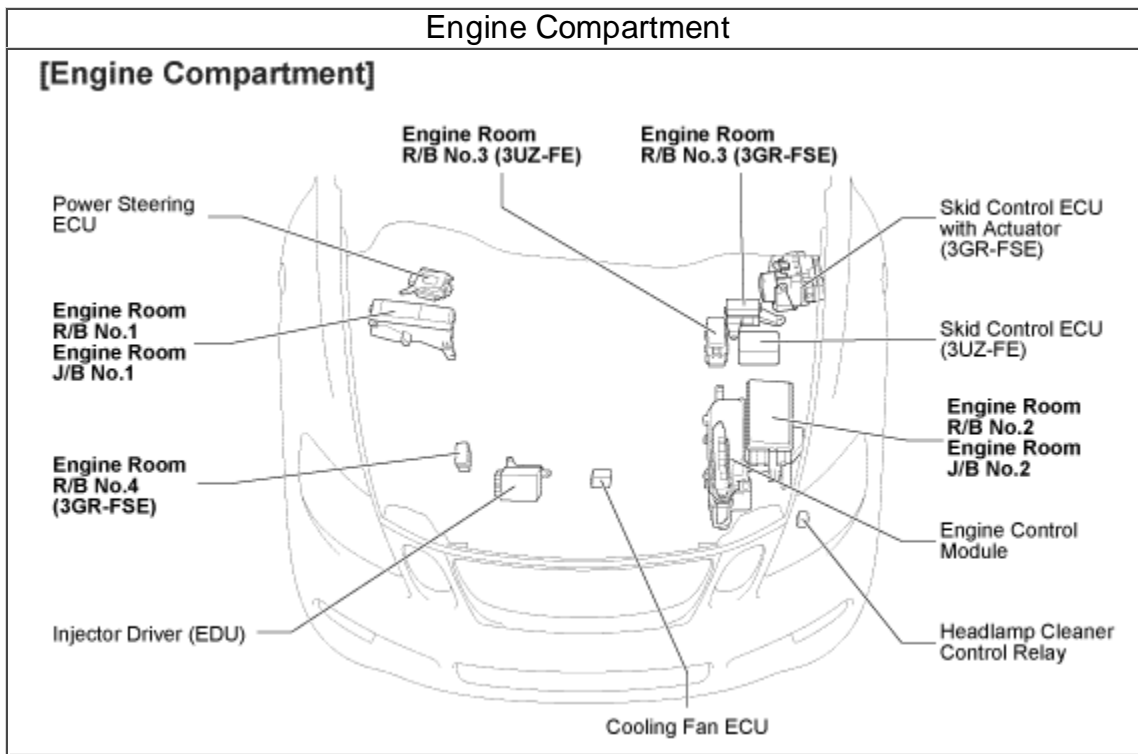

Zoom


Sized for Print

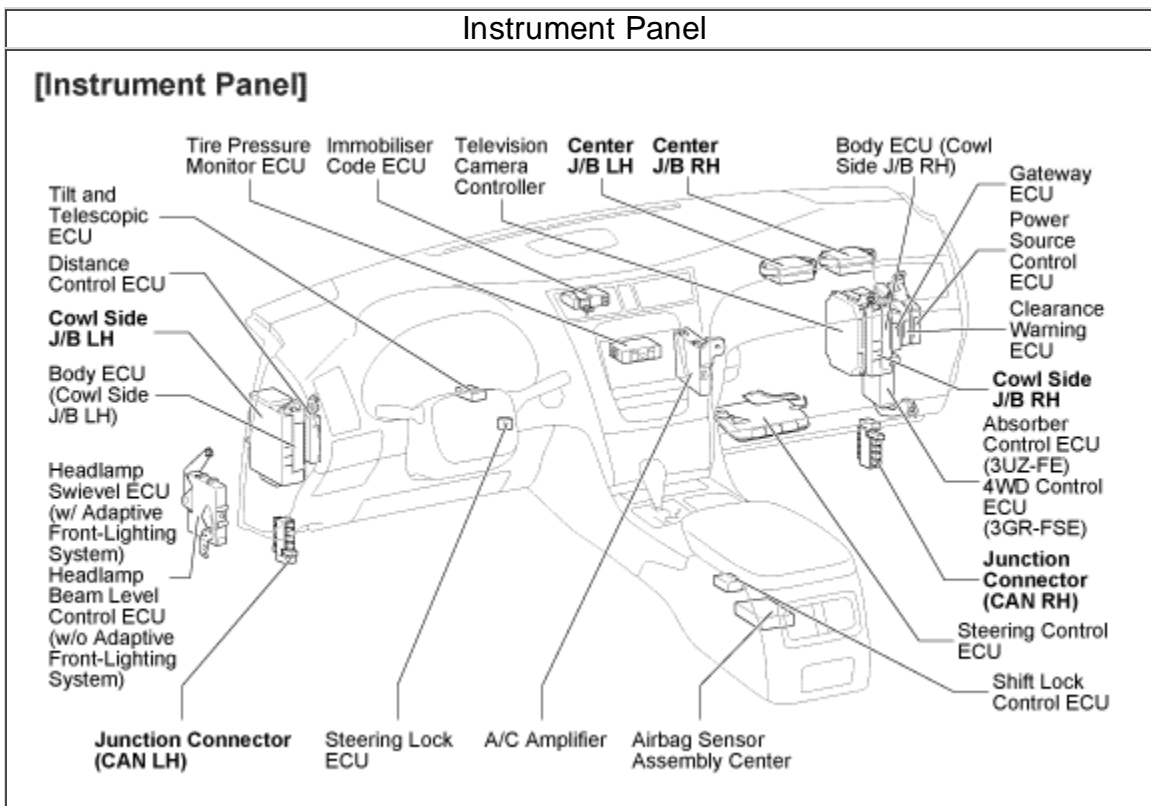

Zoom


Sized for Print

### Engine Compartment

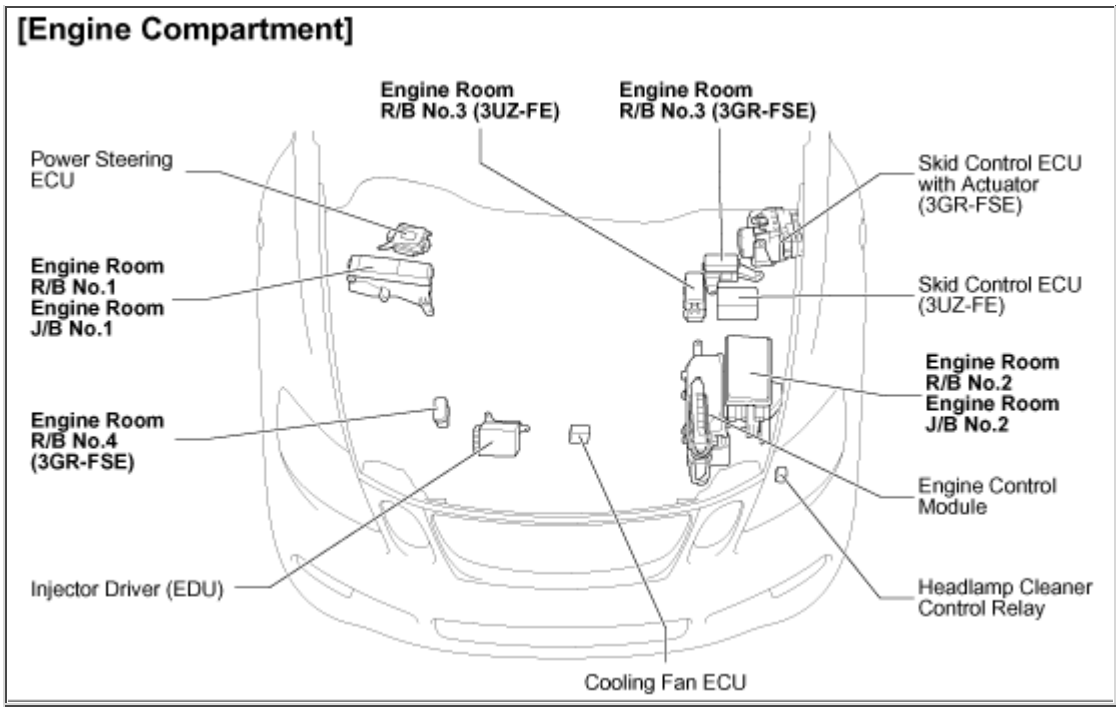

Zoom


Sized for Print

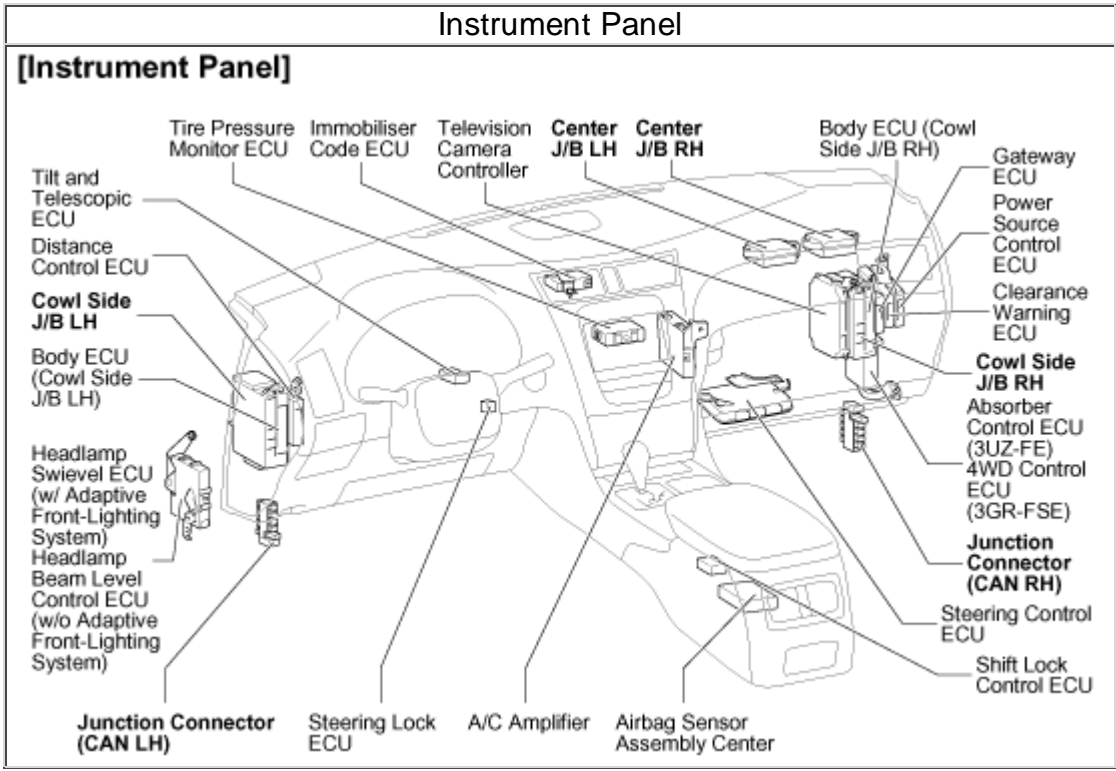

Zoom

Sized for Print

### Body

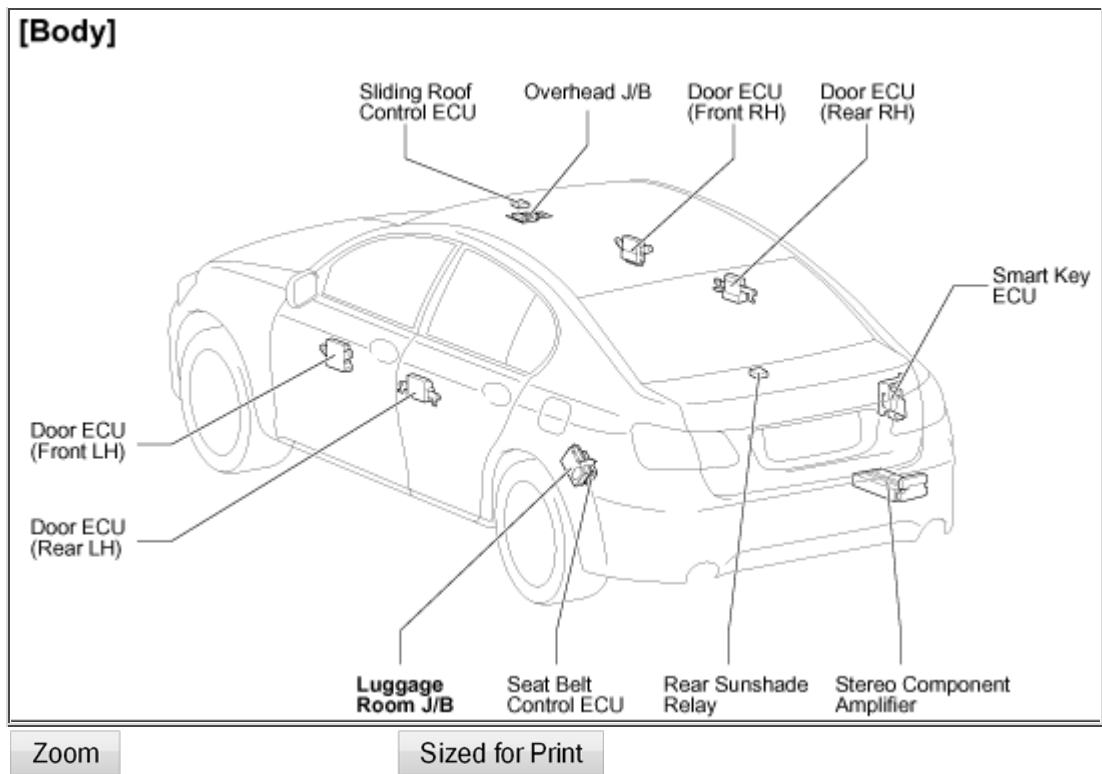

## Locations

© 2012 ALLDATA LLC. All rights reserved.  
[Terms of Use](#)