

<b>Last Modified:</b> 11-16-2015	6.6 A	<b>Doc ID:</b> RM000000SS100BX
<b>Model Year Start:</b> 2007	<b>Model:</b> GS350	<b>Prod Date Range:</b> [07/2006 - ]
<b>Title:</b> BRAKE CONTROL: REAR SPEED SENSOR: REMOVAL; 2007 MY GS350 GS430 [07/2006 - ]		

## REMOVAL


### HINT:

- Use the same procedures for the RH side and LH side.
- The procedures listed below are for the LH side.

### 1. REMOVE REAR WHEEL

### 2. REMOVE SPEED SENSOR REAR LH

(a) Disconnect the speed sensor rear LH connector.

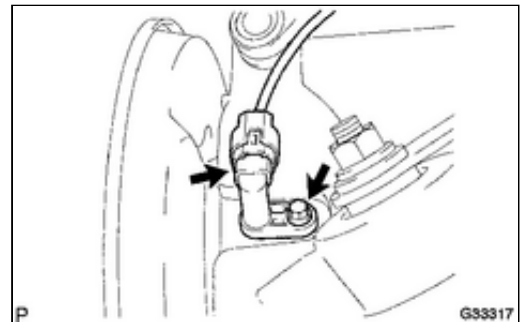

(b) Remove the bolt and speed sensor rear LH.

### NOTICE:

Prevent foreign matter from attaching to the sensor tip.

