

Item	Function	Default setting	Customized setting	①	②	③
Automatic light control system (→P.190)	"Headlamps-On Sensitivity" (Adjust the sensitivity of the ambient light sensor)	Standard	-2 to 2	○	-	○
	"Headlamps Auto-Off Timer" (Adjust the time elapsed before the headlights automatically turn off)	30 seconds	Off	○	-	○
			60 seconds			
			90 seconds			
Welcome light illumination control	On	Off	-	-	○	
Lights (→P.190)	"Daytime Running Lights" (Daytime running lights can be disabled)*3	On	Off	○	-	○
Intuitive parking assist*2 (→P.238)	"Distance (Front)" (Detection distance of the front center sensor)	Far	Near	○	-	○
	"Distance (Rear)" (Detection distance of the rear center sensor)	Far	Near	○	-	○
	"Alert Volume" (Alert volume can be adjusted)	3	1 to 5	○	-	○
	"Display" (when intuitive parking assist is operating)	All sensors displayed	Display off	○	-	○
Automatic air conditioning system (→P.345)	"Efficient Ventilation Mode" (Switching between outside air and recirculated air mode linked to "AUTO" switch operation)	On	Off	○	-	○
	"Auto A/C Mode" (A/C Auto switch operation)	On	Off	○	-	○
	"Smog Sensor Sensitivity" (Exhaust gas sensor sensitivity)	Standard	-3 to 3	○	-	○