

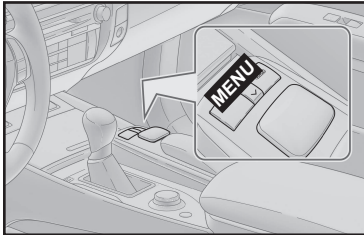 
Lexus Personalized Settings

Your vehicle includes a variety of electronic features that can be programmed to your preferences. Programming of these features is performed once at no charge by your Lexus Dealer provided you obtain the service at the 6 month/5,000-mile scheduled maintenance service.

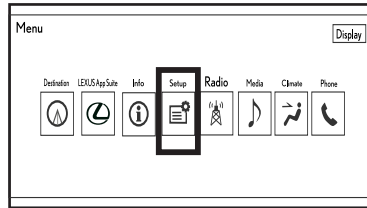 



It is also possible to customize certain vehicle features yourself using the navigation system.

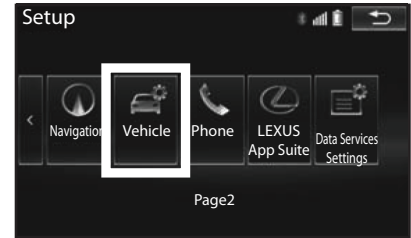 
Vehicles with Navigation system:




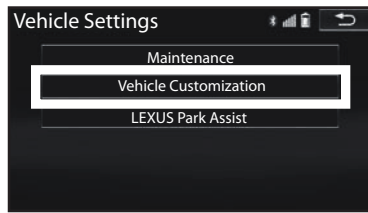 
STEP 1 Press the **MENU** button.



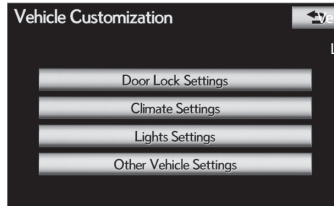 
STEP 2 Select  using the Remote Touch unit and push knob to select.



STEP 3 Scroll to page 2. Select  and push knob to select.



STEP 4 Select **Vehicle Customization** and push knob to select.

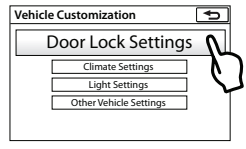

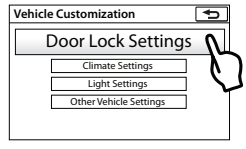

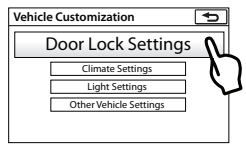



STEP 5 Select category and scroll to specific customization setting.

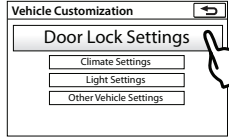

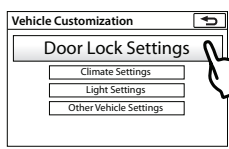

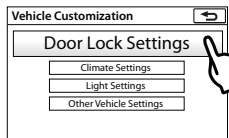









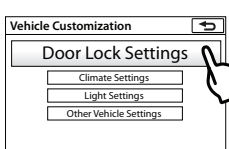








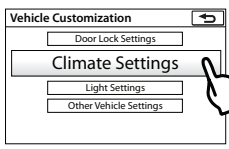

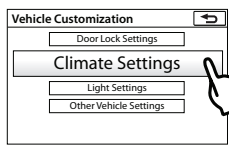






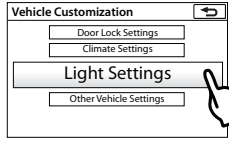

Vehicle must be in "ON" mode to program personalized settings.

After changing the settings, select .

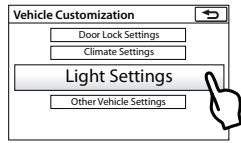

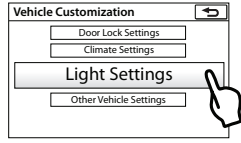

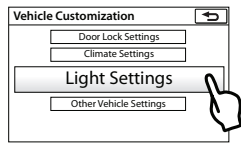

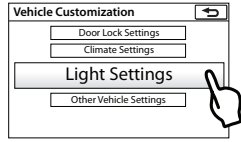

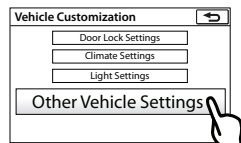




Please refer to the 2015 GS 350 Quick Guide, or Navigation Owner's Manual for more information on Remote Touch operations.

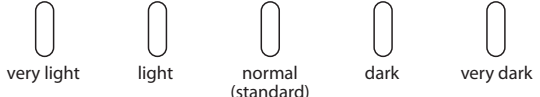










	Settings that can be customized by:	
	Using the navigation system	Dealer
<h3>Door Lock Settings</h3> <p>1. Automatic Door Lock The automatic door locks can be programmed for the following:</p> <ul style="list-style-type: none"> <input type="checkbox"/> The doors automatically lock when the vehicle is taken out of park and placed into another range. (Standard) = By shift from P <input type="checkbox"/> The doors automatically lock when the vehicle speed is 12 mph or higher. = By speed <input type="checkbox"/> The doors, if unlocked, will not automatically lock. = Off 		
<p>2. Automatic Door Unlock The automatic door locks can be programmed for the following:</p> <ul style="list-style-type: none"> <input type="checkbox"/> The doors automatically unlock when the vehicle is placed into park. (Standard) = By shift to P <input type="checkbox"/> All the doors automatically unlock when the driver door is opened. = By driver door <input type="checkbox"/> The doors, if locked, will not automatically unlock. = Off 		
<p>3. Remote 2-Press Unlock When using the electronic key to unlock the doors:</p> <ul style="list-style-type: none"> <input type="checkbox"/> Pressing the unlock button one time will unlock all doors. = Off <input type="checkbox"/> Pressing the unlock button one time unlocks the driver door, and two times unlocks all doors. (Standard) = On 		








LPS options were correct at time of development. All options are subject to change without prior notice.

<u>Door Lock Settings (cont'd)</u>	Using the navigation system	Dealer
<p>4. Select doors to Unlock When using Smart Access to unlock the doors:</p> <ul style="list-style-type: none"> <input type="checkbox"/> Gripping the driver door handle will unlock the driver door. (Standard) = Driver's door <input type="checkbox"/> Gripping the driver door handle will unlock all doors. = All doors 		
<p>5. Auto Relock Timer When the doors are unlocked and not opened:</p> <ul style="list-style-type: none"> <input type="checkbox"/> They will not automatically re-lock. <input type="checkbox"/> They will automatically re-lock in 30 seconds. <input type="checkbox"/> They will automatically re-lock in 60 seconds. (Standard) <input type="checkbox"/> They will automatically re-lock in 120 seconds. 		
<p>6. Lock/Unlock Feedback - Lights Using the electronic key, the following functions can be programmed:</p> <ul style="list-style-type: none"> <input type="checkbox"/> Press the lock/unlock button and the emergency flashers will not flash. = Off <input type="checkbox"/> Press the lock/unlock button and the emergency flashers will flash. (Standard) = On 		
<p>7. Lock/Unlock Feedback-Tone When the lock button is pressed on the electronic key, the system volume can be programmed as follows:</p> <div style="display: flex; justify-content: space-around; align-items: center;"> <div style="text-align: center;"> off</div> <div style="text-align: center;"> volume 1</div> <div style="text-align: center;"> volume 2</div> <div style="text-align: center;"> volume 3</div> <div style="text-align: center;"> volume 4</div> <div style="text-align: center;"> volume 5</div> <div style="text-align: center;"> volume 6</div> <div style="text-align: center;"> volume 7 (standard)</div> </div>		
<p>Climate Settings</p> <p>8. Smog Sensor Sensitivity When in AUTO recirculation mode, the sensor will determine when to switch from outside air to recirculated air based on outside air quality:</p> <div style="display: flex; justify-content: space-around; align-items: center;"> <div style="text-align: center;"> lowest sensitivity</div> <div style="text-align: center;"> sensitivity 2</div> <div style="text-align: center;"> sensitivity 3</div> <div style="text-align: center;"> normal (standard)</div> <div style="text-align: center;"> sensitivity 5</div> <div style="text-align: center;"> sensitivity 6</div> <div style="text-align: center;"> highest sensitivity</div> </div>		
<p>9. Auto A/C Mode When Auto A/C is selected:</p> <ul style="list-style-type: none"> <input type="checkbox"/> It will automatically engage the air conditioner compressor to reach the set temperature. (Standard) = On <input type="checkbox"/> It will automatically achieve a set temperature, warm or cool, without engaging the air conditioner compressor.* = Off <p>* Note: The AC compressor will be engaged when the auto AC button is pressed a second time.</p>		
<p>Light Settings</p> <p>10. Headlamps-ON Sensitivity When driving the vehicle, the front headlights can be programmed to turn ON under darker or lighter ambient light conditions. (Headlight switch must be in "AUTO" mode):</p> <div style="display: flex; justify-content: space-around; align-items: center;"> <div style="text-align: center;"> very dark</div> <div style="text-align: center;"> dark</div> <div style="text-align: center;"> normal (standard)</div> <div style="text-align: center;"> light</div> <div style="text-align: center;"> very light</div> </div>		

Settings that can be customized by:

	Using the navigation system	Dealer
<p>Light Settings (cont'd)</p> <p>11. Headlamps Auto-OFF timer After turning off the ignition and all the doors are closed, if the headlights are in the AUTO position:</p> <ul style="list-style-type: none"> <input type="checkbox"/> The headlights will turn off immediately, when the vehicle is turned off and the driver door is opened. <input type="checkbox"/> The headlights will turn off in 30 seconds. (Standard) <input type="checkbox"/> The headlights will turn off in 60 seconds. <input type="checkbox"/> The headlights will turn off in 90 seconds. 		
<p>12. Daytime Running Lights Illumination of daytime running lights:</p> <ul style="list-style-type: none"> <input type="checkbox"/> OFF. <input type="checkbox"/> ON. (Standard) 		
<p>13. Interior Lights Off Timer After closing the door, the interior lights can be adjusted to stay on for the following:</p> <ul style="list-style-type: none"> <input type="checkbox"/> 15 seconds. (Standard) <input type="checkbox"/> 7.5 seconds. <input type="checkbox"/> 30 seconds. 		
<p>14. Exterior Lights Off Timer After closing the door, the exterior lights can be adjusted to stay on for the following:</p> <ul style="list-style-type: none"> <input type="checkbox"/> 15 seconds. (Standard) <input type="checkbox"/> 7.5 seconds. <input type="checkbox"/> 30 seconds. <input type="checkbox"/> 0 seconds. 		
<p>Other Vehicle Settings</p> <p>15. Driver's Seat Easy Exit When the vehicle is placed in park, the ignition turned off, the driver seat can be set to the following:</p> <ul style="list-style-type: none"> <input type="checkbox"/> Remain in the current position, as set by the driver. = Off <input type="checkbox"/> Automatically move away from the steering wheel partially. = Partial <input type="checkbox"/> Automatically move away from the steering wheel fully. = Full (Standard) 		
<p>Programmable by Dealer Only</p> <p>16. Access System with Elec. Key When unlocking the doors:</p> <ul style="list-style-type: none"> <input type="checkbox"/> Deactivates SmartAccess, only accessible using elec. key unlock button. = Off <input type="checkbox"/> Use SmartAccess (touch door handle) or remote buttons. (Standard)= On 	<p>_____</p>	 Dealer only
<p>17. Efficient Ventilation Mode When the front defogger is activated:</p> <ul style="list-style-type: none"> <input type="checkbox"/> It will automatically blow air onto the windshield without engaging the air conditioner compressor. = Off <input type="checkbox"/> It will automatically engage the air conditioner compressor to blow air onto the windshield. (Standard)= On 	<p>_____</p>	 Dealer only
<p>18. Instrument Dim. Sensitivity Level of light required to dim the instrument panel lights:</p> <p> <input type="radio"/> very dark <input type="radio"/> dark <input type="radio"/> normal (standard) <input type="radio"/> light <input type="radio"/> very light </p>	<p>_____</p>	 Dealer only

Programmable by Dealer Only (cont'd)	Using the navigation system	Dealer
<p>19. Instrument Rest. Sensitivity Level of light required to brighten the instrument panel lights:</p> <p>  </p> <p>very light light normal (standard) dark very dark</p>	<p>_____</p>	<p> Dealer only</p>
<p>20. Interior light The interior light will illuminate when POWER is switched to OFF.</p> <p><input type="checkbox"/> On. (Standard) = On <input type="checkbox"/> Off. = Off</p>	<p>_____</p>	<p> Dealer only</p>
<p>21. Illumination of the interior cabin light when unlocking door When using the electronic key or mechanical key to unlock the door, the interior cabin light can be programmed for the following:</p> <p><input type="checkbox"/> The cabin light will illuminate. (Standard) = On <input type="checkbox"/> The cabin light will not illuminate. = Off</p>	<p>_____</p>	<p> Dealer only</p>
<p>22. Illumination of the interior cabin light when approaching the vehicle When approaching the vehicle with the electronic key, the interior cabin light can be programmed for the following:</p> <p><input type="checkbox"/> The cabin light will illuminate. (Standard) = On <input type="checkbox"/> The cabin light will not illuminate. = Off</p>	<p>_____</p>	<p> Dealer only</p>
<p>23. Foot lights When using the electronic key to unlock the doors:</p> <p><input type="checkbox"/> The outer foot lights will illuminate. (Standard) = On <input type="checkbox"/> The outer foot lights will not illuminate. = Off</p>	<p>_____</p>	<p> Dealer only</p>
<p>24. Panic mode When pressing the panic button on the electronic key:</p> <p><input type="checkbox"/> The alarm will sound intermittently and the vehicle lights will flash. (Standard) = On <input type="checkbox"/> The alarm will not sound and the vehicle lights will not flash. = Off</p>	<p>_____</p>	<p> Dealer only</p>
<p>25. Door lock buzzer When the lock button on the electronic key is pressed and a door is not fully closed:</p> <p><input type="checkbox"/> The buzzer will not sound. = Off <input type="checkbox"/> The buzzer will sound. (Standard) = On</p>	<p>_____</p>	<p> Dealer only</p>
<p>26. Open Windows with Elec. Key When pressing the unlock button on the electronic key for 3 seconds:</p> <p><input type="checkbox"/> The windows will not roll down. (Standard) = Off <input type="checkbox"/> All the windows will roll down. = On</p>	<p>_____</p>	<p> Dealer only</p>
<p>27. Open windows warning* When pressing the unlock button on the electronic key for 3 seconds to roll down the windows:</p> <p><input type="checkbox"/> The buzzer will not sound. = Off <input type="checkbox"/> The buzzer will sound. (Standard) = On * Option #26 must be on.</p>	<p>_____</p>	<p> Dealer only</p>
<p>28. Slide/Tilt Moonroof with Elec. Key When option #26 is on, the moonroof can be programmed for the following:</p> <p><input type="checkbox"/> Slide. (Standard) <input type="checkbox"/> Tilt.</p>	<p>_____</p>	<p> Dealer only</p>

<u>Programmable by Dealer Only (cont'd)</u>	Settings that can be customized by:	
	Using the navigation system	Dealer
29. Opening windows using key When using the mechanical key to operate the windows: <input type="checkbox"/> Turning the key right and holding the position for 2 seconds will not open the windows. (Standard) = Off <input type="checkbox"/> Turning the key right and holding the position for 2 seconds will open the windows. = On	_____	 Dealer only
30. Slide/Tilt Moonroof using Key When option #29 is on, the moonroof can be programmed for the following: <input type="checkbox"/> Slide. (Standard) <input type="checkbox"/> Tilt.	_____	 Dealer only
31. Tilt Away of Steering Wheel When the vehicle is placed in park, the ignition turned off, the steering wheel can be set to the following: <input type="checkbox"/> Automatically move up and away from the driver position setting. (Standard) = On <input type="checkbox"/> Remain in the current position, as set by the driver. = Off	_____	 Dealer only
32. Opening the Trunk By pressing on the trunk release button, located on the electronic key, the trunk will open. The release button can be programmed as follows: <input type="checkbox"/> Press button one time to release the trunk. (No delay) <input type="checkbox"/> Press button two times to release the trunk. <input type="checkbox"/> Press and hold button for 0.8 seconds to release the trunk. (Standard) <input type="checkbox"/> Press and hold button for 2 seconds to release the trunk. <input type="checkbox"/> The button can be turned off so the trunk cannot be opened using the electronic key.	_____	 Dealer only
33. Automatic Rear Sunshade* The rear sunshade automatically lowers when the shift lever is shifted into reverse: <input type="checkbox"/> ON. (Standard) <input type="checkbox"/> OFF *if equipped.	_____	 Dealer only
34. Rear Sunshade Reverse Timer* When the vehicle is placed into reverse, the sunshade automatically lowers in: <input type="checkbox"/> 0.7 seconds (Standard) <input type="checkbox"/> 1.2 seconds <input type="checkbox"/> 0.9 seconds <input type="checkbox"/> 0 seconds *if equipped.	_____	 Dealer only
35. Lane change flasher volume When the turn signal is flashing, the volume can be programmed: <input type="checkbox"/> Medium (Standard) <input type="checkbox"/> Soft <input type="checkbox"/> Loud	_____	 Dealer only

Date _____ Customer Signature _____

Repair Order Number (Dealer only) _____

Vehicle Identification Number (Dealer only) _____