


FRONT BUMPER (except Sport Package) > REMOVAL

for Preparation [Click here](#)


1. REMOVE ENGINE ROOM SIDE COVER

- a. Remove the 4 clips and engine room side cover.

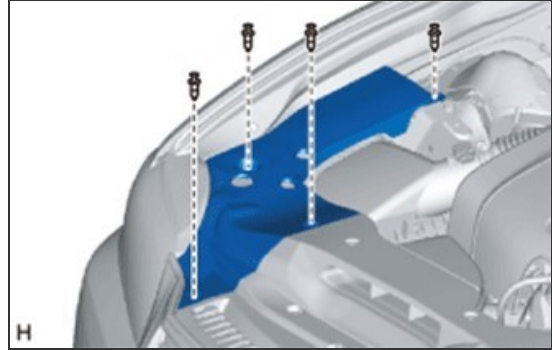

2. REMOVE COOL AIR INTAKE DUCT SEAL

- a. Remove the 7 clips and cool air intake duct seal.

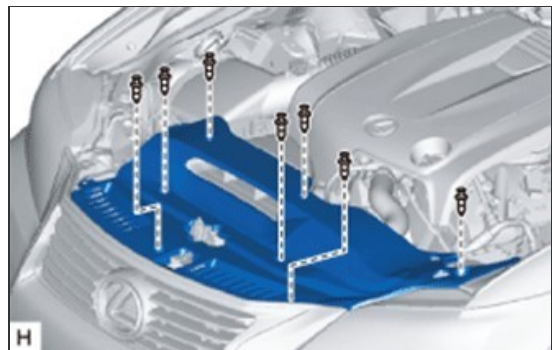


3. REMOVE FRONT BUMPER COVER

- a. Remove the 8 screws.
- b. Using a screwdriver, turn the 2 pin hold clips 90° and remove the pin hold clips and screw.



HINT:

Use the same procedure for the pin hold clips and screw on the other side.

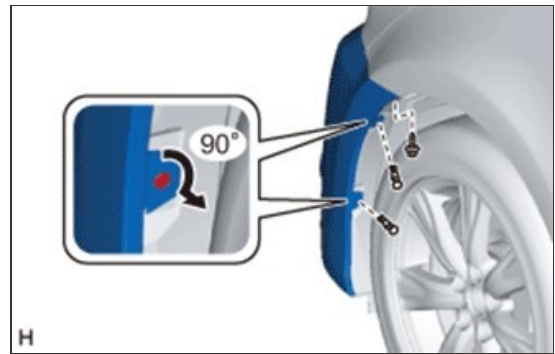

- c. Remove the 5 clips.



- d. Put protective tape around the front bumper cover.

Text in Illustration

*1	Protective Tape
----	-----------------

- e. Detach the 10 claws and remove the front bumper cover.
- f. Disconnect the 2 fog light connectors.
- g. w/ Headlight Cleaner System:




- i. Disconnect the 2 headlight washer hoses and then drain the washer fluid.

HINT:

Use a container to collect the washer fluid.


- h. w/ LEXUS Parking Assist-sensor System:

- i. Disconnect the No. 4 engine room wire.

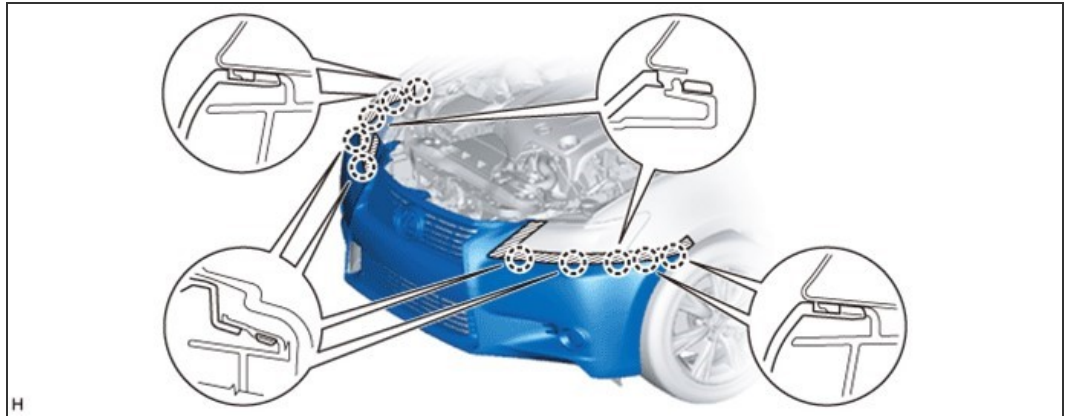

4. REMOVE FRONT BUMPER ENERGY ABSORBER

- a. Remove the front bumper energy absorber.

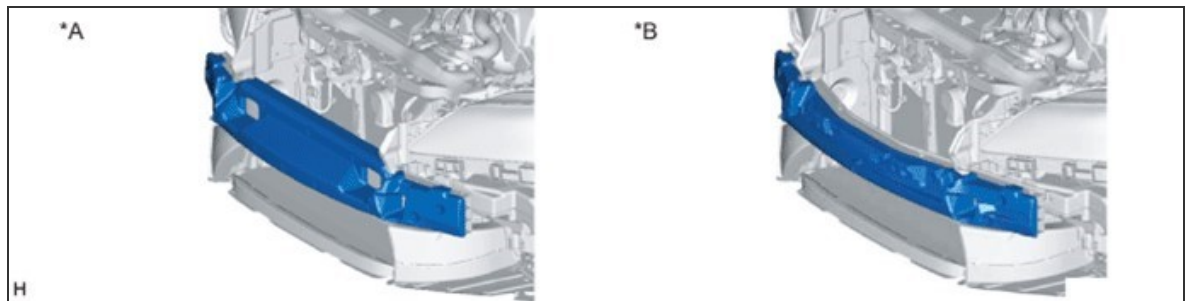

Text in Illustration

*A	for Type A	*B	for Type B
----	------------	----	------------

5. REMOVE HEADLIGHT WASHER HOSE (w/ Headlight Cleaner System)

- a. Disconnect the headlight washer hose from the headlight washer tank.
- b. Detach the 4 clamps and remove the headlight washer hose.