

HEADLIGHT ASSEMBLY > REMOVAL

for Preparation [Click here](#)

HINT:

- Use the same procedure for the RH and LH sides.
- The procedure listed below is for the LH side.

1. PRECAUTION

NOTICE:

After turning the engine switch off, waiting time may be required before disconnecting the cable from the battery terminal. Therefore, make sure to read the disconnecting the cable from the battery terminal notice before proceeding with work ([Click here](#)).

2. DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL

NOTICE:


When disconnecting the cable, some systems need to be initialized after the cable is reconnected ([Click here](#)).

3. REMOVE FRONT BUMPER COVER

- for Sport Package:
([Click here](#))
- except for Sport Package:
([Click here](#))

4. REMOVE UPPER FRONT FENDER PROTECTOR LH

- Detach the 3 clips and remove the upper front fender protector LH.

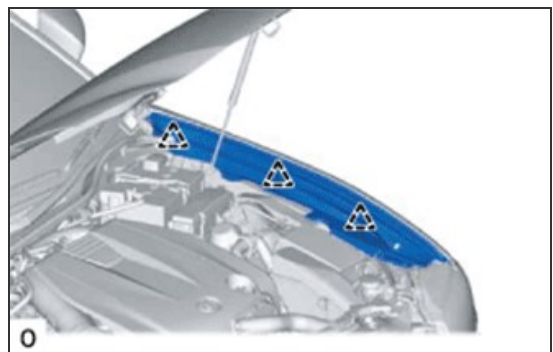

5. REMOVE HEADLIGHT ASSEMBLY LH

- a. Put protective tape around the headlight assembly LH.

Text in Illustration

*1	Protective Tape
----	-----------------

- b. Disconnect the connector.
- c. Remove the 4 bolts and headlight assembly LH.

