


REPLACEMENT

HINT:

The installation is in the reverse order of the removal. However, when there is a special point concerning the installation, it is indicated.

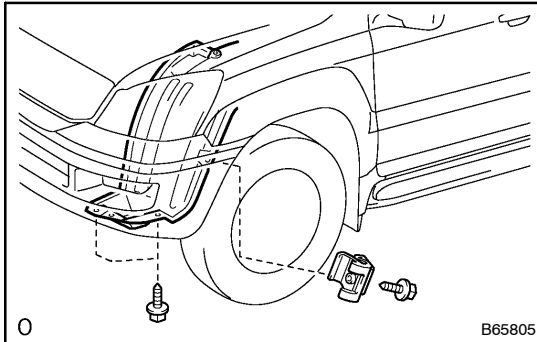

1. REMOVE FRONT FENDER LINER LH

- (a) Remove the 3 screws.
- (b) Remove the front part of the fender liner.


2. REMOVE FRONT FENDER LINER RH

HINT:

Use the same procedures above for the LH side.

3. REMOVE FRONT BUMPER COVER LOWER

- (a) Remove the 5 bolts, clip, and bumper cover lower.

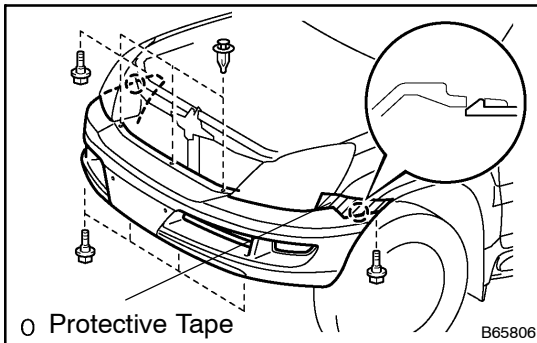

4. REMOVE FRONT BUMPER COVER

- (a) Put protective tape under the front fender.
- (b) Disconnect the fog lamp connector.
- (c) Remove the 2 screws and 4 bolts.
- (d) Remove the 3 clips.
- (e) Using a screwdriver, disengage the 6 claws and remove the bumper cover.

HINT:

Tape the screwdriver tip before use.

5. REMOVE FRONT BUMPER STAY NO.2 LH

- (a) Remove the 2 bolts, 2 nuts, and bumper stay.

6. REMOVE FRONT BUMPER STAY NO.2 RH

- (a) Remove the 2 bolts, 2 nuts, and bumper stay.

7. REMOVE FRONT BUMPER RETAINER UPPER CENTER

- (a) Remove the bolt and bumper retainer upper center.

8. REMOVE FRONT BUMPER SIDE SUPPORT LH

- (a) Remove the screw and side support.

9. REMOVE FRONT BUMPER SIDE SUPPORT RH

- (a) Remove the screw and side support.

10. REMOVE FRONT BUMPER ENERGY ABSORBER

11. REMOVE FRONT BUMPER REINFORCEMENT SUB-ASSY

- (a) Remove the 4 nuts and reinforcement sub-assy.

12. REMOVE FRONT FOG LAMP ASSY LH

- (a) Remove the bolt and fog lamp.


13. REMOVE FRONT FOG LAMP ASSY RH

- (a) Remove the bolt and fog lamp.

14. INSTALL FRONT BUMPER REINFORCEMENT SUB-ASSY

- (a) Install the front bumper reinforcement with the 4 nuts.

Torque: 65 N·m (663 kgf·cm, 48 ft·lbf)

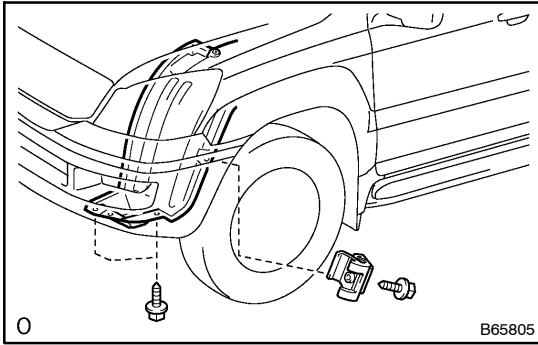**15. INSTALL FRONT FENDER LINER LH**

- (a) Install the front part of the fender liner.
- (b) Install the 3 screws.

16. INSTALL FRONT FENDER LINER RH

HINT:

Use the same procedures above for the LH side.