
## **6.3 SELF-DIAGNOSTIC FUNCTION**

## 1.To Service Check

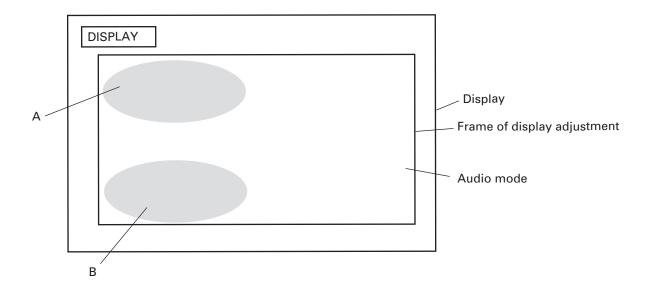

7

8

В

С


D

Ε

- 1. Press [AUDIO] key of EMV.
- 2. Press [DISPLAY] key of EMV.
- 3. The position of A and B is order of pushed 6 times in A,B,A,B,A and B.
- ->Service Check screen is displayed.

## 2.Service Check

5

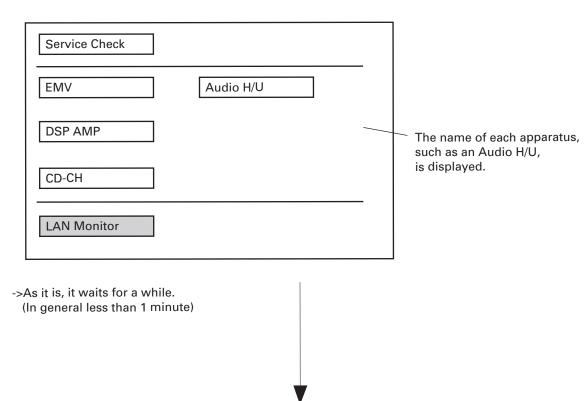

KEX-M8727ZT/UC

\_