


Power Seat for Front Passenger's Seat

From Power Source System (See Page 66)

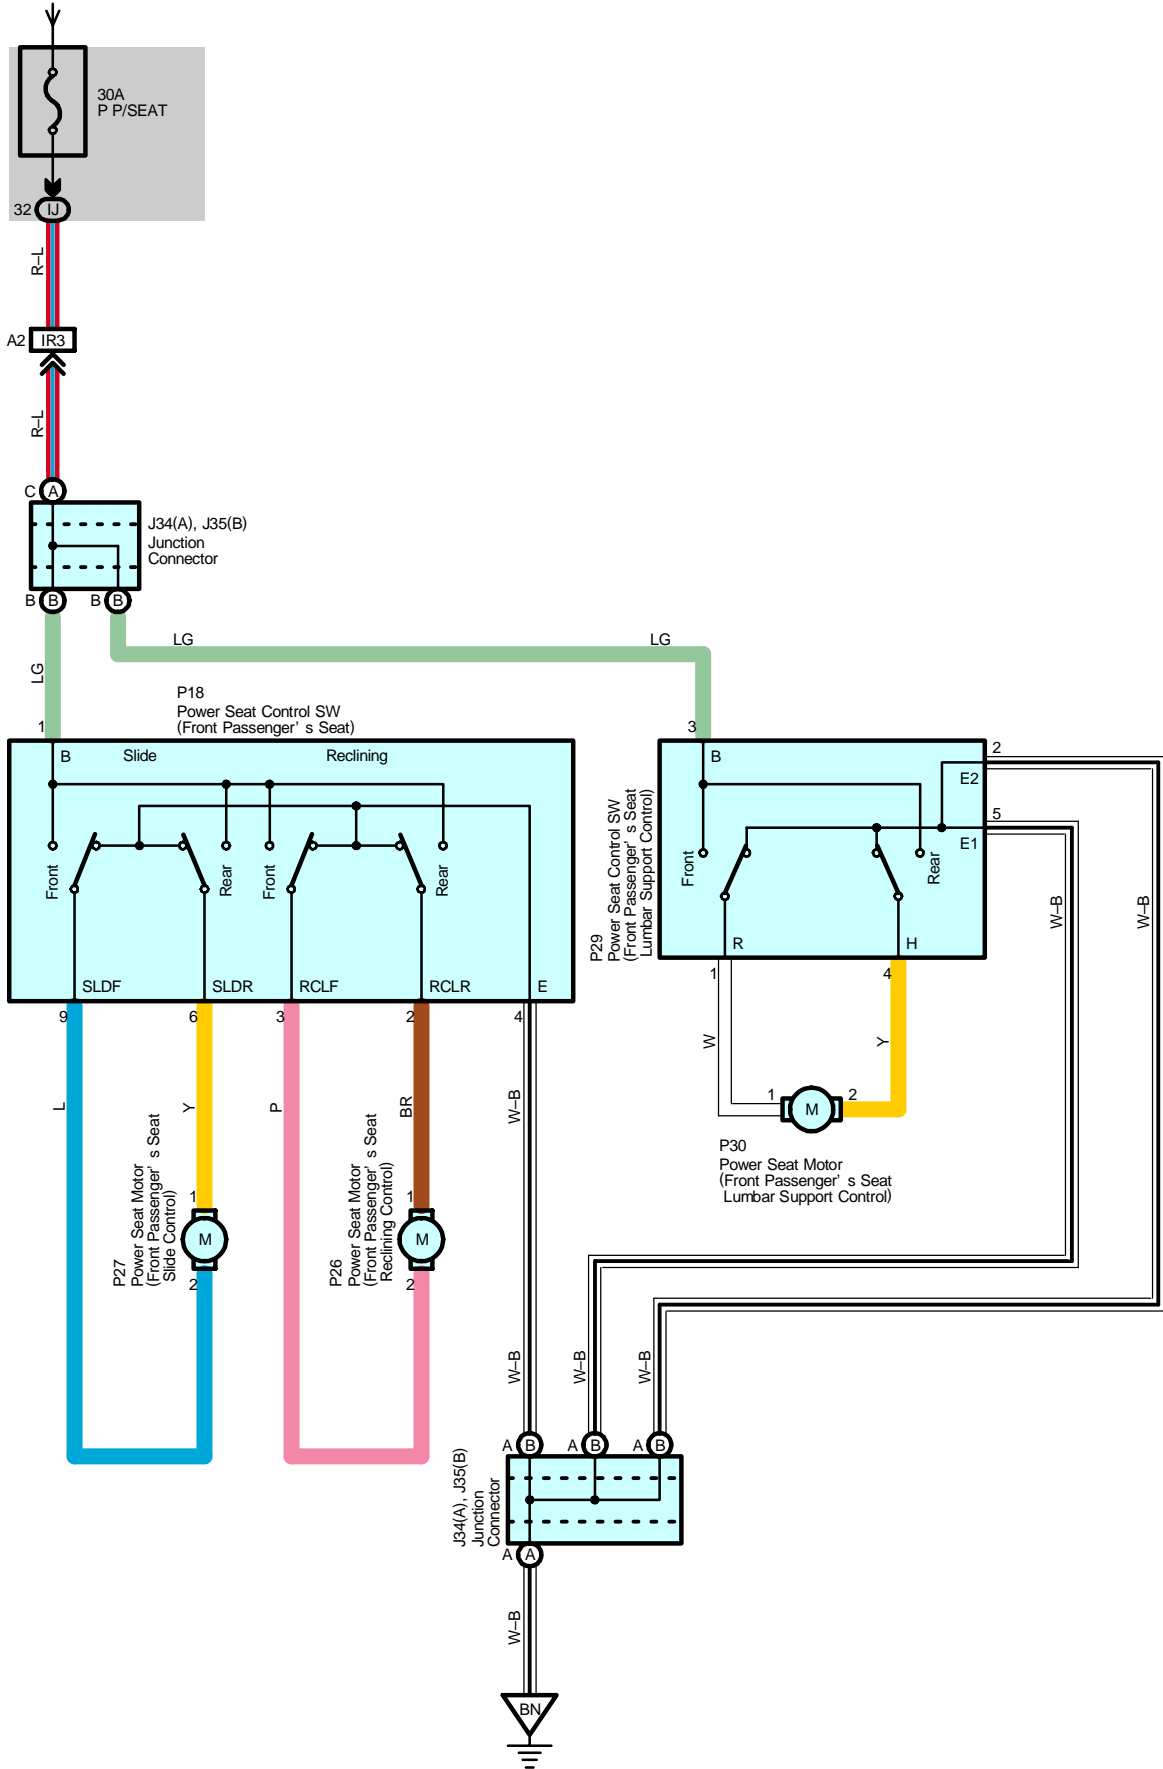

Service Hints

P18 Power Seat Control SW (Front Passenger's Seat)

- 1-9 : Closed with the front passenger's seat at front slide operation
- 1-6 : Closed with the front passenger's seat at rear slide operation
- 1-3 : Closed with the front passenger's seat at front reclining operation
- 1-2 : Closed with the front passenger's seat at rear reclining operation
- 4-Ground : Always continuity

: Parts Location

Code		See Page	Code	See Page	Code	See Page
J34	A	46	P26	46	P30	46
J35	B	46	P27	46		
P18		46	P29	46		

: Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
IJ	27	Instrument Panel Wire and Driver Side J/B (Lower Finish Panel)

: Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IR3	56	Instrument Panel Wire and Floor Wire (Right Kick Panel)

: Ground Points

Code	See Page	Ground Points Location
BN	58	Under the Front Passenger's Seat