


Front Fog Light

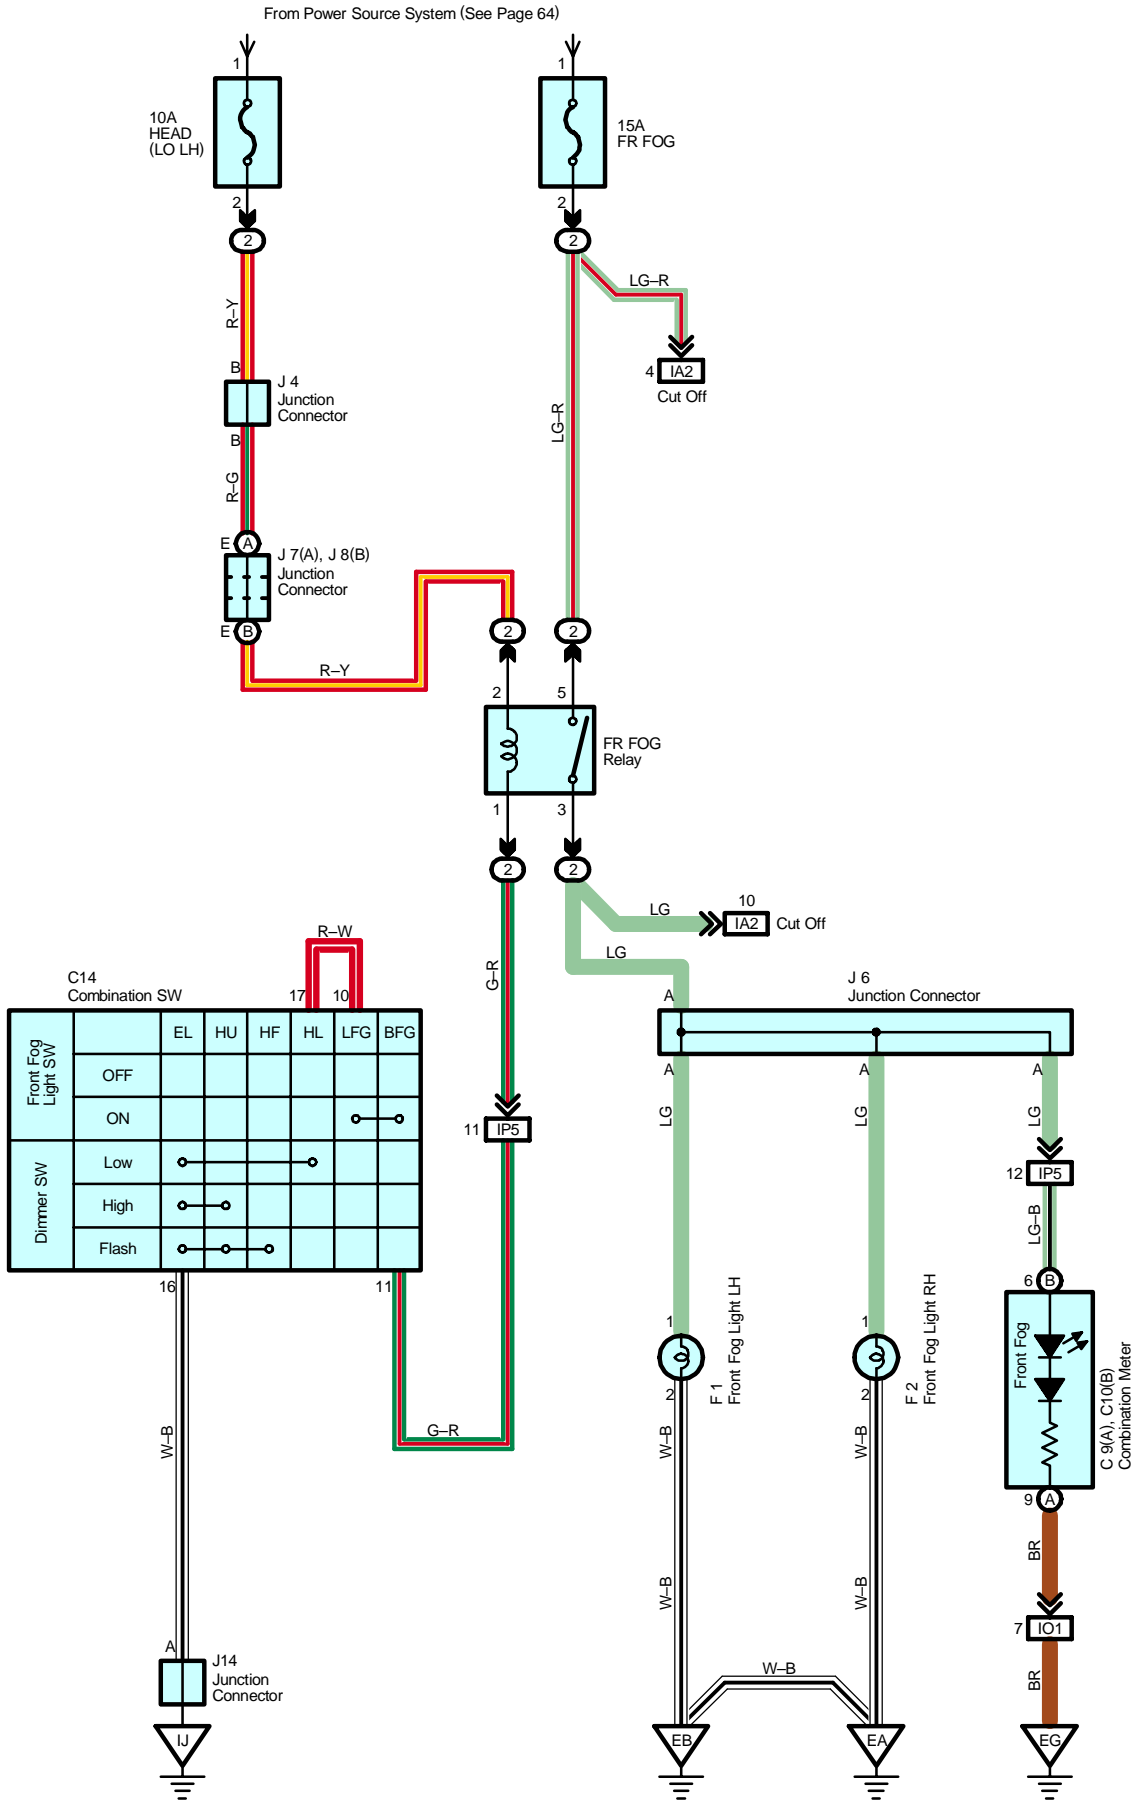

Service Hints**FR FOG Relay**

5-3 : Closed with the light control SW at HEAD position, dimmer SW at LOW position and front fog light SW on

 : **Parts Location**

Code		See Page	Code		See Page	Code		See Page
C9	A	38	F2	36	J8	B	40	
C10	B	38	J4	37	J14		40	
C14		38	J6				37	
F1		36	J7	A			40	

 : **Relay Blocks**

Code	See Page	Relay Blocks (Relay Block Location)
2	22	Engine Room R/B (Engine Compartment Left)

 : **Connector Joining Wire Harness and Wire Harness**

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IA2	50	Floor No.2 Wire and Engine Room Main Wire (Left Kick Panel)
IO1	54	Engine Wire and Instrument Panel Wire (Right Side of the Blower Unit)
IP5	54	Instrument Panel Wire and Engine Room Main Wire (Right Kick Panel)

 : **Ground Points**

Code	See Page	Ground Points Location
EA	48	Front Right Fender
EB	48	Front Left Fender
EG	48	Rear Bank of Left Cylinder Head
IJ	50	Near the Right Side of Steering Column