



LEXUS EXTRA CARE **Platinum**
Offered by Lexus Financial Services

FACTORY-BACKED
VEHICLE SERVICE AGREEMENT

What is a Vehicle Service Agreement?

VSA's cover the cost of mechanical breakdowns beyond your vehicle's basic warranty period. Depending on how many miles you drive and how long you plan to keep your vehicle, LFS offers a protection plan that's right for you.

The LFS VSA offers you:

VALUE

- Helps guard against the rising costs of covered parts and labor
- Limits out-of-pocket costs on covered repairs
- Agreement is transferable, potentially increasing the resale value of your Lexus

PEACE OF MIND

- Access to a nationwide service network of Lexus dealers throughout the U.S. and Canada
- Factory-trained service technicians use only Lexus-approved parts
- Backed by the strength and stability of Lexus


CONVENIENCE

- Reimbursement for towing, substitute transportation, meals and lodging*
- Claims are paid directly to the dealer

Want to learn more? Contact your local Lexus dealer.

*If your vehicle becomes inoperable due to mechanical failure of a covered component.

Drive with confidence knowing you are protected with a Vehicle Service Agreement (VSA) backed by Lexus.

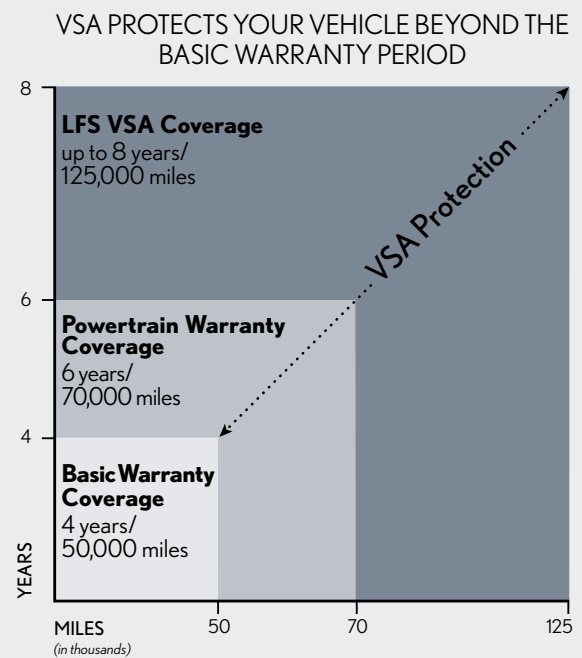

Lexus Financial Services (LFS) offers VSA plans that fit your driving needs. Ask your Lexus dealer for details.

LEXUS EXTRA CARE Platinum Plan

For New and Used Vehicles

NEW VEHICLES

ELIGIBILITY

Consider this coverage if your vehicle is less than 4 years old and has fewer than 50,000 total vehicle miles.

COVERAGE

There are many plans available—one to fit your driving needs. Ask your Lexus dealer for details.¹

Time/Total Vehicle Mileage

3 years/80,000 miles
4 years/up to 125,000 miles
5 years/up to 125,000 miles

Time/Total Vehicle Mileage

6 years/up to 125,000 miles
7 years/up to 125,000 miles
8 years/up to 125,000 miles

USED VEHICLES

ELIGIBILITY

Consider this coverage if your vehicle is within current plus 9 model years old and has less than 125,000 total vehicle miles. These plans are available through your Lexus dealer **only** at the time of used vehicle purchase.

COVERAGE

There are many plans available—one to fit your driving needs. Ask your Lexus dealer for details.²

Time/Mileage

1 year/12,000 miles
2 years/24,000 miles
2 years/100,000 miles³
3 years/36,000 miles
4 years/50,000 miles
5 years/60,000 miles

Maximum Mileage at Purchase

Up to 125,000 miles
Up to 100,000 miles
85,000 miles
Up to 100,000 miles
Up to 100,000 miles
Up to 85,000 miles

¹ Time and mileage coverage periods are measured from the date the vehicle was first delivered into service as a new vehicle and zero miles. It expires upon reaching your selected time or mileage of the coverage period, whichever occurs first. Plans feature \$0 or \$50 deductible options. Deductible applies to each eligible repair visit.

² Coverage expires upon reaching your selected time or mileage of the coverage period, whichever occurs first. Plans feature \$0 or \$50 deductible options. Deductible applies to each eligible repair visit.

³ The 2 years/100K Vehicle Service Agreement expires the earlier of (a) 2 years from the used vehicle sale date or (b) when the vehicle odometer equals 100K total vehicle miles.

What's Covered:⁴

The **Platinum** Plan covers all specified parts in **BLACK** and **BLUE**.
The **Gold** Plan covers the parts listed in **BLACK**.

ENGINE

All internally lubricated components and:
Balance Shaft; Camshaft; Crankshaft;
Crankshaft Pulley; Cylinder Heads;
Engine Block; Engine Mounts; Engine
Oil Reservoir; Engine Oil Reservoir
Pump; Equipment Drive Shaft; Exhaust
Manifolds; Flexplate; Flywheel; Idler
Pulley; Intake Manifold; Oil Pan; Oil
Pressure Switch; Oil Pump; Oil Sending
Unit; Piston; Rotary Engine Components
(including Apex Seal, Bearings, Eccentric
Shaft, and Rotor); Seals and Gaskets;
Supercharger; Supercharger Intercooler;
Tensioners; Timing Belt; Timing
Chain; Timing Cover; Timing Gears;
Turbo Intercooler; Turbo Wastegate;
Turbocharger; Valve Covers; Water Pump;
Air Control Valve (ACV); Air Pump;
Belt Tensioner; Crankcase Ventilation
Valve; Exhaust Gas Recirculation
Valve; Exhaust Manifold Heat Insulator;
Exhaust Pipe Gasket; Intake Air Control
Valve (IACV); Mixture Control Valve; Oil
Cooler; Oil Filter Bracket Subassembly;
Pair Valve (Reed Valve); Supercharger
Bypass Valve; Supercharger Relay;
Thermal Vacuum Valve; Thermostatic
Valve; Three-Way Catalyst Converter;
Timing Belt Idler; Vacuum Switch;
Vacuum Switching Valve; Vacuum
Transmitting Valve

MANUAL TRANSMISSION

Transfer Case Components (All internally
lubricated components) and: Clutch
Master Cylinder; Clutch Release
Cylinder; Gears and Shafts; Hoses,
Lines, and Tubes; Seals and Gaskets;
Shift Linkage and Cables; Transfer/
Transmission Case; Transmission Mounts;
Clutch Pedal Subassembly; Control
Position Indicator Subassembly; Master
Cylinder Reservoir; Radial Ball Bearing
(for Clutch Release) and/or Clutch Fork;
Shift Lever Boot and/or Retainer; Shift
Lever Knob; Shift Lever Subassembly

AUTOMATIC TRANSMISSION

Transfer Case Components (All
internally lubricated components) and:
Hoses, Lines and Tubes; Seals and
Gaskets; Shift Linkage and Cables;
Solenoids; Torque Converter; Transfer/
Transmission Case; Transmission Mounts;
Vacuum Modulator

AXLE ASSEMBLY

(Front, Rear, Four-wheel, and
All-wheel Drive): All internally lubricated

components and: 4x4 Actuators; Axles
and Bearings; Center Support Bearing;
Constant Velocity Joints and Boots; Drive
Axle Housing; Drive Shaft; Hubs; Locking
Hubs; Seals and Gaskets; Thrust Washers;
Universal Joints; Viscous Coupling;
**Differential Carrier Assembly; Front
Drive Shift Lever Knob**

SUSPENSION

(Front and Rear): Bushings/Bearings;
Control Arm Shafts; Electronic
Suspension Actuator/Motor and
Compressor; Radius Arm; Spindle;
Spindle Support; Steering Knuckle; Sway
Bar Link; Upper and Lower Ball Joints;
Upper and Lower Control Arms; **Front
and Rear Coil Springs; Front and Rear
Stabilizer Bar; Front Leading Arm; Front
Spring Assembly; Front Spring Shackle;**
Strut Rod; Torsion Bar Spring; Upper
Arm Shaft

STEERING

Gear Box internal components and:
Bushings/Bearings; Center Link; Hoses,
Lines, and Tubes; Idler Arm; Pitman Arm;
Power Steering Pump; Rack and Pinion;
Seals and Gaskets; Steering Column;
Steering Column Coupling; Steering
Column Shaft; Steering Dampener;
Steering Gear Box and Pump Housings;
Tie Rod End; **Horn Contact Ring;
Knuckle Stopper Cover; Power Steering
Pump Pulley**

FUEL SYSTEM

Air Flow Meter; Carburetor; Diesel Fuel
Injection Pump; Electric Fuel Pump;
Electronic Fuel Injection System; Fuel
Injectors; Fuel Pressure Regulator; Fuel
Pump; Fuel Sending Unit; Fuel Sensors;
Fuel Tank; Throttle Body; **Charcoal
Canister; Fuel Filler Opening Lid
Hinge Spring**

COOLING SYSTEM

Cooling Fan Relay; Cooling Fan Sensor;
Engine Cooling Fan Motor; Engine
Fan; Engine Fan Clutch; Engine Fan
Motor; Engine Fan Shroud; Fan Bracket
Subassembly; Radiator; Seals and
Gaskets; **Coolant Level Sensor/Tank;
Engine Coolant Temperature Switch or
Sensor (at radiator); Equipment Drive
Pulley; Radiator Fan Relay; Thermostat**

AIR CONDITIONING/HEATING

Air Conditioning Lines and Tubes; Air
Conditioning Pressure Switches; Air

Temperature Control Programmer;
Blower Motor; Blower Motor Resistor;
Compressor; Compressor Clutch
Assembly; Compressor Pulley;
Condenser; Condenser Fan and Motor;
Evaporator; Evaporator Temperature
Sensor; Expansion Valve; Heater Control
Valve; Heater Core; Idler Pulley; Pressure
Regulator Assembly; Receiver/Dryer;
Schrader Valve; Seals and Gaskets;
**Cooler Control Switch; Cooler Unit;
Damper Servo; Defroster Control
Cable; Heater Control Head**

BRAKE

Anti-Lock Braking/Traction Control
Actuator Pump and Motor; Brake
Booster; Brake Hoses, Lines and Tubes;
Disc Brake Calipers; Load-Sensing
Proportioning Valve; Master Cylinder;
Parking Brake Cable; Proportioning
Valve; Seals and Gaskets; Wheel
Cylinders; Brake Pedal Subassembly;
Parking Brake Control Handle
Assembly; Parking Brake Lever
Subassembly; Parking Brake
Pedal Subassembly; Rear Brake
Backing Plate

HYBRID

Actuator Assembly Shift Control;
Battery Computer Assembly; Battery
Current Sensor; Circuit Breaker
Sensor; Combination Meter Assembly;
Combination Meter Computer;
Computer Engine Control; Hybrid
Vehicle Battery Blower Assembly; Hybrid
Vehicle Battery Blower Motor Control;
Hybrid Vehicle Battery Thermistor;
Hybrid Vehicle Control Computer;
Hybrid Vehicle Generator Assembly;
Hybrid Vehicle Motor Assembly;
Hybrid Vehicle Transaxle Assembly;
Inverter Assembly with Converter;
Main Switch Assembly; Power Source
Control Computer Assembly; Power
Steering Electronic Control Unit
(ECU) Assembly; Power Steering Gear
Assembly; Shift Lever Position Sensor;
Skid Control Computer Assembly;
Steering Column Assembly; Transmission
Control Module; Transmission Input
Damper Assembly

ELECTRICAL

Alternator; Automatic-Off Headlamp
Sensor Timer and Switches; Automatic
Shoulder Belt Motor and Switches;
Automatic Temperature Control Unit;
Blower Motor; Blower Motor Resistor;
Clutch Starter Interlock Switch;
Convertible Top Motor; Cruise Control
Actuator/Servo; Cruise Control Sensors
and Switches; Cruise Control Vacuum
Motor; Defogger Relay; Distributor;

Engine Cooling Fan Motor; Headlamp
Washer; Ignition Coil; Lamp Failure
Indicator; Sensor; Manually Operated
Switches; Power Antenna Motor and
Cable; Power Door Lock Actuator;
Power Mirror Defogger; Power Mirror
Motor; Power Seat Motors; Power Sliding
Door Motor; Power Window Motor/
Regulator; Retractable Headlamp Motor;
Smart Entry and Start System Switch;
Sensor and ECU; Starter Motor; Starter
Solenoid; Stop Light Switch; Sunroof
Motor; Windshield Washer Pump;
Wiper Motor; Back-up Light Switch;
Battery to Ground Cable; Battery to
Starter Cable; Charge Warning Relay;
Door Control Relay; Engine Coolant
Temperature Gauge and Sending Unit;
Engine Coolant Temperature Receiver
Gauge and Sending Unit; Engine
Tachometer; Fuel Gauge and Sending
Unit; Fuel Receiver Gauge and Sending
Unit; Guide Rail Limit Switch; Headlight
Control Relay; Horn; Horn (for theft
deterrent); Ignition Switch Lock
Cylinder and Key Set; Integration Relay;
License Plate Light Assembly; Lock
Cylinder Set; Main Relay; Oil Pressure
Receiver Gauge and Sending Unit; Rear
Shock Absorber Control Actuator;
Shoulder Belt Drive Motor; Spark Plug
Resistive Cord; Speedometer; Sunroof
Cables; Taillight Control Relay; Turn
Signal Flasher; Unlock Warning Buzzer;
Windshield Wiper Link Assembly; Wiper
Control Relay; Wiring Harnesses

COMPUTERS AND ELECTRONICS

Anti-Lock Braking/Traction Control
Computer and Sensors; Automatic
Shoulder Belt Computer; Body Control
Module; Cruise Control Computer;
Electronic Ignition Unit; Electronically
Controlled Transmission/Transfer Case
Computer and Sensors; Electronically
Modulated Suspension Computer;
Engine Control Computer; Knock
Sensor; Power Mirror ECU; Power Seat
Computer; Progressive Power Steering
Computer; Sunroof Control Computer
and Relay; Tilt/Telescoping Steering
Computer; Trip Computer; Vehicle
Security Computers and Sensor; Wiper
Module; Airbag Sensors; Antenna
Cord; Circuit Opening Relay; Compact
Disc (CD) Player; Driver's Side and
Passenger's Side Airbags; Front Seat
Airbag Assembly; Graphic Equalizer;
Navigation System; Radio Tuner; Side
Impact Airbag; Steering Sensor; Stereo
Component Amplifier; Tape Player;
Traction Control Computer; Variable
Induction System

ADDITIONAL COMPONENTS

Accelerator Pedal and/or Bracket
Subassembly; Accelerator Pedal Rod
Assembly; Back Door Lock Assembly;
Convertible Roof Hook; Door Lock
Cylinder; Front and Rear Door Lock
Assembly; Front Seat Belt; Glove
Compartment Door Lock Cylinder;
Glove Compartment Door Latch
Subassembly; Hood Lock Assembly;
Hood Lock Control Cable Assembly;
Hood Support Assembly; Rear Seat
Belt; Reclining Seat Back Adjuster;
Removable Roof Lock Handle; Seat
Track Assembly; Shoulder Belt Guide
Rail Assembly; Sliding Roof Drive
Cable; Sliding Roof Guide Rail; Tail Gate
Lock Assembly; Tilt Roof Lock Handle
Assembly

ITEMS NOT COVERED

Accessory Drive Belts; Batteries; Body
Panels; Brake Linings, Pads and Shoes,
Rotors and Drums; Bumpers; Carpet;
Chrome; Clutch Friction Disc and
Pressure Plate; Dash Cover and Pad;
Door Trim, Handles, and Fabric; Filters;
Fluids; Glass (including Windshields);
Headliner; Heating Hoses, Lines and
Tubes; Hinges; Hoses; Hybrid Vehicle
Battery Pack; Hybrid Vehicle Battery
Plug Assembly; Hybrid Vehicle Relay
Assembly; Hybrid Vehicle Supply Battery
Assembly; Interior and Exterior Trim
Moldings (including but not limited to:
Ashtrays, Covers, Cup Holders, and
Vents); Lamps (Back-up, Fog Light,
Side Marker, and Turn Signal Light
Assemblies); Light Bulbs; Nuts, Bolts,
Clips, Retainers, and Fasteners; Paint; Rust
and Corrosion Damage; Seat Covers;
Sheet Metals; Shiny Metals; Spark Plugs;
Structural Framework and Welds; Tires;
Vacuum Hoses, Lines and Tubes; Weather
Stripping; Wheels and Rims; Windshield
Wiper Blades (Rubber component)

⁴ Covered components are subject to change.

The only Lexus factory-backed VSA plans available from your Lexus dealer.

This brochure is intended as a sample of vehicle service agreement coverage. Coverage is subject to exclusions and limitations set forth in the vehicle service agreement. The actual coverage, exclusions, and limitations of the agreements may vary both from state to state and according to the program features chosen. In certain states, Toyota Motor Services Company or Toyota Motor Insurance Agency administers vehicle service agreements.

In Florida: Toyota Motor Insurance Company
P.O. Box 9550
Cedar Rapids, IA 52409
Florida License #02871

Lexus Financial Services is a service mark of Toyota Motor Insurance Services, Inc., and its subsidiary, Toyota Motor Insurance Company.



lexusfinancial.com

09-0321 LFS Platinum VSA