

Customizable features

Your vehicle includes a variety of electronic features that can be personalized to suit your preferences. The settings of these features can be changed by using the steering wheel switches, the multimedia system or navigation system or at your Lexus dealer.

It is also possible to customize certain vehicle features yourself using the menu switch and the “ENTER” switch.

Customizing vehicle features

■ Changing by using the menu switch and the “ENTER” switch

When customizing vehicle features, ensure that the vehicle is parked in a safe place with the shift lever in P and the parking brake set.

- 1 Press and hold the menu switch to display customization mode. (→P. 81)
- 2 Press the “ENTER” switch upwards or downwards to select the item to be customized.
Press the “ENTER” switch to confirm.
- 3 Press the “ENTER” switch upwards or downwards to select the desired setting for the item being customized.
Press the “ENTER” switch to confirm.

When customization is completed, press the menu switch to clear the customization screen.

■ Changing by using the multimedia system or navigation system

- 1 Press the “SETUP” button on the multimedia system or navigation system.
- 2 Select “Vehicle” on the “Setup” screen and select “Vehicle Customization”.
Various setting can be changed. Refer to the list of settings that can be changed for details.

Customizable features

Some function settings are changed simultaneously with other functions being customized. Contact your Lexus dealer for further details.

- ① Settings that can be changed using the menu switch and the "ENTER" switch
- ② Settings that can be changed using the multimedia system or navigation system
- ③ Settings that can be changed by your Lexus dealer

Definition of symbols: ○ = Available, - = Not available

■ Multi-information display (→P. 80)

Function	Default setting	Customized setting	①	②	③
Language*	English	French	○	○	○
		Spanish	○	○	○
Units*	miles (MPG US)	km (km/L)	○	-	○
		km (L/100km)	○	-	○
Eco Driving Indicator Light	On	Off	○	-	○

*: The default setting varies according to countries.

■ Door lock (→P. 92, 99, 543)

Function	Default setting	Customized setting	①	②	③
Unlocking using a mechanical key	Driver's door unlocked in one step, all doors unlocked in two steps	All doors unlocked in one step	-	-	○
Speed linked door locking function	Off	On	-	○	○
Shift position linked door locking function	On	Off	-	○	○
Shift position linked door unlocking function	On	Off	-	○	○
Driver's door linked door unlocking function	Off	On	-	○	○

■ Smart access system with push-button start and wireless remote control
 (→P. 92, 99)

Function	Default setting	Customized setting	①	②	③
Operation buzzer volume	Level 7	Off	-	○	○
		Level 1 to 6			
Operation signal (buzzer)	On	Off	-	-	○
Operation signal (emergency flashers)	On	Off	-	○	○
Time elapsed before the automatic door lock function is activated if a door is not opened after being unlocked	60 seconds	Off	-	○	○
		30 seconds			
		120 seconds			
Open door warning buzzer (when locking the vehicle)	On	Off	-	-	○

■ Smart access system with push-button start (→P. 92, 99, 108)

Function	Default setting	Customized setting	①	②	③
Smart door unlocking	Driver's door	All the doors	–	○	○
Smart access system with push-button start	On	Off	–	○	○
Number of consecutive door lock operations	2 times	As many as desired	–	–	○

■ Wireless remote control (→P. 88, 92, 99)

Function	Default setting	Customized setting	①	②	③
Wireless remote control	On	Off	–	–	○
Unlocking operation	Driver's door unlocked in one step, all doors unlocked in two steps	All doors unlocked in one step	–	○	○
Panic function*	On	Off	–	–	○
Glass hatch opening operation	Push and hold (Short)	Push twice	–	–	○
		One short push			
		Push and hold (Long)			
		Off			

*: If equipped

■ Automatic light control system (→P. 192)

Function	Default setting	Customized setting	①	②	③
Time elapsed before the headlights turn off	30 seconds	Off			
		60 seconds	-	○	○
		90 seconds			
Light sensor sensitivity	Standard	-2 to 2	-	○	○
Daytime running light system (except for Canada)	On	Off	-	○	○
Automatic High Beam*	On	Off	-	-	○

*: If equipped

■ Interior lights (→P. 392)

Function	Default setting	Customized setting	①	②	③
Time elapsed before the interior lights turn off	15 seconds	Off			
		7.5 seconds	–	○	○
		30 seconds			
Operation after the engine switch is turned to OFF	On	Off	–	–	○
Operation when the doors are unlocked with the smart access system with push-button start or wireless remote control	On	Off	–	–	○
Operation when you approach the vehicle with the electronic key on your person	On	Off	–	–	○
Shift lever light	On	Off	–	–	○
Footwell lighting	On	Off	–	–	○
Lounge illumination control	On	Off	–	–	○

■ Exterior lights (→P. 392)

Function	Default setting	Customized setting	①	②	③
Time elapsed before the exterior lights turn off	15 seconds	Off			
		7.5 seconds	-	○	○
		30 seconds			
Operation when the doors are unlocked with the smart access system with push-button start or wireless remote control	On	Off	-	-	○
Operation when you approach the vehicle with the electronic key on your person	On	Off	-	-	○
Running board lights	On	Off	-	-	○
Operation when the door is opened	On	Off	-	-	○

■ Meters (→P.77)

Function	Default setting	Customized setting	①	②	③
Sensitivity of the ambient light sensor used for dimming the meter lights etc.	Standard	-2 to 2	-	-	○
Sensitivity of the ambient light sensor used for brightening the meter lights etc.	Standard	-2 to 2	-	-	○

■ Front automatic air conditioning system (→P.376)

Function	Default setting	Customized setting	①	②	③
Switching between outside air and recirculated air mode linked to automatic mode switch operation*	Auto	Manual	-	○	○
A/C automatic mode switch operation	Auto	Manual	-	○	○
Exhaust gas sensor sensitivity	Standard	-3 to 3	-	○	○

*: If equipped

■ Driving position memory (→P.128)

Function	Default setting	Customized setting	①	②	③
Driver's seat movement when exiting the vehicle	Full	Off	-	○	○
		Partial	-	○	○
Selecting the door linking driving position memory with door unlock operation	Driver's door	All doors	-	-	○

■ Seat belt reminder buzzer (→P. 507)

Function	Default setting	Customized setting	①	②	③
Speed-linked seat belt reminder function	On	Off	-	-	○

■ Power windows (→P. 142) and moon roof (→P. 145)

Function	Default setting	Customized setting	①	②	③
Mechanical key linked operation (close)	Off	On	-	-	○
Mechanical key linked operation (open)	Off	On	-	-	○
Wireless remote control linked operation (open)	Off	On	-	-	○
Wireless remote control linked operation signal (buzzer)	On	Off	-	-	○

■ Intuitive parking assist* (→P. 234)

Function	Default setting	Customized setting	①	②	③
Buzzer volume	Level 5	Level 1 to 5	–	○	○
Display setting	All sensors displayed	Display off	–	○	○
Detection distance of the front center sensor	Far	Near	–	○	○
Detection distance of the rear center sensor	Far	Near	–	○	○

*: If equipped

■ In the following situations, customize mode will automatically be turned off.

- A warning message appears after the customize mode screen is displayed.
- The engine switch is turned to OFF.
- The vehicle begins to move while the customize mode screen is displayed.

CAUTION

■ During customization

As the engine needs to be running during customization, ensure that the vehicle is parked in a place with adequate ventilation. In a closed area such as a garage, exhaust gases including harmful carbon monoxide (CO) may collect and enter the vehicle. This may lead to death or a serious health hazard.

NOTICE

■ During customization

To prevent battery discharge, ensure that the engine is running while customizing features.

Items to initialize

The following item must be initialized for normal system operation after such cases as the battery being reconnected, or maintenance being performed on the vehicle:

Item	When to initialize	Reference
Maintenance data (U.S.A. only)	After the maintenance is performed	P. 441