




LIN COMMUNICATION SYSTEM > PARTS LOCATION

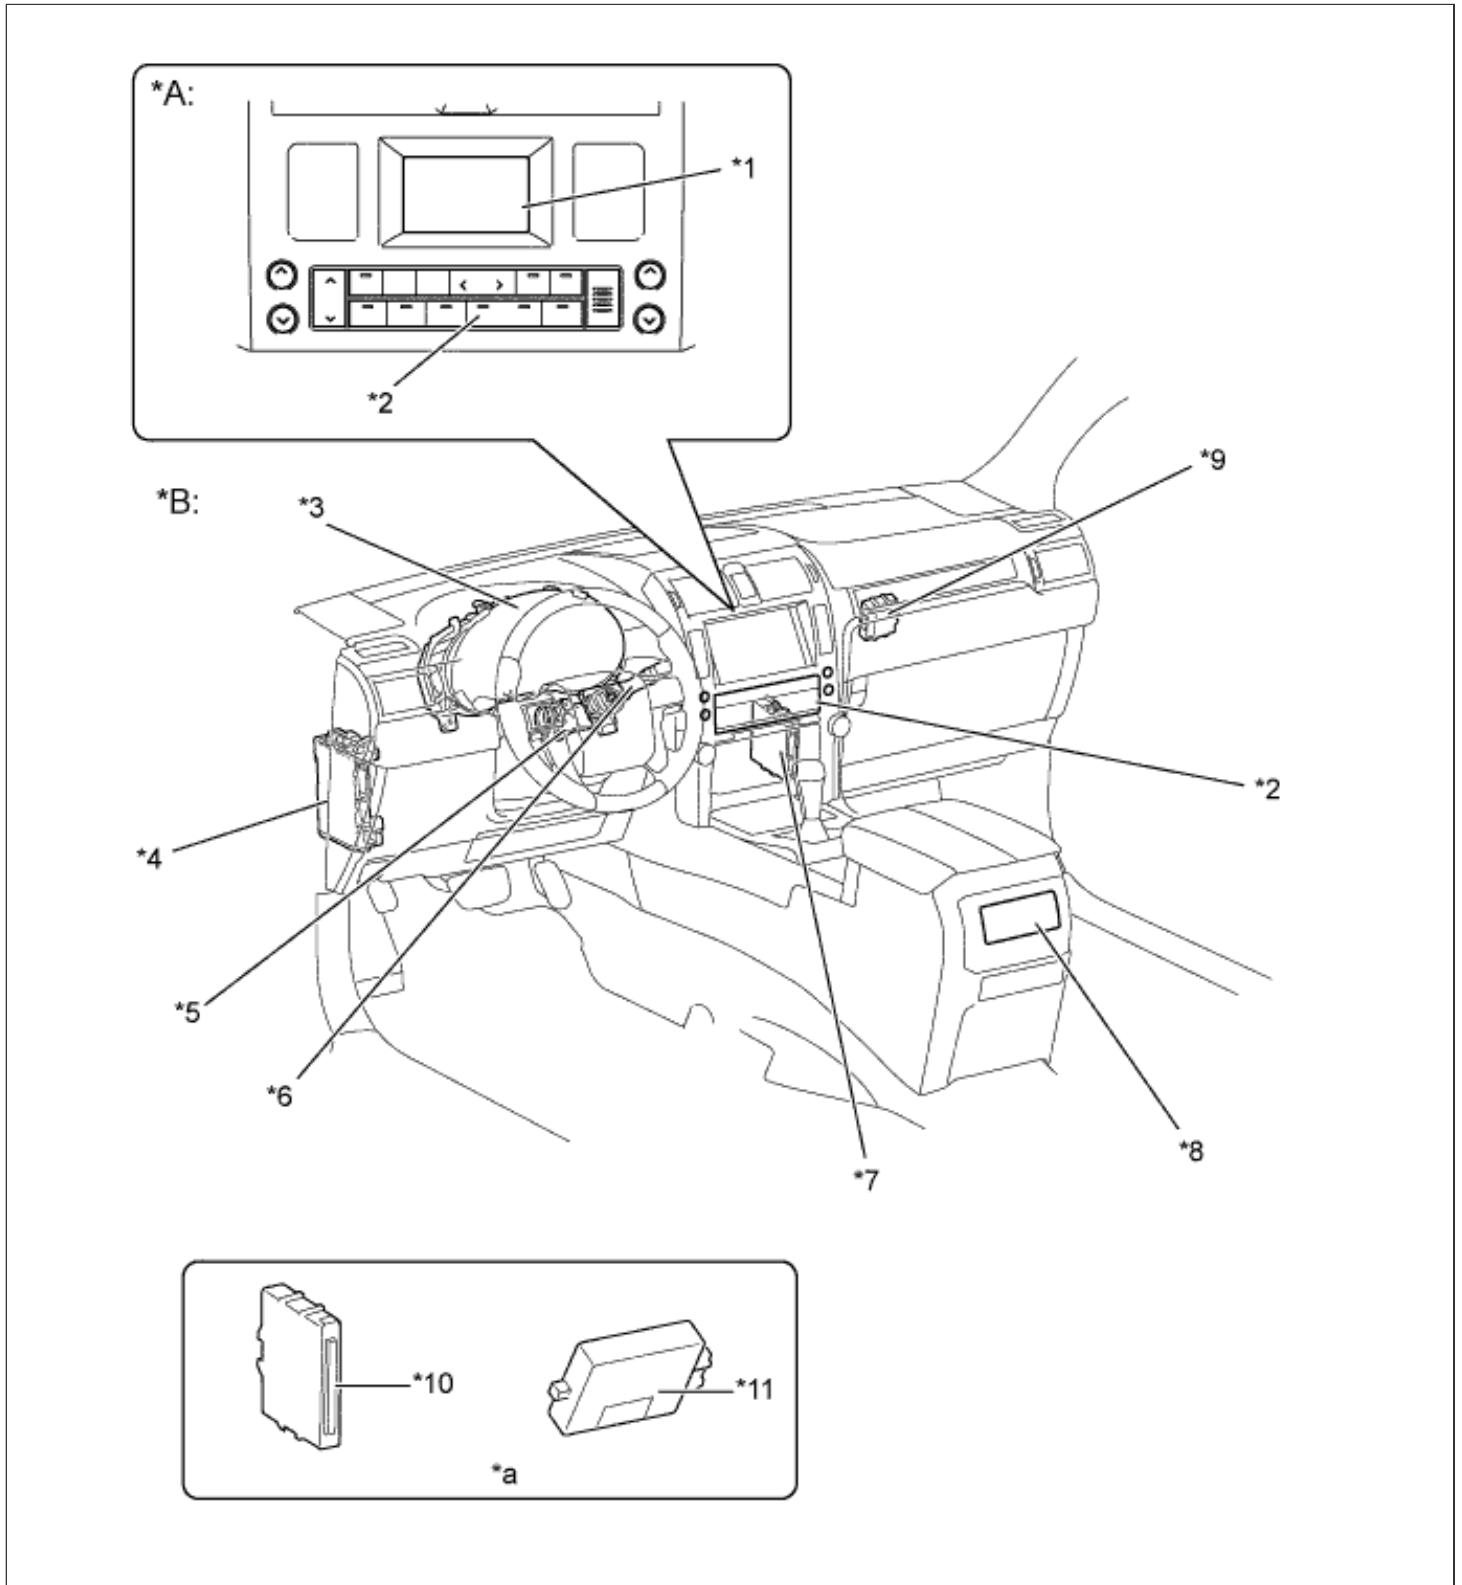

Text in Illustration

*A	Models without Navigation System	*B	Models with Navigation System
*1	Accessory Meter Assembly	*2	Front Air Conditioning Control Assembly

*3	Combination Meter Assembly	*4	Main Body ECU (Driver Side Junction Block Assembly)
*5	Steering Lock ECU	*6	Windshield Wiper Switch Assembly
*7	Air Conditioning Amplifier Assembly	*8	Rear Air Conditioning Control Assembly
*9	Driving Support Switch Control ECU	*10	Certification ECU
*11	ID Code Box (Immobiliser Code ECU)	-	-
*a	Refer to the Service Bulletin for the installation of the part.	-	-

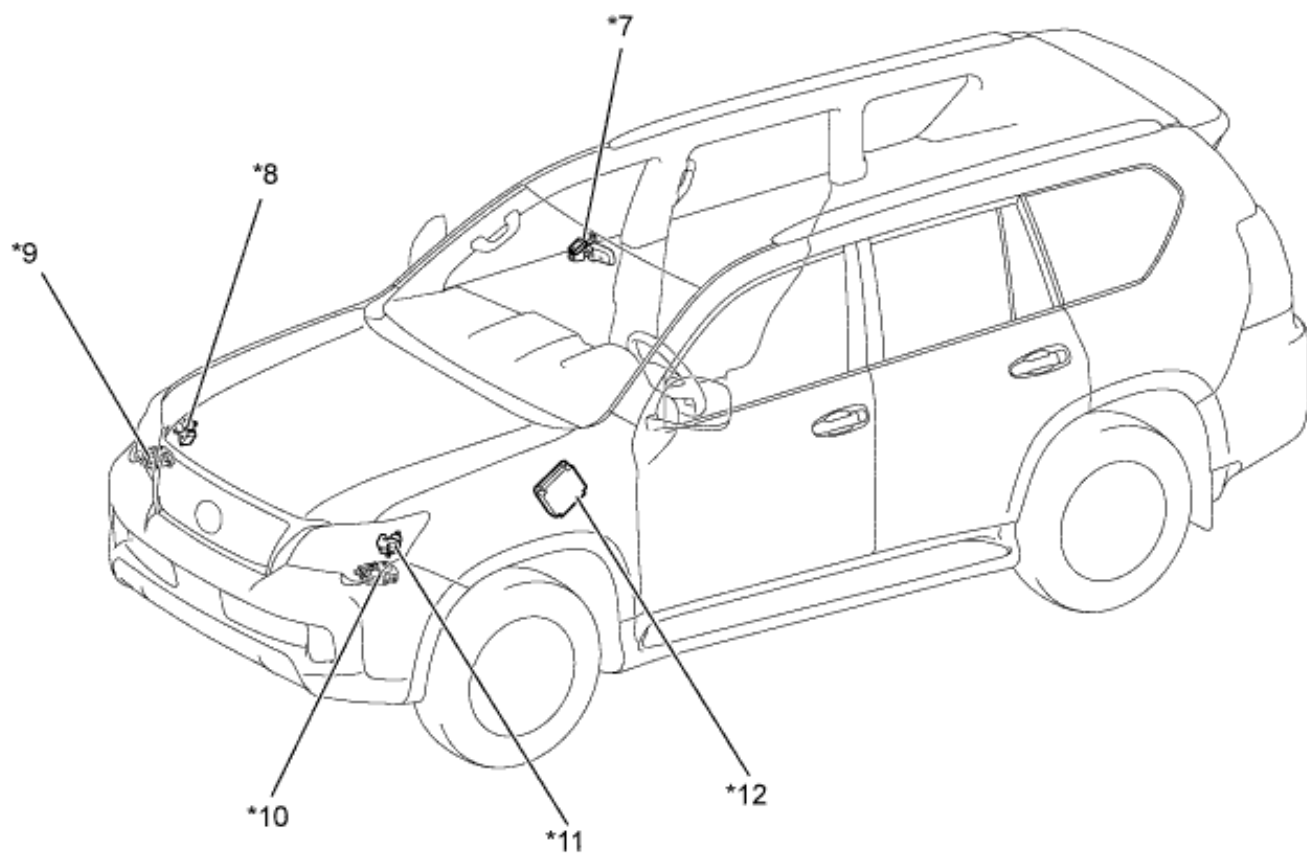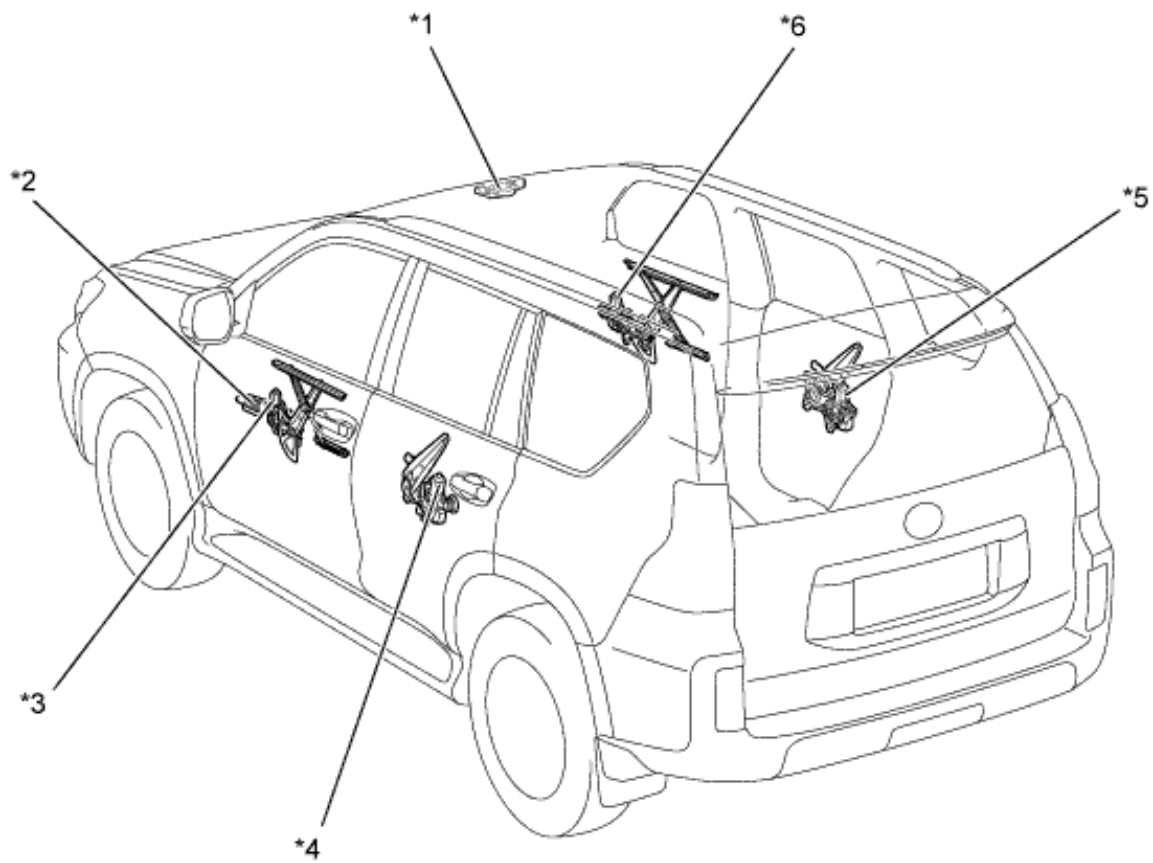

Text in Illustration

*1	Sliding Roof Control ECU	*2	Multiplex Network Master Switch Assembly
*3	Front Power Window Regulator Motor Assembly LH	*4	Rear Power Window Regulator Motor Assembly LH
*5	Rear Power Window Regulator Motor Assembly RH	*6	Front Power Window Regulator Motor Assembly RH
*7	Rain Sensor	*8	Headlight Leveling Motor RH
*9	Headlight Swivel Motor RH	*10	Headlight Swivel Motor LH
*11	Headlight Leveling Motor LH	*12	AFS ECU (Headlight Swivel ECU Assembly)