



AIRBAG SYSTEM > PARTS LOCATION

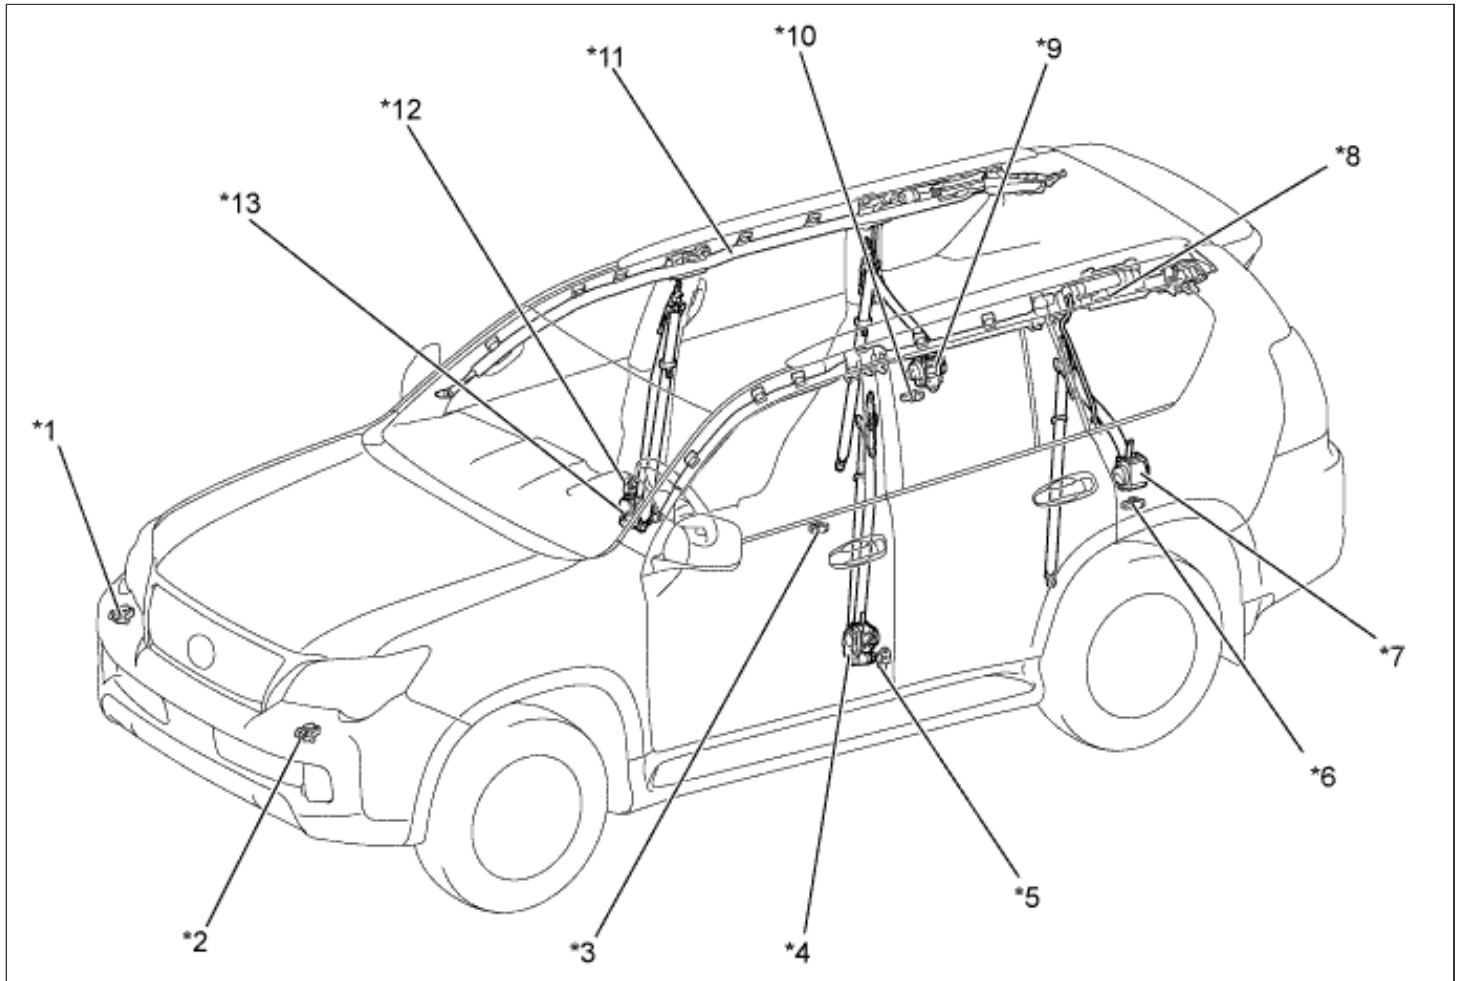


Text in Illustration

*1	Front Airbag Sensor RH	*2	Front Airbag Sensor LH
*3	Rear Floor Side Airbag Sensor	*4	Front Seat Outer Belt Assembly LH
*5	Side Airbag Sensor Assembly LH	*6	Rear Airbag Sensor LH
*7	Rear Seat Outer Belt Assembly LH	*8	Curtain Shield Airbag Assembly LH
*9	Rear Seat Outer Belt Assembly RH	*10	Rear Airbag Sensor RH
*11	Curtain Shield Airbag Assembly RH	*12	Side Airbag Sensor Assembly RH
*13	Front Seat Outer Belt Assembly RH	-	-

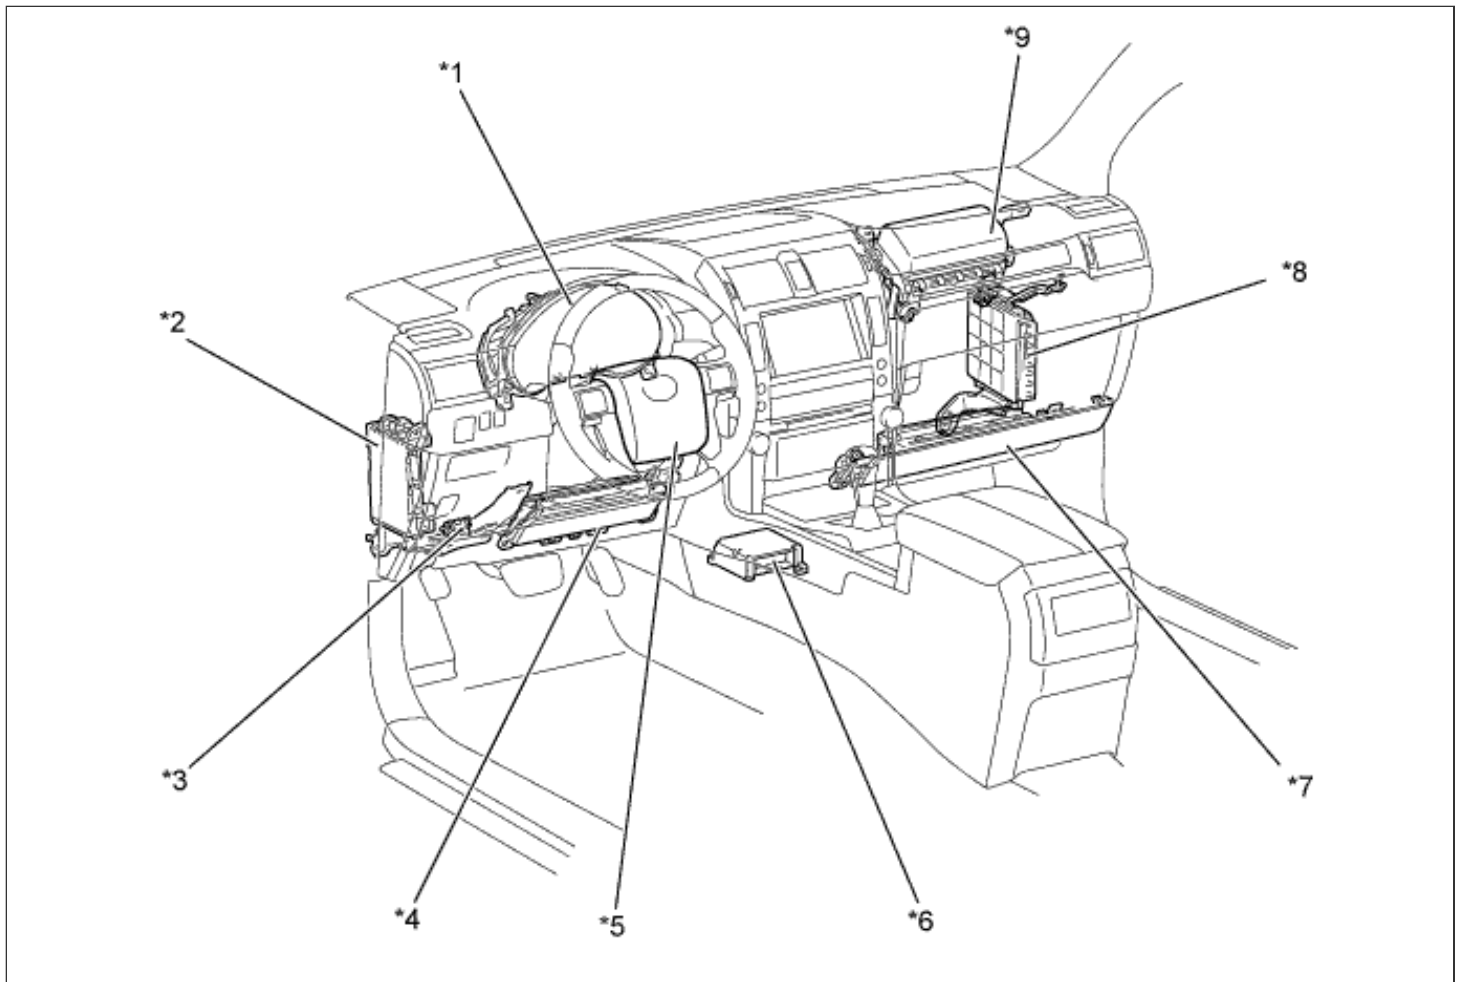

Text in Illustration

*1	Combination Meter Assembly - SRS Warning Light	*2	Main Body ECU (Driver Side Junction Block Assembly)
*3	DLC3	*4	Driver Knee Airbag Assembly
*5	Steering Pad (Driver Side Squib)	*6	Center Airbag Sensor Assembly
*7	Front Passenger Knee Airbag Assembly	*8	ECM
*9	Front Passenger Airbag Assembly	-	-

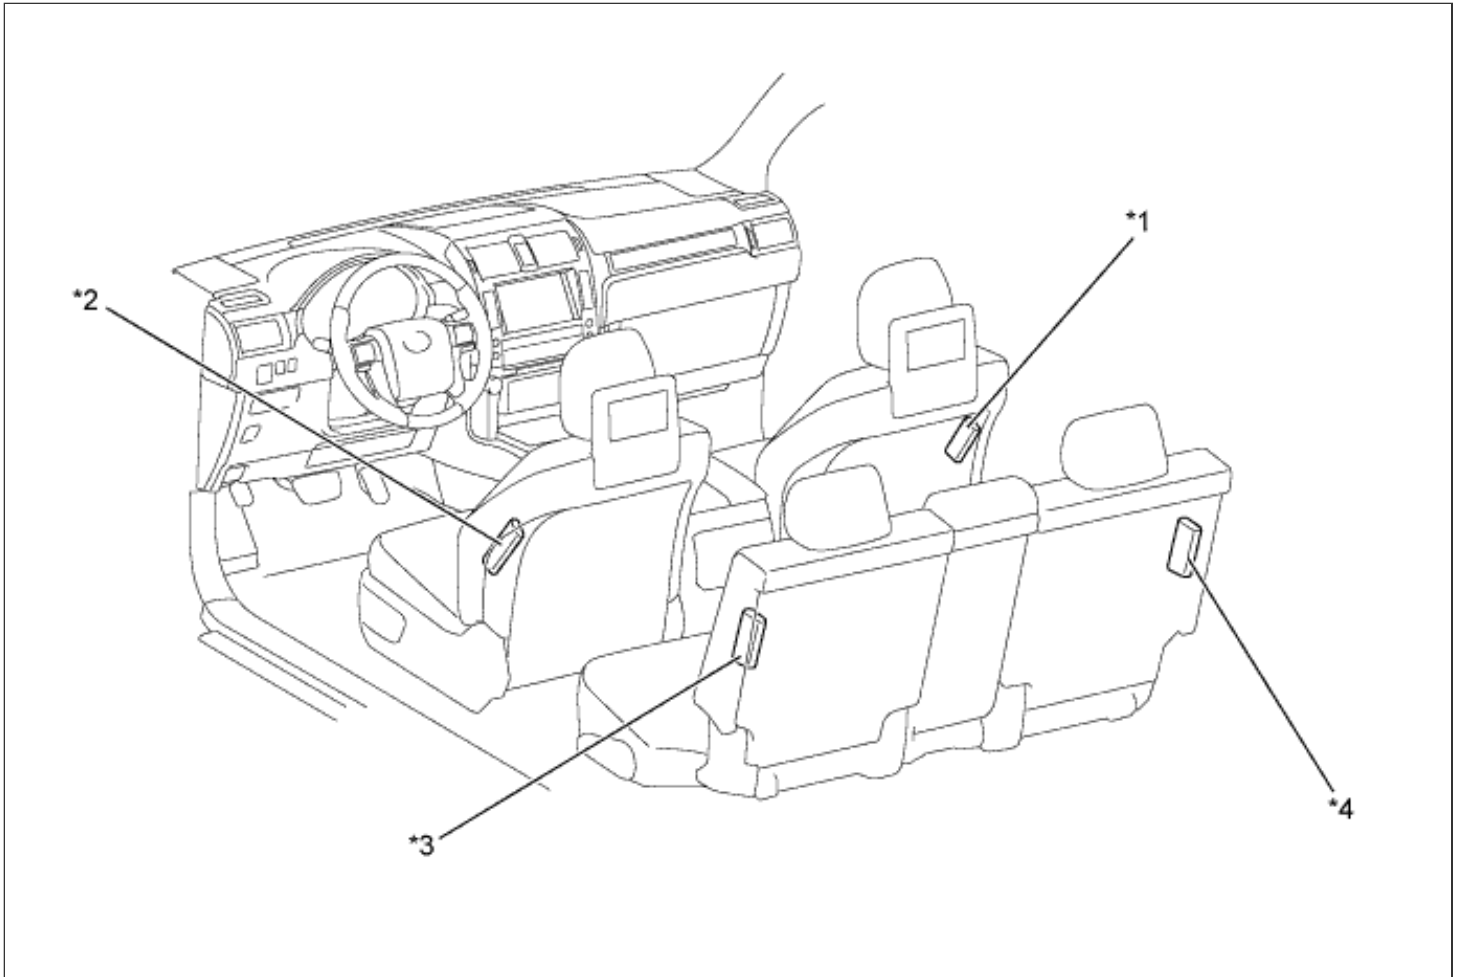

Text in Illustration

*1	Front Seat Side Airbag Assembly RH	*2	Front Seat Side Airbag Assembly LH
*3	Rear Seat Side Airbag Assembly LH	*4	Rear Seat Side Airbag Assembly RH

