

## FUEL LID OPENER MOTOR ASSEMBLY > REMOVAL

for Preparation [Click here](#)

### 1. DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL

#### NOTICE:

- **w/ Navigation System (for HDD):**  
After the engine switch is turned off, the display and navigation module display (HDD navigation system) records various types of memory and settings. As a result, after turning the engine switch off, be sure to wait for the time specified in the following table before disconnecting the cable from the negative (-) battery terminal.

#### Waiting Time before Disconnecting Cable from Negative (-) Battery Terminal :

Condition	Waiting Time
Vehicle enrolled in G-BOOK system	6 minutes
Vehicle not enrolled in G-BOOK system	1 minute

- When disconnecting the cable, some systems need to be initialized after the cable is reconnected ([Click here](#)).

### 2. REMOVE REAR NO. 2 SEAT ASSEMBLY

- Remove the rear No. 2 seat assembly ([Click here](#)).

### 3. REMOVE REAR NO. 1 SEAT ASSEMBLY

- for 60/40 Split Slide Walk-in Seat Type LH Side:  
Remove the rear No. 1 seat assembly ([Click here](#)).
- for 60/40 Split Slide Walk-in Seat Type RH Side:  
Remove the rear No. 1 seat assembly ([Click here](#)).

### 4. REMOVE REAR NO. 1 FLOOR STEP COVER

#### HINT:

Use the same procedure for all rear No. 1 floor step covers.


- Using a screwdriver, detach the 2 claws and remove the rear No. 1 floor step cover.

#### HINT:

Tape the screwdriver tip before use.


#### Text in Illustration

*1	Protective Tape
----	-----------------

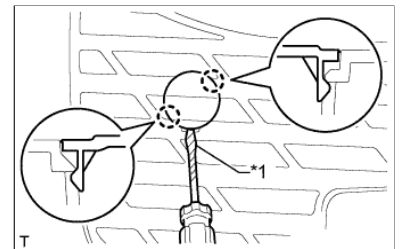

### 5. REMOVE QUARTER SCUFF PLATE LH

- Remove the 2 bolts and quarter scuff plate.

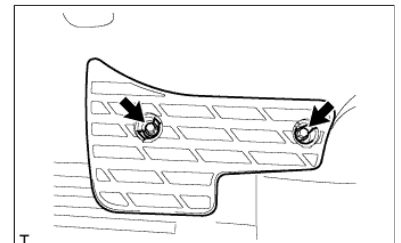

### 6. REMOVE REAR DOOR SCUFF PLATE LH


- a. Put protective tape around the rear door scuff plate.
- b. Using a screwdriver, detach the 3 clips, 6 claws and 2 guides and remove the rear door scuff plate.

**HINT:**

Tape the screwdriver tip before use.


**Text in Illustration**

*1	Protective Tape
----	-----------------

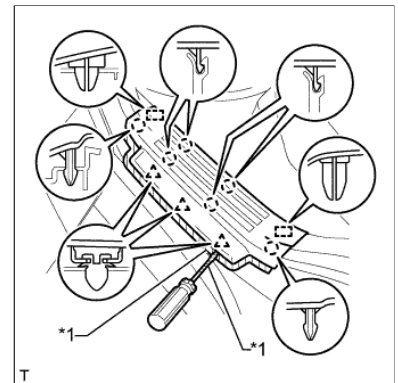

**7. REMOVE REAR DOOR OPENING TRIM WEATHERSTRIP LH**

- a. Remove the rear door opening trim weatherstrip.

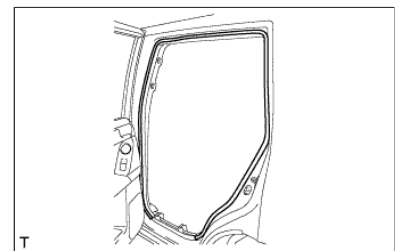

**8. REMOVE TONNEAU COVER ASSEMBLY (w/ Tonneau Cover)**


- a. Remove the tonneau cover.

**9. REMOVE REAR NO. 1 SEAT OUTER LAP BELT ANCHOR COVER**

**HINT:**

Use the same procedure for the other rear No. 1 seat outer lap belt anchor cover.

- a. Detach the 3 claws and remove the rear No. 1 seat outer lap belt anchor cover.

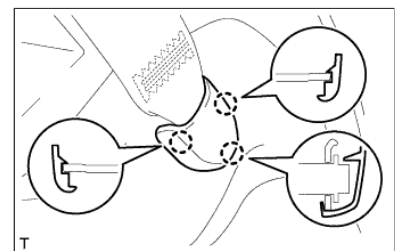


**10. REMOVE NO. 1 LUGGAGE COMPARTMENT TRIM HOOK**

**HINT:**

Use the same procedure for the other No. 1 luggage compartment trim hook.

- a. Remove the luggage compartment trim hook by turning it clockwise.

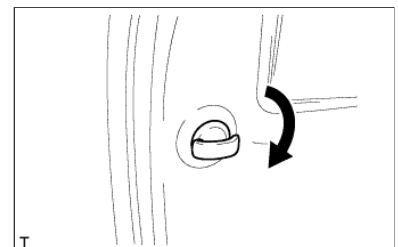

**11. REMOVE NO. 1 TONNEAU COVER HOLDER CAP (w/o Tonneau Cover)**

**HINT:**

Use the same procedure for the other No. 1 tonneau cover holder cap.


- a. Using a screwdriver, detach the 2 claws and remove the No. 1 tonneau cover holder cap.

**HINT:**

Tape the screwdriver tip before use.

**Text in Illustration**

*1	Protective Tape
----	-----------------

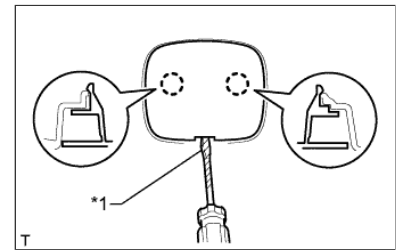

**12. REMOVE FRONT DECK SIDE TRIM COVER (w/ Tonneau Cover)**

**HINT:**

Use the same procedure for the other front deck side trim cover.


- a. Using a screwdriver, detach the 2 claws and remove the front deck side trim cover.

**HINT:**

Tape the screwdriver tip before use.

**Text in Illustration**

*1	Protective Tape
----	-----------------

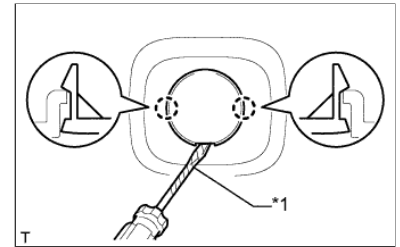

**13. REMOVE ASSIST GRIP PLUG**

**HINT:**

Use the same procedure for all assist grip plugs.


- a. Using a screwdriver, detach the 2 claws and remove the assist grip plug.

**HINT:**

Tape the screwdriver tip before use.

**Text in Illustration**

*1	Protective Tape
----	-----------------

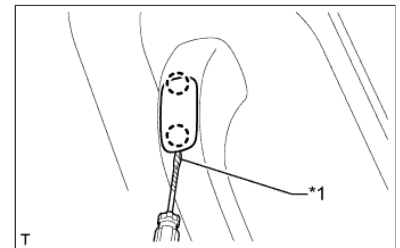


**14. REMOVE ASSIST GRIP SUB-ASSEMBLY**

**HINT:**


Use the same procedure for the other assist grip.

- a. Remove the 2 bolts and assist grip.

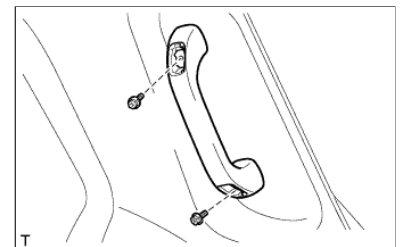


**15. REMOVE DECK TRIM SIDE PANEL ASSEMBLY LH**


- a. Remove the bolt and disconnect the rear No. 1 seat outer belt floor anchor.

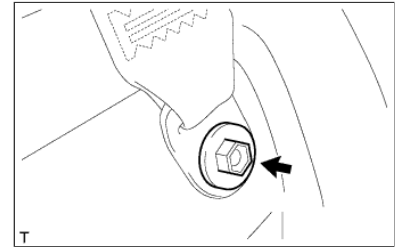

- b. Remove the bolt and disconnect the rear No. 2 seat outer belt floor anchor.
- c. Remove the 2 bolts and 2 screws.
- d. Detach the 3 clips and 8 claws.

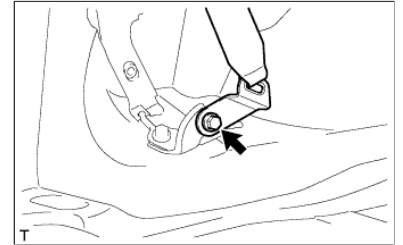


- e. Disconnect each connector and remove the deck trim side panel.

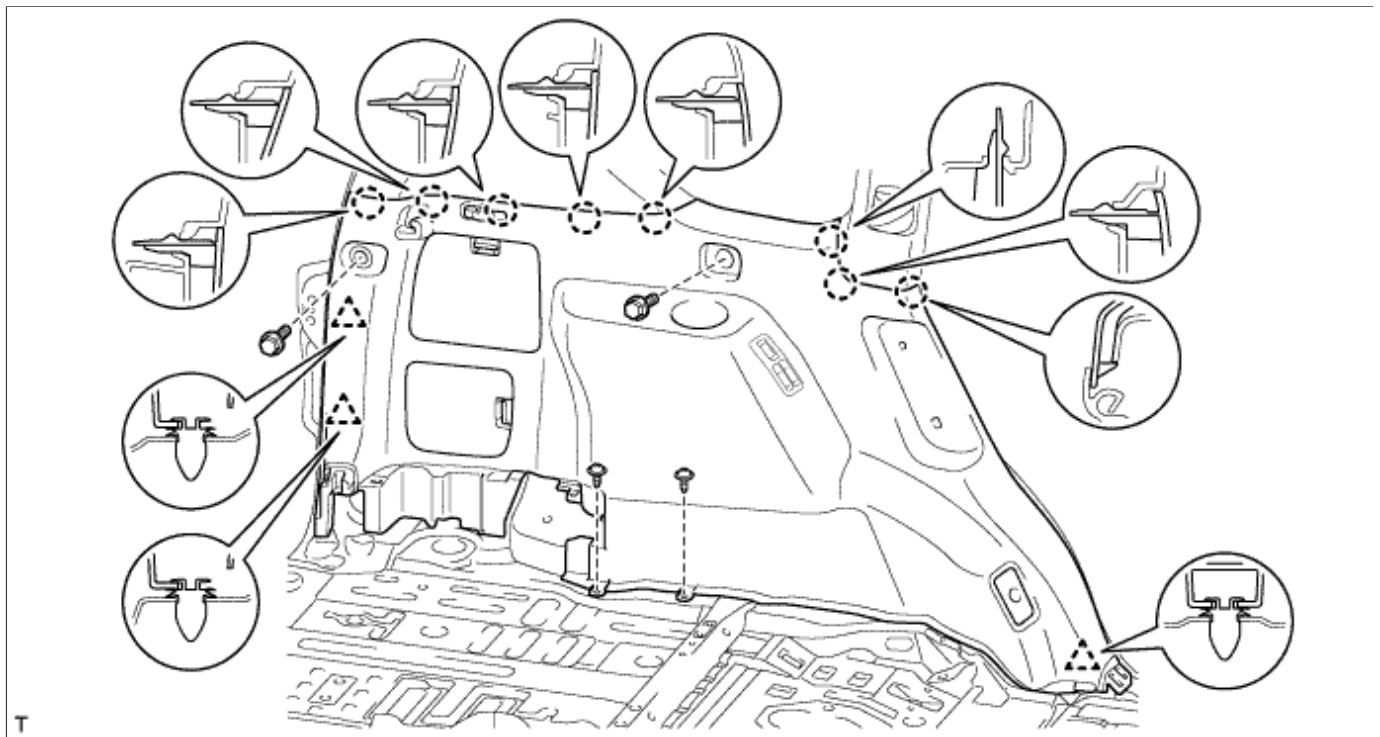


**16. REMOVE STEREO COMPONENT AMPLIFIER ASSEMBLY WITH BRACKET (for 14 Speakers)**

- a. Disconnect the 4 connectors.
- b. Remove the 3 bolts and stereo component amplifier assembly with bracket.

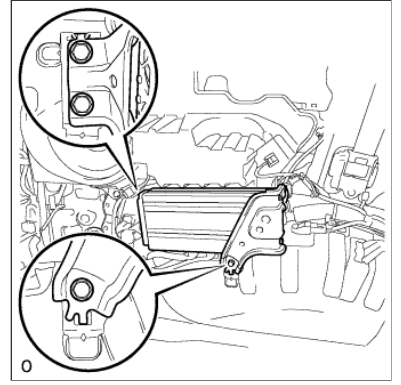


**17. REMOVE NO. 1 SPEAKER WITH BOX ASSEMBLY (for 14 Speakers)**

- a. Disconnect the connector.
- b. Remove the 5 bolts and No. 1 speaker with box.

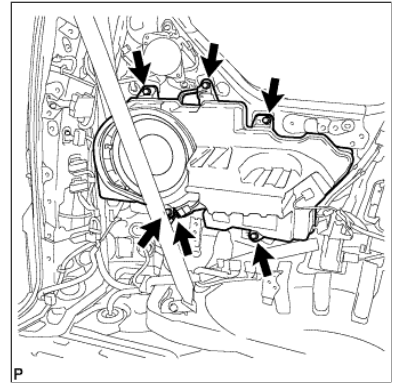


**18. REMOVE FUEL LID LOCK ASSEMBLY**

- a. Turn the cable counterclockwise and remove the cable from the retainer.

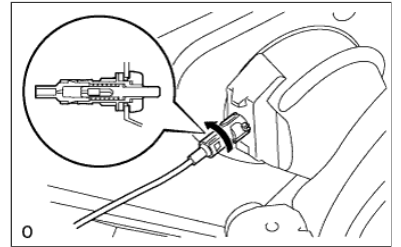

- b. Using a clip remover, detach the harness clamp.
- c. Disconnect the connector.
- d. Remove the nut, clamp and fuel lid lock assembly.

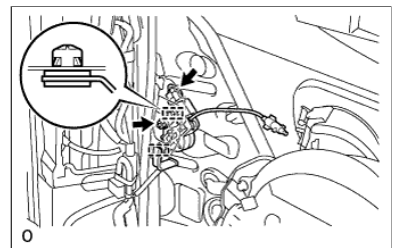

**19. REMOVE FUEL FILLER OPENING LID LOCK RETAINER**

- a. Turn the lock retainer counterclockwise and remove the lock retainer.

