Print

**Preview** 

<u>Exit</u>

MIRROR (EXT) OUTER REAR VIEW MIRROR DISASSEMBLY

# **CAUTION / NOTICE / HINT**

### HINT:


- Use the same procedure for the RH and LH sides.
- The procedure listed below is for the LH side.

# **PROCEDURE**

**■** 1.REMOVE OUTER MIRROR LH

Click hereVehicle Exterior>MIRROR (EXT)>OUTER REAR VIEW MIRROR GLASS>REMOVAL

2.REMOVE OUTER MIRROR COVER LH

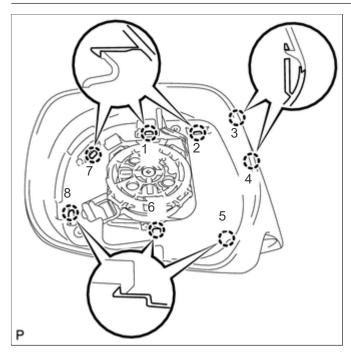


### HINT:

Be sure to detach the claws of the outer mirror cover in the order shown in the illustration.

a.



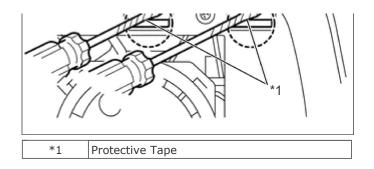

Using 2 screwdrivers, detach the 2 claws.

### HINT:

Tape the screwdriver tip before use.


**b.** Insert a screwdriver into the slot as shown in the illustration and push on the outer mirror body to create a space between the outer mirror body and outer mirror cover.

### **NOTICE:**


Be careful not to break the ribs.

### HINT:

Tape the screwdriver tip before use.

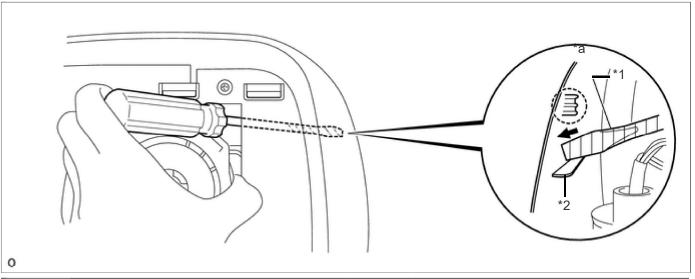

*1	Protective Tape	*2	Rib
*a	Inner Side of Outer Mirror Cover	-	-

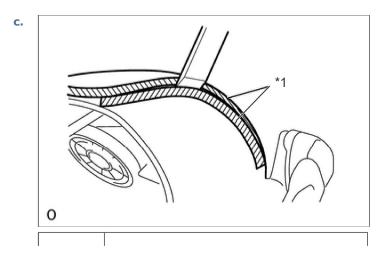

\*1 | Protective Tape


Insert a moulding remover into the space made between the outer mirror body and outer mirror cover.

### **NOTICE:**

Do not insert the moulding remover more than 4 mm (0.157 in.).

### HINT:

Tape the moulding remover before use.

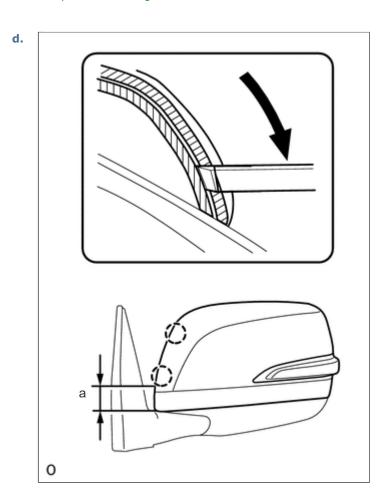

Slide the moulding remover downwards as shown in the illustration to detach the 2 claws.


### **NOTICE:**

 
- Do not insert the moulding remover more than 4 mm (0.157 in.).
- Do not slide the moulding remover past the point approximately 40 mm (1.57 in.) from the bottom edge of the outer mirror cover as the outer mirror body will become damaged.

### Standard:


Area	Specified Condition	
a	40.0 mm (1.57 in.)	

e. Remove the moulding remover.



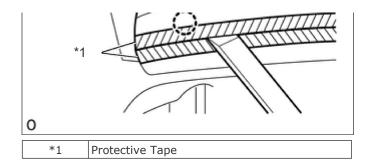


Insert a moulding remover between the outer mirror cover and outer mirror body as shown in the illustration and detach the claw.

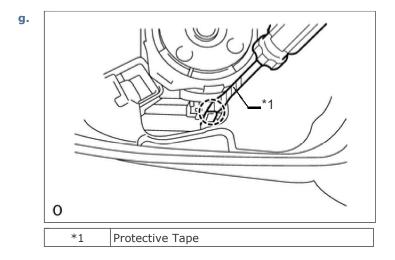

Using a screwdriver, detach the claw.

#### HINT:

Tape the screwdriver tip before use.

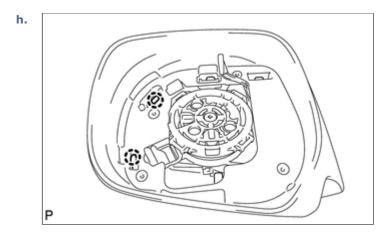

Detach the 2 claws and remove the outer mirror cover.

#### NOTICE:


When removing the cover, be careful not to damage the side turn signal light assembly or cover.

### 3.REMOVE SIDE TURN SIGNAL LIGHT ASSEMBLY LH

Vehicle Exterior>LIGHTING (EXT)>SIDE TURN SIGNAL LIGHT ASSEMBLY>REMOVAL


4.REMOVE SIDE TELEVISION CAMERA ASSEMBLY (w/ Side Monitor System)

a.

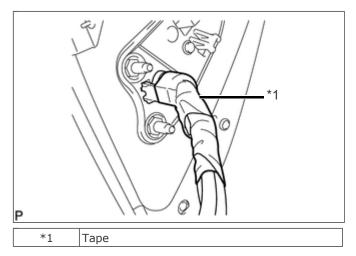

Remove the tape.



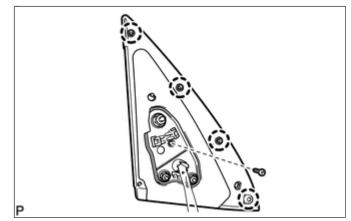


Remove the screw, detach the 4 claws and remove the rubber base.


#### HINT

It is not necessary to completely remove the rubber base. Slightly move the rubber base so that the lower mirror cover can be removed in a later step.

c. Remove the lower mirror cover.

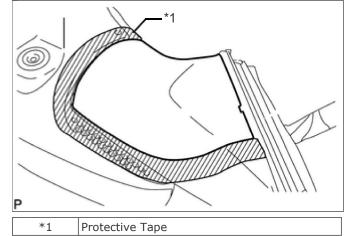


Put protective tape around the lower mirror cover.

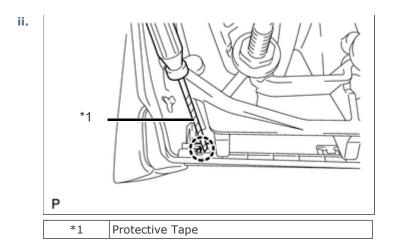

Using a screwdriver, detach the claw.

# HINT:


Tape the screwdriver tip before use.

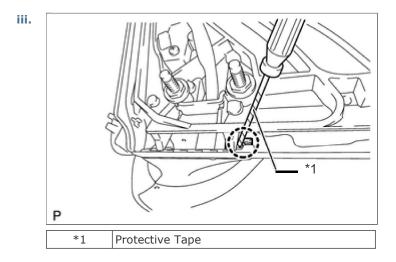


Using a screwdriver, detach the claw.

# HINT:

Tape the screwdriver tip before use.

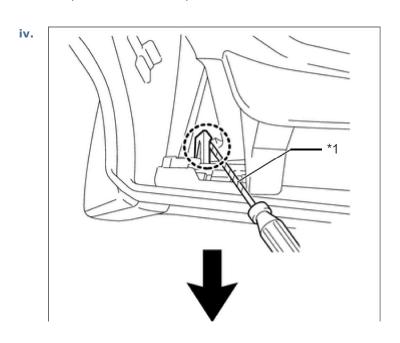


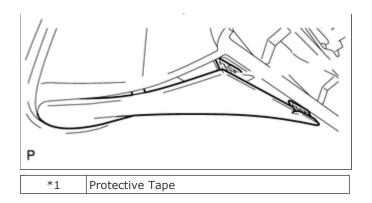

Using a screwdriver, detach the claw to create a space between the lower mirror cover and mirror body as shown in the illustration.

### HINT:


Tape the screwdriver tip before use.

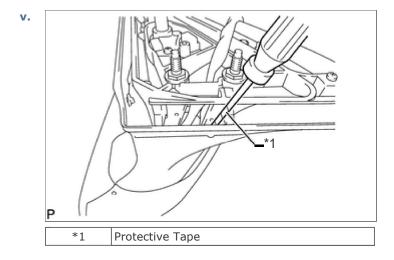


Insert a screwdriver as shown in the illustration.

### HINT:

Tape the screwdriver tip before use.

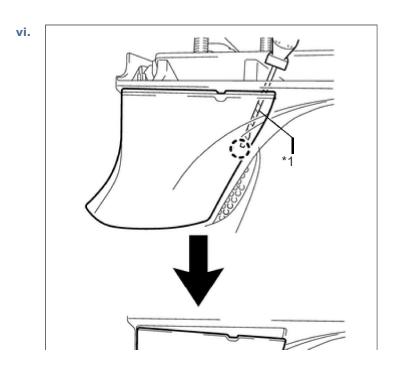


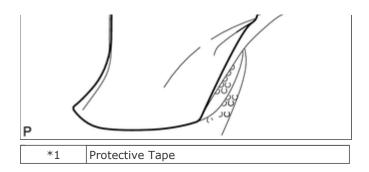

Detach the claw to create a space between the lower mirror cover and mirror body as shown in the illustration. **HINT:** 


Tape the screwdriver tip before use.



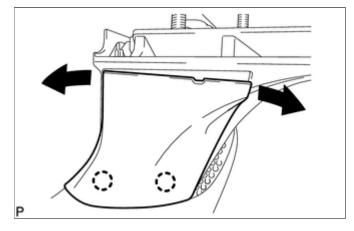


While moving the lower mirror cover back and forth in the directions of the arrows in the illustration, detach the 3 claws and remove the lower mirror cover.




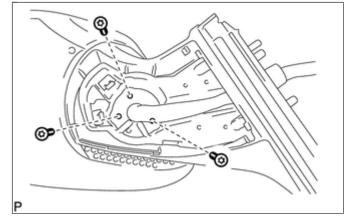


Using a T25 "TORX" socket wrench, remove the 3 screws.



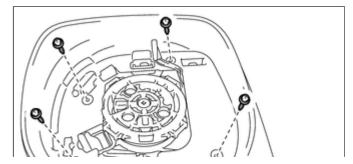

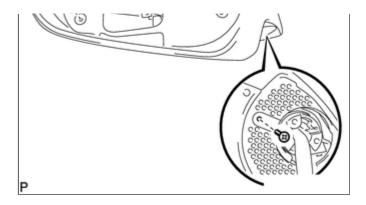

Remove the 5 screws.

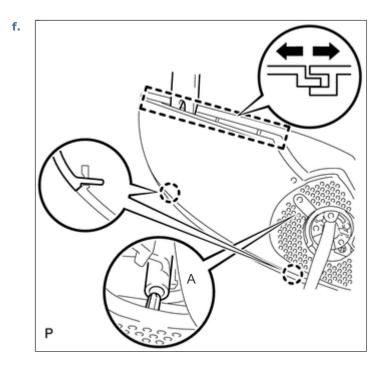


Using a moulding remover, open the mirror body as shown in the illustration.

g. Using a moulding remover, detach the 2 claws.

#### NOTICE:

Be careful not to break the claw shown in the part of the illustration labeled A.

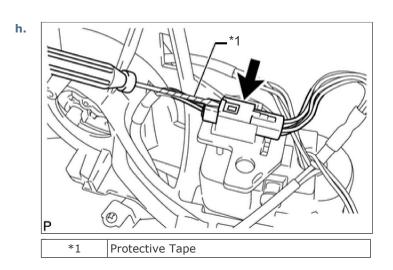


Using a screwdriver, disconnect the connector.

# NOTICE:

When disconnecting the connector, be careful not to damage it.

# HINT:

Tape the screwdriver tip before use.

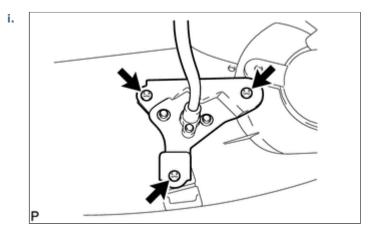

Remove the 3 screws and side television camera.

 $\ensuremath{\text{@}}$  2012 TOYOTA MOTOR CORPORATION. All Rights Reserved.