



Last Modified: 5-25-2010	6.4 K	From: 200907
Model Year: 2010	Model: HS250H	Doc ID: RM000001WPE00JX
Title: SEAT: SEAT HEATER CONTROL: COMPONENTS (2010 HS250H)		

COMPONENTS


ILLUSTRATION

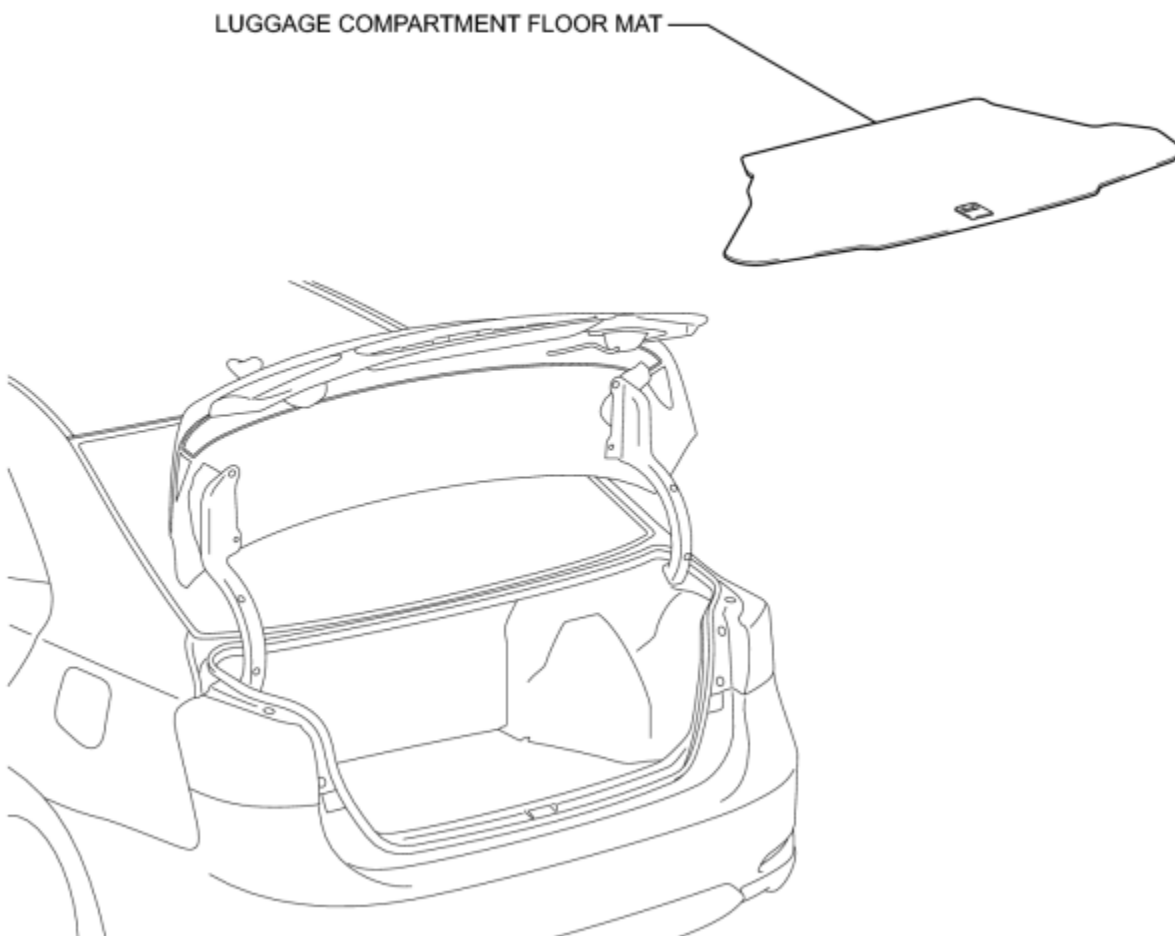

ILLUSTRATION

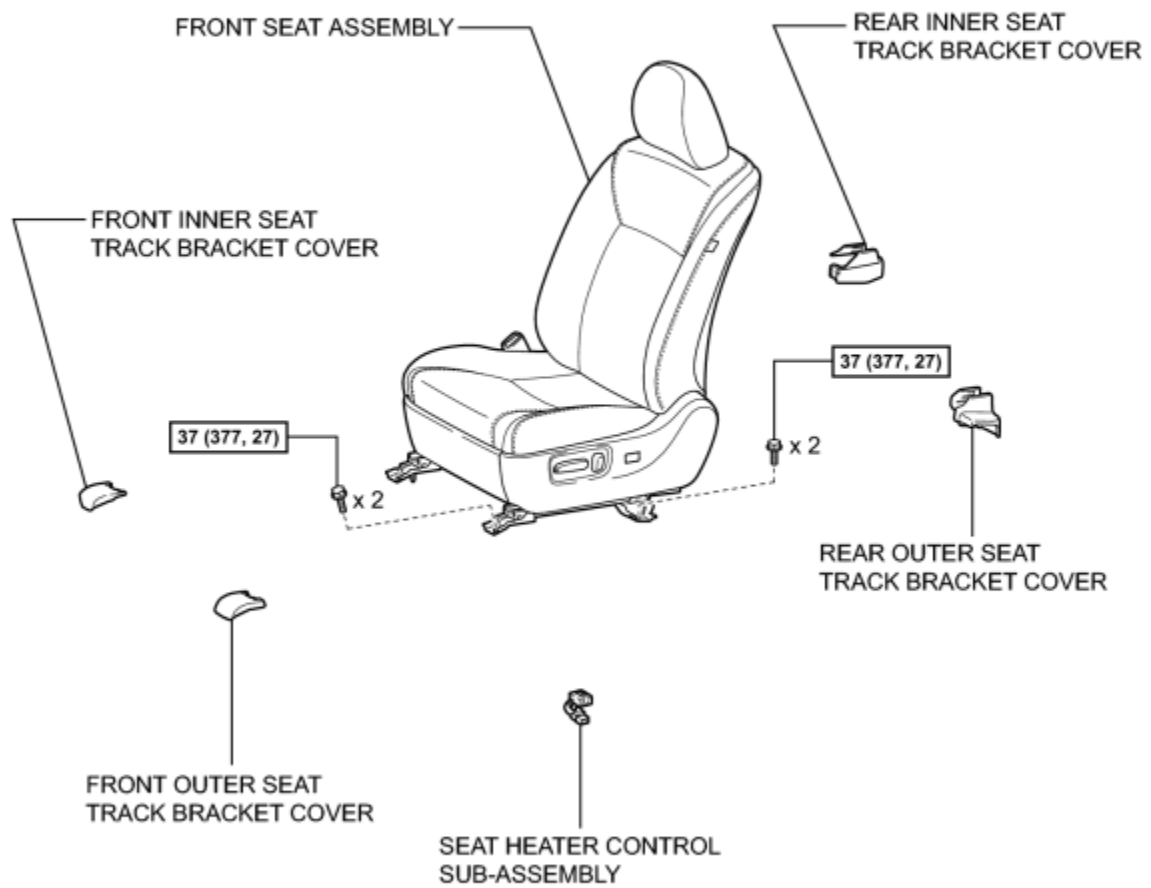


N*m (kgf*cm, ft.*lbf): Specified torque

 

Last Modified: 5-25-2010	6.4 A	From: 200907
Model Year: 2010	Model: HS250H	Doc ID: RM000000VBG02MX
Title: SEAT: SEAT HEATER CONTROL: REMOVAL (2010 HS250H)		

REMOVAL


1. REMOVE LUGGAGE COMPARTMENT FLOOR MAT_ [INFO](#)
2. REMOVE FRONT OUTER SEAT TRACK BRACKET COVER_ [INFO](#)
3. REMOVE FRONT INNER SEAT TRACK BRACKET COVER_ [INFO](#)
4. REMOVE REAR OUTER SEAT TRACK BRACKET COVER_ [INFO](#)
5. REMOVE REAR INNER SEAT TRACK BRACKET COVER_ [INFO](#)
6. REMOVE FRONT SEAT ASSEMBLY_ [INFO](#)
7. REMOVE SEAT HEATER CONTROL SUB-ASSEMBLY

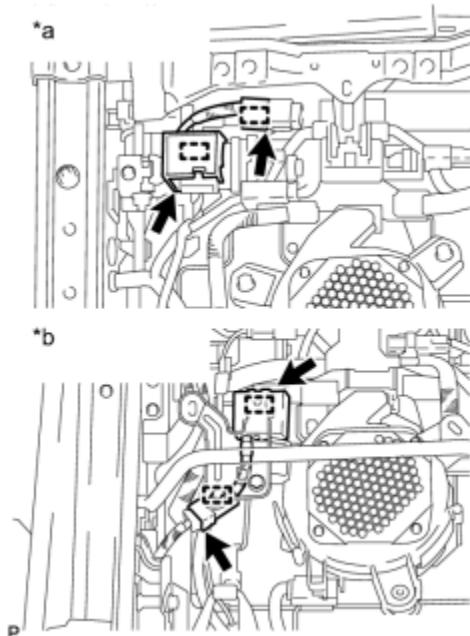

(a) Disconnect the 2 connectors.

Text in Illustration	
*a	for Driver Side
*b	for Passenger Side

 (b) Disengage the 2 clamps and remove the seat heater control sub-assembly.



Last Modified: 5-25-2010	6.4 A	From: 200907
Model Year: 2010	Model: HS250H	Doc ID: RM000000VBE02UX
Title: SEAT: SEAT HEATER CONTROL: INSTALLATION (2010 HS250H)		

INSTALLATION

1. INSTALL SEAT HEATER CONTROL SUB-ASSEMBLY

- (a) Engage the 2 clamps.
- (b) Connect the 2 connectors and install the seat heater control sub-assembly.

2. INSTALL FRONT SEAT ASSEMBLY_ [INFO](#)

3. INSTALL REAR INNER SEAT TRACK BRACKET COVER_ [INFO](#)

4. INSTALL REAR OUTER SEAT TRACK BRACKET COVER_ [INFO](#)

5. INSTALL FRONT INNER SEAT TRACK BRACKET COVER_ [INFO](#)

6. INSTALL FRONT OUTER SEAT TRACK BRACKET COVER_ [INFO](#)

7. INSPECT FRONT SEAT ASSEMBLY_ [INFO](#)

8. INSPECT SRS WARNING LIGHT

[INFO](#)

9. INSTALL LUGGAGE COMPARTMENT FLOOR MAT_ [INFO](#)

