 



Last Modified: 10-5-2010	6.4 K	From: 200907
Model Year: 2010	Model: HS250H	Doc ID: RM0000035K100FX
Title: HEATING / AIR CONDITIONING: AMBIENT TEMPERATURE SENSOR: COMPONENTS (2010 HS250H)		

COMPONENTS


ILLUSTRATION

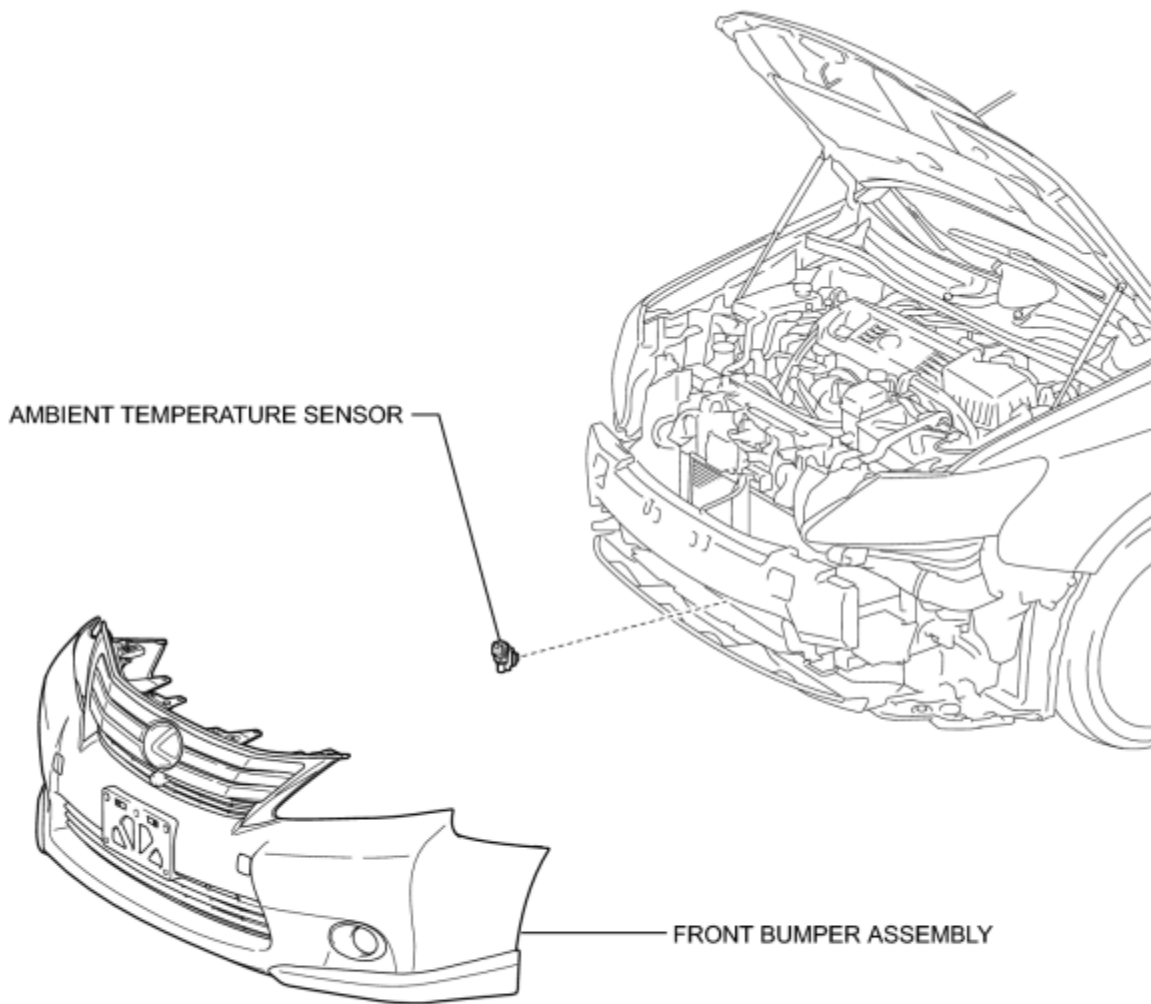

Last Modified: 10-5-2010	6.4 A	From: 200907
Model Year: 2010	Model: HS250H	Doc ID: RM0000035K200KX
Title: HEATING / AIR CONDITIONING: AMBIENT TEMPERATURE SENSOR: REMOVAL (2010 HS250H)		

REMOVAL

1. REMOVE FRONT BUMPER ASSEMBLY

(a) Remove the front bumper assembly .

2. REMOVE AMBIENT TEMPERATURE SENSOR



(a) Disconnect the connector.

(b) Disengage the clamp to remove the ambient temperature sensor.



Last Modified: 10-5-2010	6.4 G	From: 200907
Model Year: 2010	Model: HS250H	Doc ID: RM00000201P02SX
Title: HEATING / AIR CONDITIONING: AMBIENT TEMPERATURE SENSOR: INSPECTION (2010 HS250H)		


INSPECTION

1. INSPECT AMBIENT TEMPERATURE SENSOR


(a) Measure the resistance according to the value(s) in the table below.

Standard Resistance:

*1

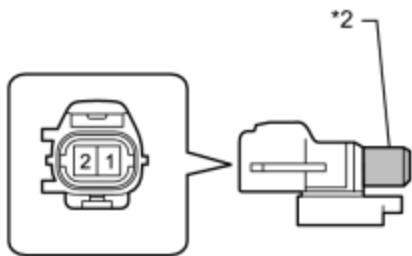

Resistance (kΩ)

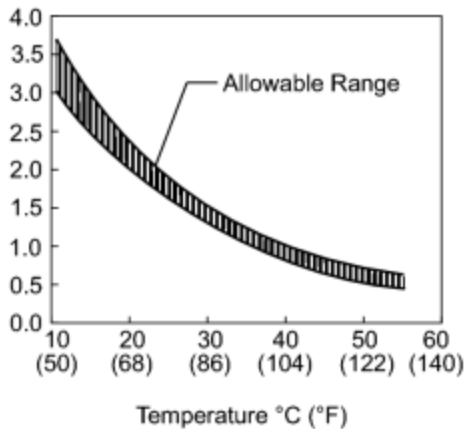

Tester Connection	Condition	Specified Condition
1 - 2	10°C (50°F)	3.00 to 3.73 kΩ
1 - 2	15°C (59°F)	2.45 to 2.88 kΩ
1 - 2	20°C (68°F)	1.95 to 2.30 kΩ
1 - 2	25°C (77°F)	1.60 to 1.80 kΩ
1 - 2	30°C (86°F)	1.28 to 1.47 kΩ
1 - 2	35°C (95°F)	1.00 to 1.22 kΩ
1 - 2	40°C (104°F)	0.80 to 1.00 kΩ
1 - 2	45°C (113°F)	0.65 to 0.85 kΩ
1 - 2	50°C (122°F)	0.50 to 0.70 kΩ
1 - 2	55°C (131°F)	0.44 to 0.60 kΩ
1 - 2	60°C (140°F)	0.36 to 0.50 kΩ

Text in Illustration	Component without harness connected
	(Ambient Temperature Sensor)
*1	
*2	Sensing Portion

NOTICE:

 
- Hold the sensor only by its connector. Touching the sensor may change the resistance value.
- When measuring, the sensor temperature must be

the same as the ambient temperature.

HINT:

As the temperature increases, the resistance decreases (see the graph).

If the resistance is not as specified, replace the ambient temperature sensor.




Last Modified: 10-5-2010	6.4 A	From: 200907
Model Year: 2010	Model: HS250H	Doc ID: RM0000035K000KX
Title: HEATING / AIR CONDITIONING: AMBIENT TEMPERATURE SENSOR: INSTALLATION (2010 HS250H)		

INSTALLATION

1. INSTALL AMBIENT TEMPERATURE SENSOR

- (a) Engage the clamp to install the ambient temperature sensor.
- (b) Connect the connector.

2. INSTALL FRONT BUMPER ASSEMBLY

- (a) Install the air conditioning unit assembly  .

