

## n How to initialize the tire pressure warning system

- STEP 1** Park the vehicle in a safe place and turn the “POWER” switch off. Initialization cannot be performed while the vehicle is moving.
- STEP 2** Adjust the tire inflation pressure to the specified cold tire inflation pressure level. (→P. 555)  
Make sure to adjust the tire pressure to the specified cold tire inflation pressure level. The tire pressure warning system will operate based on this pressure level.
- STEP 3** Turn the “POWER” switch to ON mode.
- STEP 4** Press and hold the tire pressure warning reset switch until the tire pressure warning light flashes slowly 3 times and the message “TIRE PRESSURE RESET PROCEEDING” appears on the multi-information display.



- STEP 5** Wait for a few minutes with the “POWER” switch in ON mode and then turn the “POWER” switch off.

## Registering ID codes

The tire pressure warning valve and transmitter is equipped with a unique ID code. When replacing a tire pressure warning valve and transmitter, it is necessary to register the ID code. Have the ID code registered by your Lexus dealer.