

LEXUS EXTRA CARE GOLD
Vehicle Service Agreement
offered by
LEXUS FINANCIAL SERVICES



Drive with confidence knowing you are protected by Lexus Extra Care.

Lexus Extra Care, designed with you in mind.

Let Lexus Extra Care simplify the unexpected events in life. We have crafted a protection plan that conveniently fits your needs and can help insulate you from surprise services. We know your Lexus is more than just a vehicle and that is why we want to help you protect it. Keep your luxury vehicle protected with a plan built for you.

Benefits and Peace of Mind:

- Protection after your Lexus warranty expires¹
- Repairs using Lexus-approved parts, performed by factory-trained technicians keeping your Lexus at peak performance
- 24/7 roadside assistance
- Deductible Options

Smart. Simple. Exceptional. For more information contact your Lexus dealer.



LEXUS EXTRA CARE – Gold VSA

Gold VSA covers the cost of mechanical breakdown of the parts listed below after your vehicle's warranty expires.²
Your vehicle's Limited Powertrain Warranty covers only those parts listed in BLACK text.

ENGINE

All internally lubricated components and: Balance Shaft; Camshaft; Crankshaft; Crankshaft Pulley; Cylinder Heads; Engine Block; Engine Mounts; Engine Oil Reservoir; Engine Oil Reservoir Pump; Equipment Drive Shaft; Exhaust Manifolds; Flexplate; Flywheel; Idler Pulley; Intake Manifold; Oil Pan; Oil Pressure Switch; Oil Pump; Oil Sending Unit; Piston; Seals and Gaskets; Supercharger; Supercharger Intercooler; Tensioners; Timing Belt; Timing Chain; Timing Cover; Timing Gears; Turbo Intercooler; Turbo Wastegate; Turbocharger; Valve Covers; Water Pump

MANUAL TRANSMISSION

Transfer Case Components (All internally lubricated components) and: Clutch Master Cylinder; Clutch Release Cylinder; Gears and Shafts; Hoses, Lines and Tubes; Seals and Gaskets; Shift Linkage and Cables; Transfer/Transmission Case; Transmission Mounts; Shift Lever Knob

AUTOMATIC TRANSMISSION

Transfer Case Components (All internally lubricated components) and: Hoses, Lines and Tubes; Seals and Gaskets; Shift Linkage and Cables; Solenoids; Torque Converter; Transfer/Transmission Case; Transmission Mounts; Vacuum Modulator; Shift Lever Knob

AXLE ASSEMBLY

(Front, Rear, Four-wheel and All-wheel Drive): All internally lubricated components and: 4x4 Actuators; Axles and Bearings; Center Support Bearing; Constant Velocity Boot Band; Constant Velocity Joints and Boots; Differential Carrier Assembly; Drive Axle Housing; Drive Shaft; Hubs; Locking Hubs; Seals and Gaskets; Thrust Washers; Universal Joints; Viscous Coupling

SUSPENSION

(Front and Rear): Bushings/Bearings; Control Arm Shafts; Electronic Suspension Actuator/Motor and Compressor; Radius Arm; Spindle; Spindle Support; Steering Knuckle; Sway Bar Link; Upper and Lower Ball Joints; Upper and Lower Control Arms

STEERING

Gear Box internal components and: Bushings/Bearings; Center Link; Hoses, Lines and Tubes; Idler Arm; Pitman Arm; Power Steering Pump; Power Steering Pump Pulley; Rack and Pinion; Seals and Gaskets; Steering Column; Steering Column Coupling; Steering Column Shaft; Steering Dampener; Steering Gear Box and Pump Housings; Tie Rod End

FUEL SYSTEM

Air Flow Meter; Carburetor; Diesel Fuel Injection Pump; Electric Fuel Pump; Electronic Fuel Injection System; Fuel Injectors; Fuel Pressure Regulator; Fuel Pump; Fuel Sending Unit; Fuel Sensors; Fuel Tank; Throttle Body

COOLING SYSTEM

Cooling Fan Relay; Cooling Fan Sensor; Engine Cooling Fan Motor; Engine Fan; Engine Fan Clutch; Engine Fan Motor; Engine Fan Shroud; Fan Bracket Subassembly; Radiator; Seals and Gaskets

AIR CONDITIONING/HEATING

Air Conditioning Heater Box Assembly; Air Conditioning Lines and Tubes; Air Conditioning Pressure Switches; Air Temperature Control Programmer; Blower Motor; Blower Motor Resistor; Compressor; Compressor Clutch Assembly; Compressor Pulley; Condenser; Condenser Fan and Motor; Cooler Control Switch; Damper Servo; Defroster Control Cable; Evaporator; Evaporator Temperature Sensor; Expansion Valve; Heater Control Head; Heater Control Valve; Heater Core; Idler Pulley; Pressure Regulator Assembly; Receiver/Dryer; Schrader Valve; Seals and Gaskets

BRAKES

Anti-Lock Braking/Traction Control Actuator, Pump and Motor; Brake Booster; Brake Hoses, Lines and Tubes; Disc Brake Calipers; Load-Sensing Proportioning Valve; Master Cylinder; Parking Brake Cable; Proportioning Valve; Seals and Gaskets; Wheel Cylinders

HYBRID

Actuator Assembly Shift Control; Hybrid Vehicle Generator Assembly; Hybrid Vehicle Motor Assembly; Hybrid Vehicle Transaxle Assembly; Transmission Input Damper Assembly; Battery Computer Assembly; Battery Current Sensor; Circuit Breaker Sensor; Combination Meter Assembly; Combination Meter Computer; Hybrid Vehicle Battery Blower Assembly; Hybrid Vehicle Battery Blower Motor Control; Hybrid Vehicle Battery Thermistor; Hybrid Vehicle Control Computer; Inverter Assembly with Converter; Main Switch Assembly; Power Source Control Computer Assembly; Power Steering Electronic Control Unit Assembly; Power aSteering Gear Assembly; Shift Lever Position Sensor; Skid Control Computer Assembly; Steering Column Assembly; Transmission Control Module

ELECTRICAL

Alternator; Automatic-Off Headlamp Sensor, Timer and Switches; Automatic Shoulder Belt Motor and Switches; Automatic Temperature Control Unit; Blower Motor; Blower Motor Resistor; Clutch Starter Interlock Switch; Convertible Top Motor; Cruise Control Actuator/Servo; Cruise Control Sensors and Switches; Cruise Control Vacuum Motor; Defogger Relay; Distributor; Engine Cooling Fan Motor; Headlamp Washer; Ignition Coil; Lamp Failure Indicator Sensor; Manually Operated Switches; Power Antenna Motor and Cable; Power Door Lock Actuator; Power Mirror Defogger; Power Mirror Motor; Power Seat Motors; Power Sliding Door Motor; Power Window Motor/Regulator; Retractable Headlamp Motor; Smart Entry and Start System Switch, Sensor and Electronic Control Unit; Starter Motor; Starter Solenoid; Stop Light Switch; Sunroof Motor; Windshield Washer Pump; Wiper Motor

COMPUTERS AND ELECTRONICS

Anti-Lock Braking/Traction Control Computer and Sensors; Automatic Shoulder Belt Computer; Body Control Module; Cruise Control Computer; Electronic Ignition Unit; Electronically Controlled Transmission/Transfer Case Computer and Sensors; Electronically Modulated Suspension Computer; Engine Control Computer; Knock Sensor; Power Mirror Electronic Control Unit; Power Seat Computer; Progressive Power Steering Computer; Sunroof Control Computer and Relay; Tilt/Telescoping Steering Computer; Trip Computer; Vehicle Security Computers and Sensor; Wiper Module



24/7 Roadside Assistance

YOUR TRUSTED ROADSIDE COMPANION

Drive confident with 24/7 Roadside Assistance. If the unexpected happens to occur, our VSA will help get you back up and running with:

- Towing to the nearest Lexus dealer
- Battery jump starts, flat tire and lockout assistance
- Delivery of up to 3 gallons of fuel
- Coverage anywhere in the continental US and Canada

Roadside service provided by AAA and its affiliated clubs.

Eligibility

NEW

New Lexus vehicle less than 4 years old and up to 50,000 total vehicle miles.

Travel Protection

BACK IN BUSINESS AND BACK ON THE ROAD

If you're unable to drive your Lexus due to the mechanical breakdown of a covered component, substitute transportation and travel protection benefits will provide reimbursements of:

- Up to \$35 per day for car rentals or other substitute transportation.³ Maximum of 5 days per occurrence.
- Up to \$50 per day for lodging and meals if you're more than 150 miles from home.³ Maximum of 4 days over the life of your Agreement.

USED

Used Lexus vehicle within current plus 9 model years old and up to 125,000 total vehicle miles. See your dealer for eligibility requirements on non-Lexus vehicles. Used Vehicle plans available through your Lexus dealer only at the time of used vehicle purchase or lease.

¹ Time and Mileage coverage periods for New Vehicle Plans are measured from date vehicle was first put into service as a new vehicle and zero miles. Time and Mileage coverage periods for Used Vehicle Plans are measured from the Agreement Application Date and Mileage. Coverage expires upon reaching the maximum time or mileage of the coverage period selected, whichever occurs first. Deductible applies to each eligible repair visit. See your Agreement for complete terms, conditions, and restrictions.

² Covered components are subject to change. See your Agreement for complete details.

³ Valid receipts are required for all reimbursements.

Purchase of a Vehicle Service Agreement is optional, cancellable (see Agreement terms) and in no way required to obtain credit.

This brochure is intended as a sample of Vehicle Service Agreement coverage. Coverage is subject to exclusions and limitations set forth in the Vehicle Service Agreement. The actual coverage, exclusions, and limitations of the Agreements may vary both from state to state and according to the program features chosen. In certain states, Toyota Motor Services Company administers Vehicle Service Agreements.

In Florida: Toyota Motor Insurance Company
P.O. Box 9550
Cedar Rapids, IA 52409
Florida License #02871



lexusfinancial.com

Lexus Financial Services is a service mark used by Toyota Motor Insurance Services, Inc., and its subsidiary, Toyota Motor Insurance Company.

00604 • 13-007 (8/13)

