


AFS (vehicles with discharge headlights)

AFS (Adaptive Front Lighting System) improves visibility at intersections and on curves by automatically adjusting the level of the headlights according to vehicle speed and the degree of the tire angle that are controlled by steering input.

Operates at speeds of 6 mph (10 km/h) or higher.

■ Deactivating AFS

How to switch: →P. 214

The  indicator turns on when the AFS is deactivated.

■ Daytime running light system

To make your vehicle more visible to other drivers, the headlights turn on automatically (at a reduced intensity) whenever the engine is started and the parking brake is released. Daytime running lights are not designed for use at night.


■ Headlight control sensor



The sensor may not function properly if an object is placed on the sensor, or anything that blocks the sensor is affixed to the windshield.

Doing so interferes with the sensor detecting the level of ambient light and may cause the automatic headlight system to malfunction.

■ Automatic light off system

The headlights and tail lights turn off 30 seconds after a door is opened or closed if the engine switch has been switched to ACC or turned OFF while the headlights are turned on. (The light turns off immediately if the  button on the key is pressed after all doors are locked.)

To turn the lights on again, switch to IG-ON mode, or turn the light switch OFF once and then back to the  or  position.