



Vehicle: Electrical Diagrams


Heated Glass Element

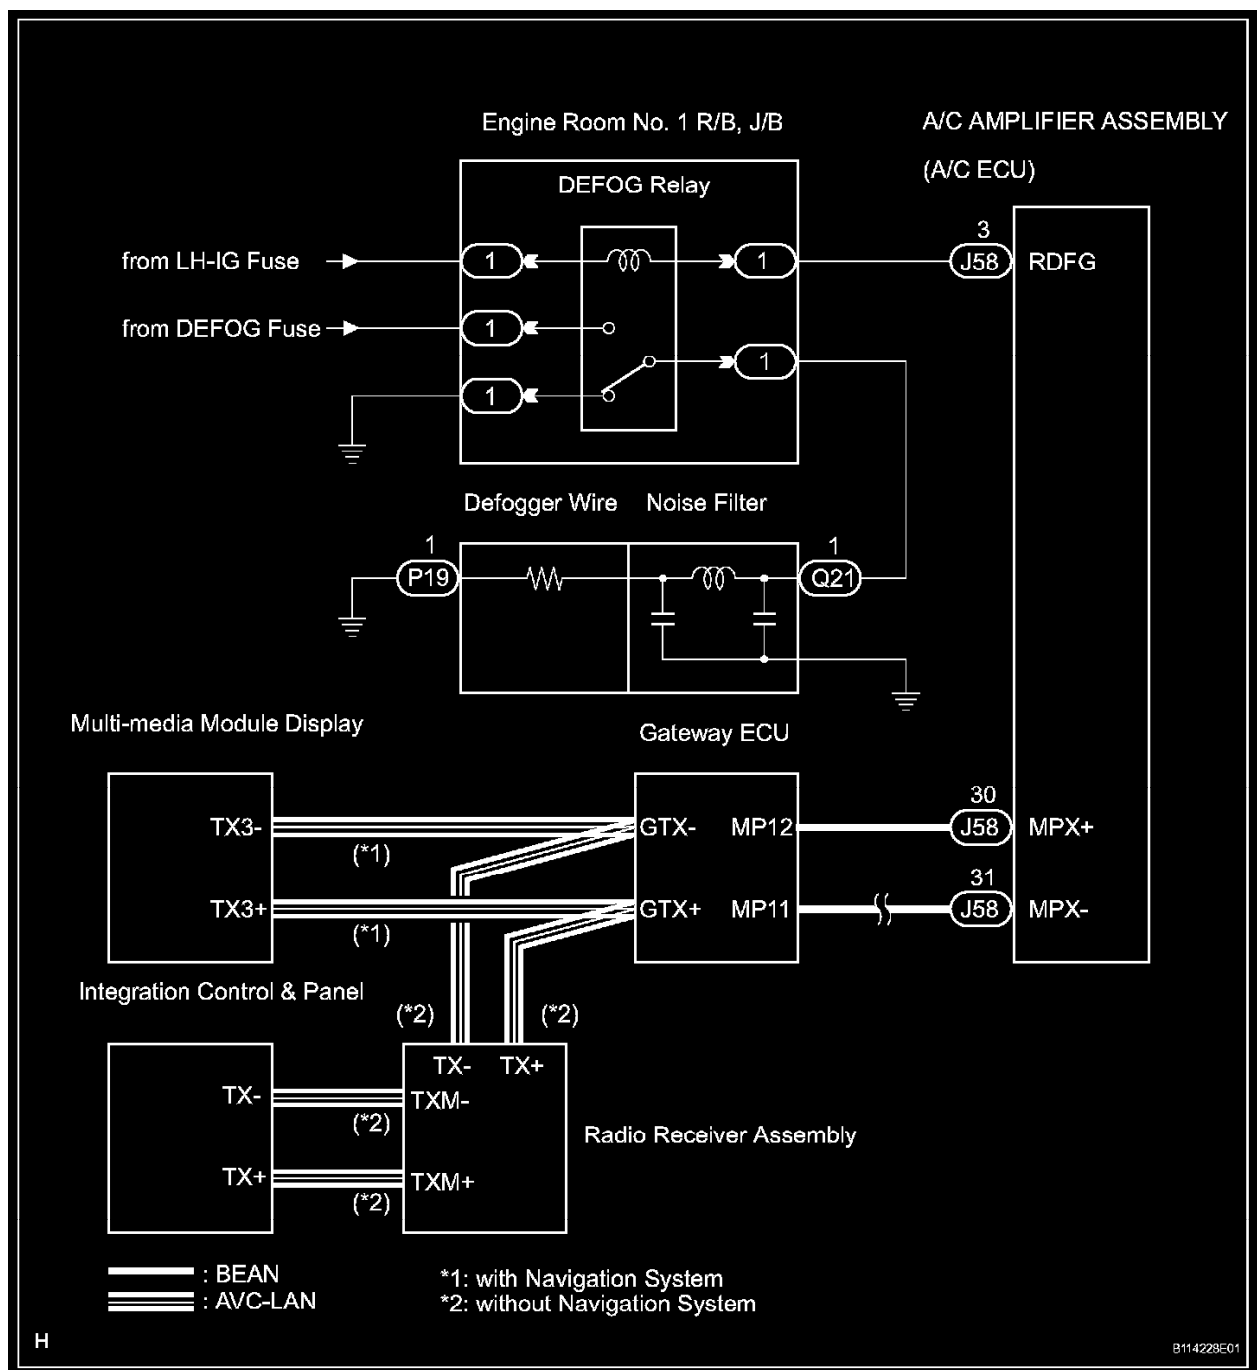

System Diagram

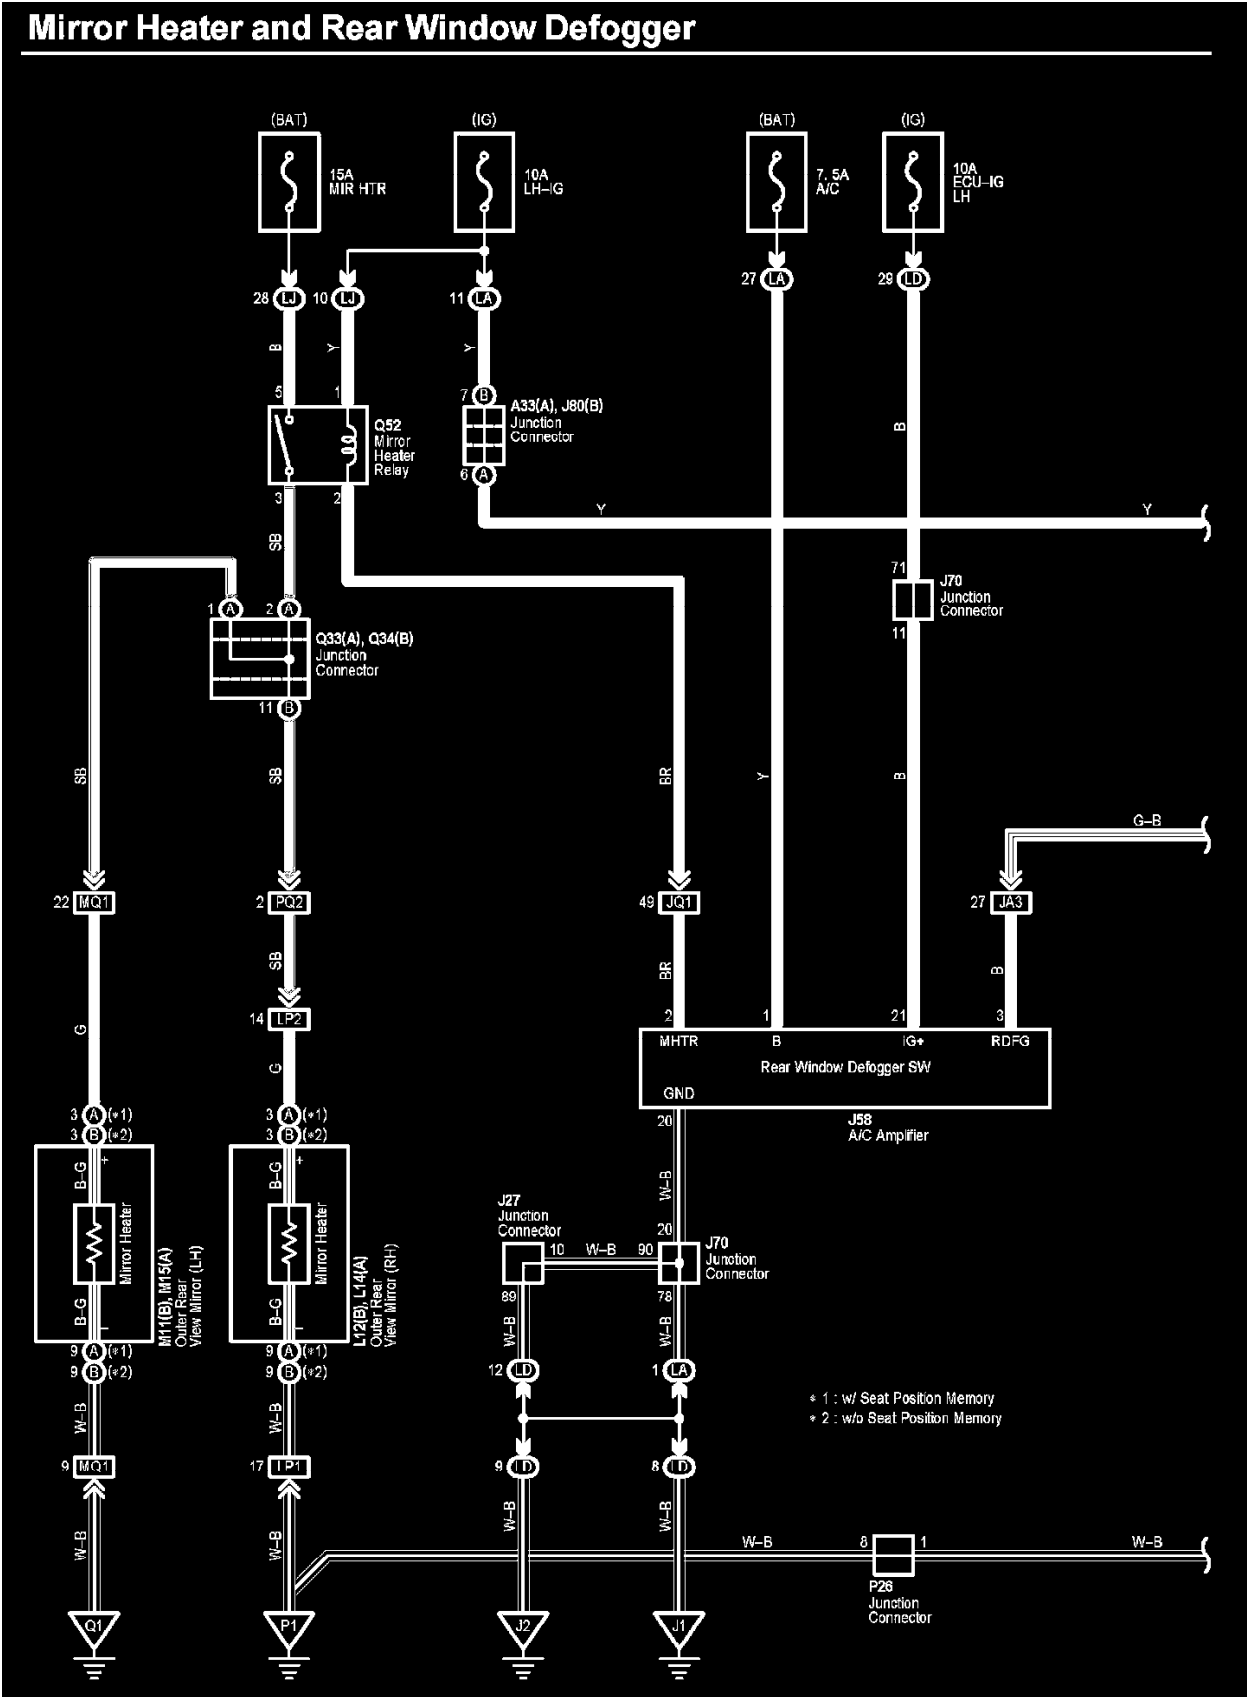

Mirror Heater And Rear Window Defogger (Part 1)

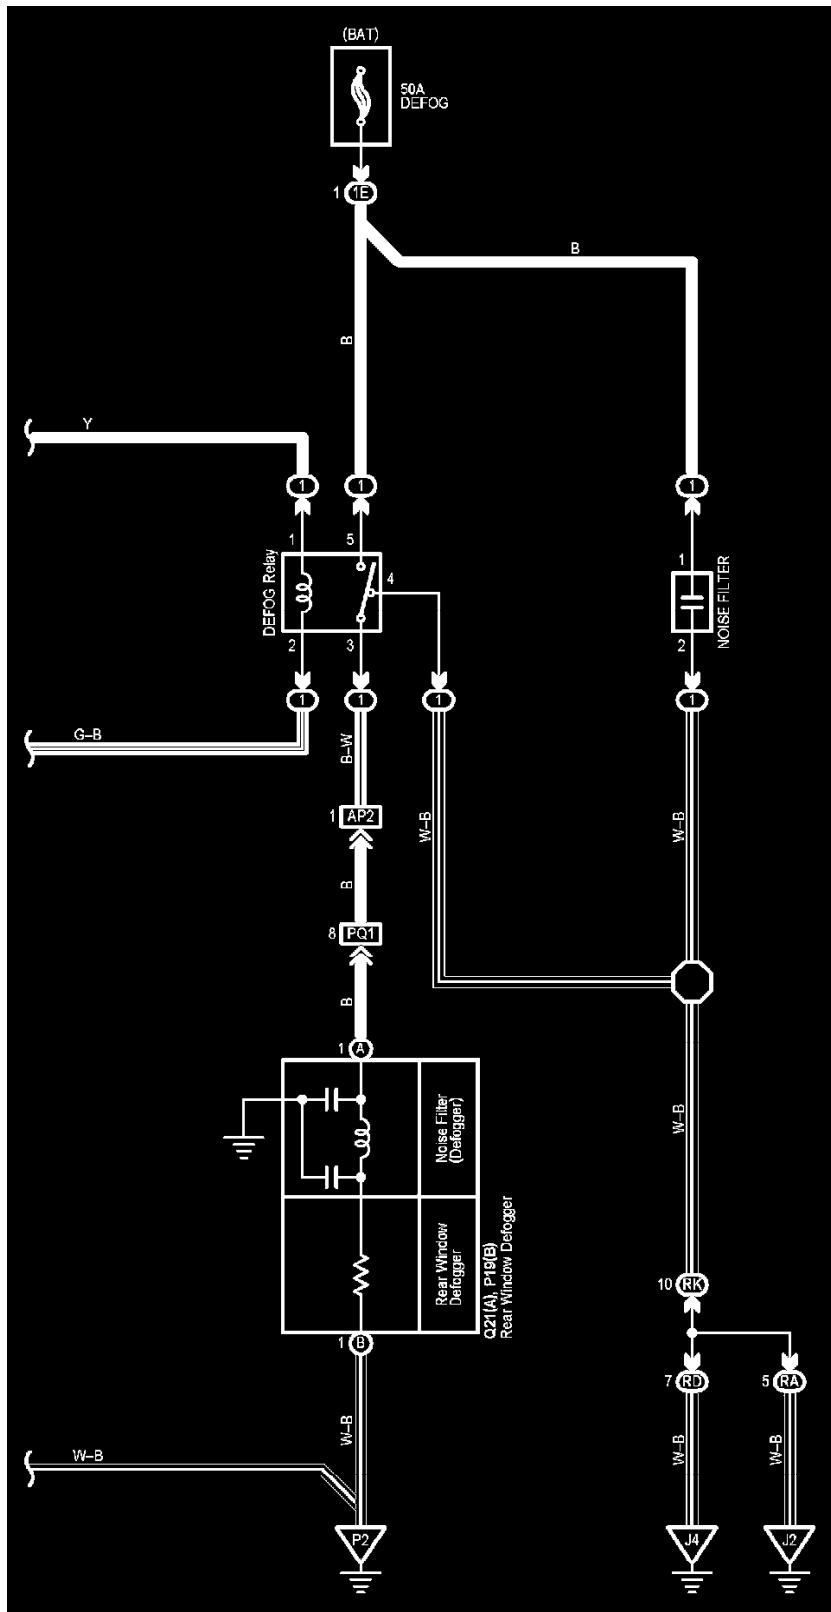

Mirror Heater And Rear Window Defogger (Part 2)

| ○ : Relay Blocks | |
|------------------|---|
| Code | Relay Blocks (Relay Block Location) |
| 1 | Engine Room R/B No.1 (Near the Battery) |

| ⊙ : Junction Block and Wire Harness Connector | |
|---|---|
| Code | Junction Block and Wire Harness (Connector Location) |
| 1E | Engine Room Main Wire and Engine Room J/B No.1 (Near the Battery) |
| LA | Instrument Panel Wire and Cowl Side J/B LH (Cowl Side Left) |
| LD | |
| LJ | Floor No.2 Wire and Cowl Side J/B LH (Cowl Side Left) |
| RA | Instrument Panel Wire and Cowl Side J/B RH (Cowl Side Right) |
| RD | |
| RK | Engine Room Main Wire and Cowl Side J/B RH (Cowl Side Right) |

| □ : Connector Joining Wire Harness and Wire Harness | |
|---|--|
| Code | Joining Wire Harness and Wire Harness (Connector Location) |
| AP2 | Engine Room Main Wire and Floor No.1 Wire (Upper the Cowl Side Panel RH) |
| JA3 | Instrument Panel Wire and Engine Room Main Wire (Left Kick Panel) |
| JQ1 | Instrument Panel Wire and Floor No.2 Wire (Left Kick Panel) |
| LP1 | Front Door RH Wire and Floor No.1 Wire (Cowl Side Panel RH) |
| LP2 | |
| MQ1 | Front Door LH Wire and Floor No.2 Wire (Cowl Side Panel LH) |
| PQ1 | Floor No.1 Wire and Floor No.2 Wire (Right Side of the Rear Floor Partition Panel) |
| PQ2 | |

| ▽ : Ground Points | |
|-------------------|-------------------------------------|
| Code | Ground Points Location |
| J1 | Left Kick Panel |
| J2 | Left Side of the Shift Lever |
| J4 | Right Kick Panel |
| P1 | Right Side of the Front Crossmember |
| P2 | Right Side of the Upper Back Panel |
| Q1 | Left Side of the Front Crossmember |

Diagram Legend

Locations: The locations of components, connectors, ground points, and splices referred to within these diagrams can be found at Vehicle Locations. See: Locations

Connector Views: The connector views for connectors referred to within these diagrams can be found at Vehicle level Connector Views. See: Connector Views