


Activating Bluetooth in your vehicle

1. Press the button to call up the start menu

MENU

2. Select the **i** menu and press the controller
3. Select "Communication settings" and press the controller
4. Select "Bluetooth" and press the controller
5. Select "Settings" and press the controller.
6. Select "Bluetooth communication active" and press the controller to activate the connection.

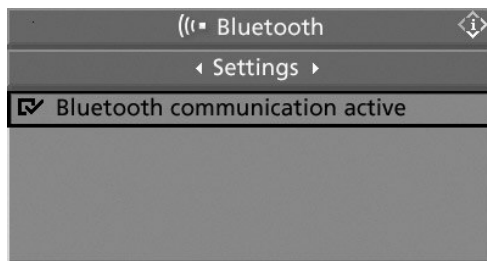

Pairing the mobile phone to the vehicle

The following condition must be met:

- ▷ Ignition position 1 or higher

Depending on the mobile phone in use, it may be necessary to adjust the phone settings.

Set the car in pairing mode

For more information on the operation of the Display see Owner's Handbook for the vehicle.

1. Press the menu button to call up the start menu

MENU



2. Call up **i** menu by pressing the controller
3. Select "Communication settings" and press the controller



4. Select "Bluetooth" and press the controller
5. Select "Phone" and press the controller
Once this screen is displayed the vehicle is in pairable mode.



Set the mobile phone in pairing mode

6. Using your mobile phone, search for Bluetooth devices.

In general for the majority of BT enabled mobile phones, the pairing function can be found in the settings, communication or BT menus of your BT phone.

Depending on the model in use, see the operating instructions for your mobile phone, e.g. under:

- ▷ Locating Bluetooth device
- ▷ Connecting up Bluetooth device
- ▷ Pairing Bluetooth device
- ▷ Look for devices
- ▷ Searching for audio / handsfree accessories


Pairing

In order to pair, you must enter a random passkey both via the mobile phone and via the Display. The passkey can be any number that you choose up to 16 digits long.


7. Depending on your mobile phone, you will be prompted by the mobile phone or by the Display to enter the passkey.

Via the Display:

8. Select "Add device" and press the controller

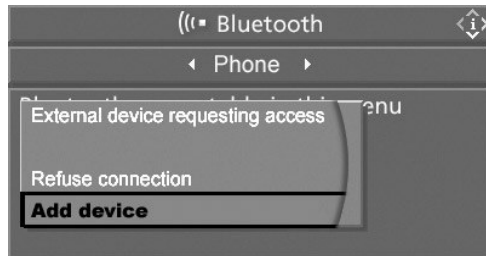

9. Enter passkey.
Depending on the mobile phone, you will have approximately 30 seconds to enter the passkey on the mobile phone and on the Display.
Enter the same passkey in the mobile phone and in the Display.

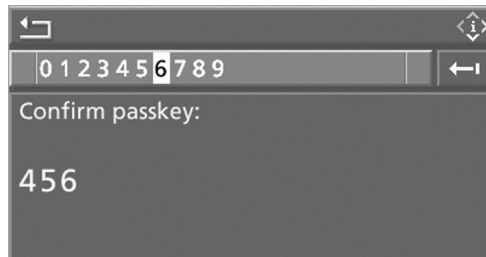

10. Select "Confirm passkey" and press the controller.
After a few seconds, a list displaying your mobile phone as paired appears on the Display, it will display the Friendly Device Name. Once the pairing procedure is complete it is required to exit the pairing menu of your display before the phone can connect.
11. Depending on the mobile phone, the device will ask you to accept connection.

You cannot operate your mobile phone via the vehicle while this list is being displayed.



The next time you use the mobile phone inside the car, provided the ignition key is on, the phone will be connected to the vehicle.¹

As soon as a mobile phone is identified by the vehicle, depending on your mobile phone the phone book entries stored on the SIM card and/or in your mobile phone will be transferred to your vehicle. Transferring this data may take several minutes.

Up to four mobile phones can be paired in succession. If you wish to pair additional phones, first please delete unused phones from the list.

To interrupt pairing of the mobile phone in the vehicle: Select "Refuse connection" and press the controller.

¹ Depending on the position of the phone within the device list, it may take some time until the mobile phone is connected to the vehicle. To reduce this time, please delete all devices from the device list, except of the device that you want to use.